


# Express Banking Kiosk cabling

## PC Core Cable Installation

PC Core – the Back Panel will have the following connected to it:

1. Power (plugs into internal PSU)
2. Display Port from Touch Screen Mini HDMI
3. Unused (can be used as backup Display port if primary fails)
4. Unused (Spare USB-C)
5. Ethernet Connection
6. USB from Printer
7. Unused (Spare USB)
8. Unused (Spare USB)

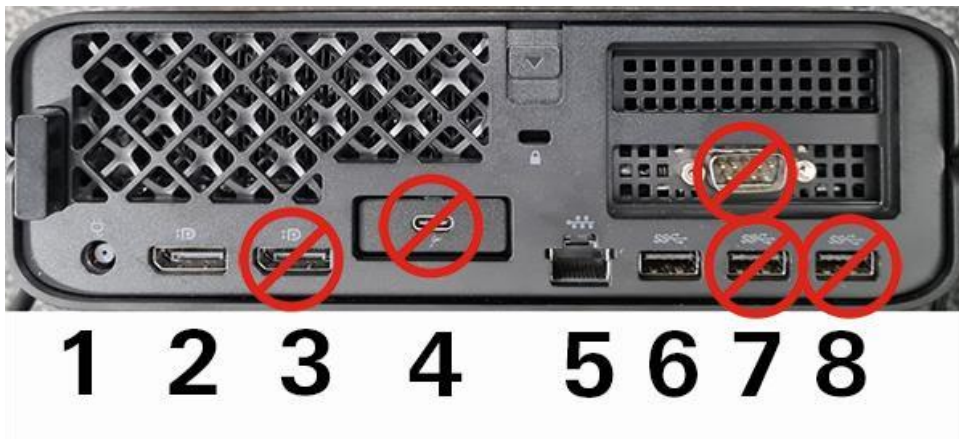

PC Core – the Top Panel will have the following connected to it:


1. USB from PED
2. USB-C from Touch Screen
3. USB-C from Headphone Jack



## Cabling and Installation into the Cabinet

The cabling from the Touch Screen should be installed into the cabling channel at the back of the cabinet all the way to the bottom and exit through the gap on the left-hand side of the cabinet.

Excessive cable should be stored at the bottom rear of the cabinet behind the wooden plinth. Ensure all the cables to the PC are behind the plinth and below the top of it, so when the printer shelf is moved back and forth it doesn't catch any of the cables.

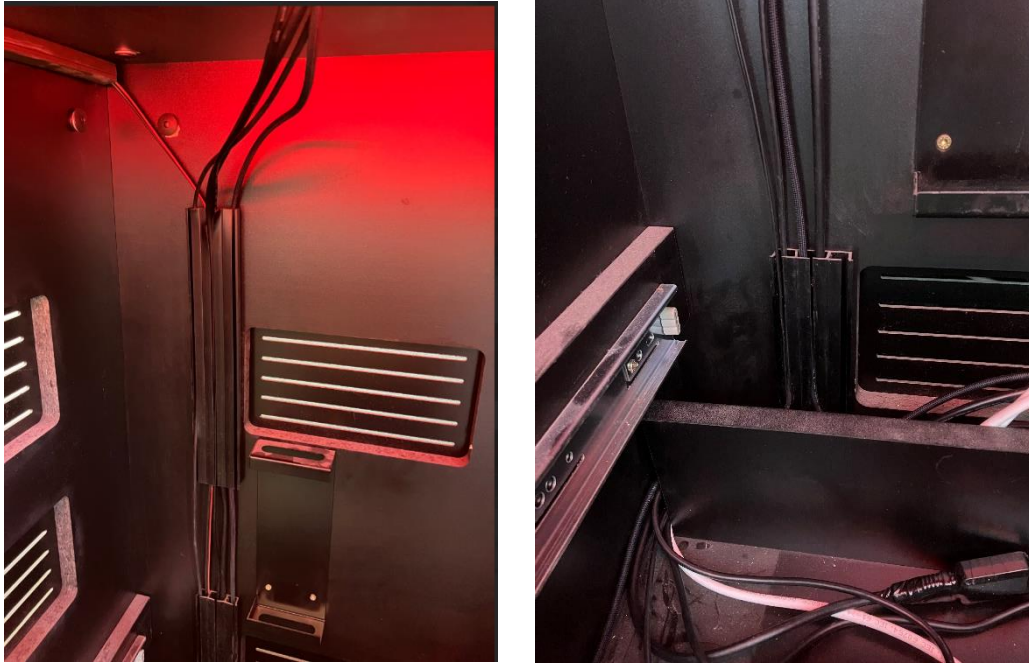

**Note – In some Express Kiosks the cable from the PED to the PC wasn't replaced during installation as instructed. If this is the case you won't be able to run this cable down the rear cable channel but will need to leave this dropping straight down from the top of the cabinet.**



Restricted - Internal

RESTRICTED

