


- 1) Remove acorn nut
- 2) Remove cap
- 3) Turn .25" elastic stop nut counter clockwise 1-2 turns
- 4) Place cap back on threaded rod
- 5) Place acorn nut back on threaded rod and tighten
- 6) Firmly press down on cap until locked in place

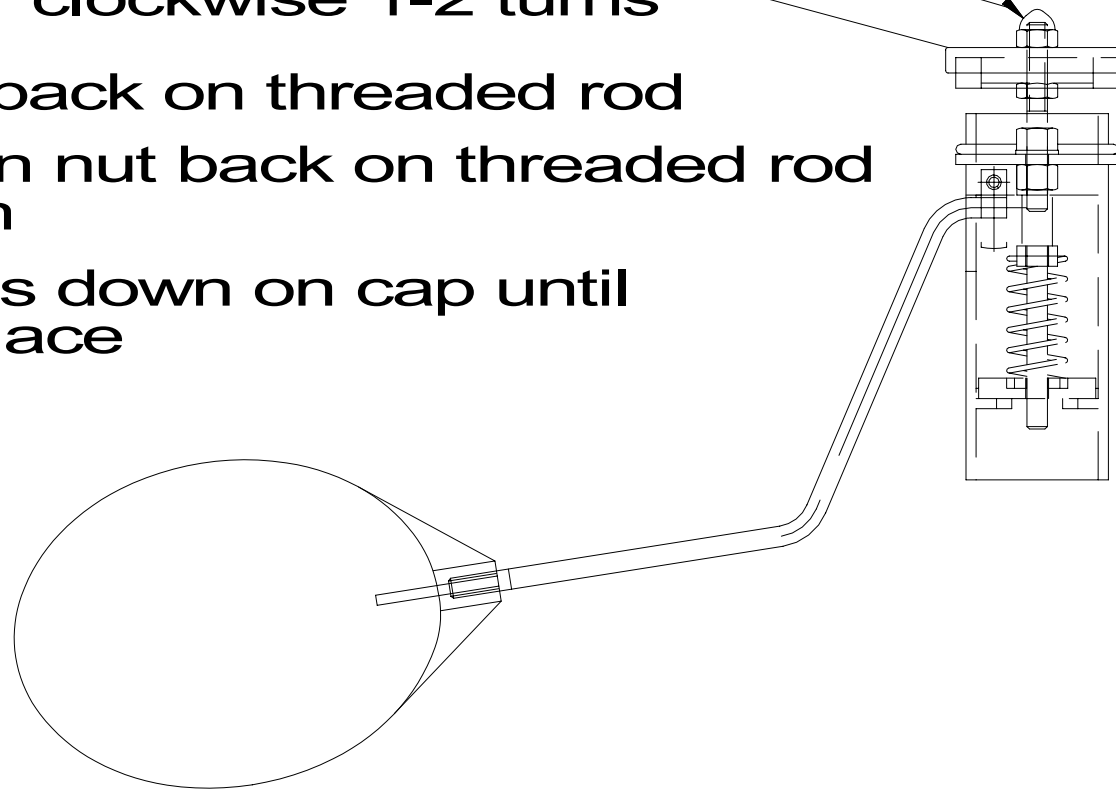

If cap does not remain in locked position, repeat steps 1 - 6

VAC-U-MAX

DWN BY: J.O.

DATE: 5/16/06

SCALE: None

AUTOVAC ADJUSTMENT

DRAWING #

REV#