


Original pins with extra channels
ABCD unused. Right side of socket
used with original card, or with
larger card and chip installed in
lower spots.

card fingers:


B C D A Vcc 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 Gnd

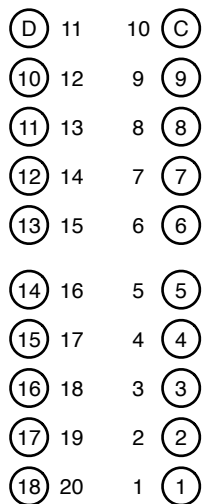

Pins on card and clip stay mapped to
lower LEDs, extra channels added to
expanded card get added to top of
LEDs group. Added 'between' pins 8
and 11, but no physical room so they
get new fingers on the card.

card fingers:

10 D C 9 Vcc 18 17 16 15 14 13 12 11 8 7 6 5 4 3 2 1 Gnd

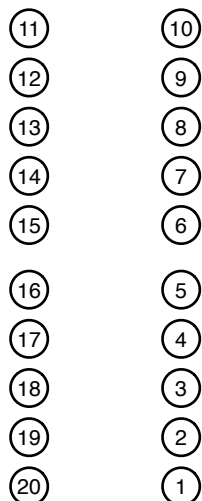

Full up.

card fingers:

12 11 10 9 Vcc 20 19 18 17 16 15 14 13 8 7 6 5 4 3 2 1 Gnd