


(All Cars) (Sonatra) (Stratos) (Special Note)

1	2	3	4			5	6	7	8
9	10	11	12	13	14	15	16	17	18
19	20	21	22	23					
24	25	26	27	28	29	30	31	32	33
34	35								

- Stratos [C110]  
Light blue connector (large) (35)
- E/C; Injector 1
  - E/C; Injector 4
  - E/C; Lambda heater (front)
  - 
  - 
  - E/C; EGR Solenoid
  - 
  - E/C; Alternator FR
  - E/C; Injector 2
  - 
  - E/C; Ignition 1,4
  - E/C; Ignition 1,3
  - 
  - E/C; ISC*V* open E/C; ISC*V* 1
  - E/C; ISC*V* 4
  - E/C; Sensor ground
  - E/C; Cooling Fan
  - E/C; Cooling Fan
  - E/C; MAF Airflow meter return (GND Reset)
  - E/C; Fuel pump relay A/C; Relay
  - A/C; Relay E/C; Fuel pump relay
  - check eng
  - Spark Timing (Diag)
  - E/C; Injector 3
  - 
  - E/C; Lambda heater (Rear)
  - 
  - E/C; ISC*V* close E/C; ISC*V* 3
  - E/C; ISC*V* 6
  - 
  - 
  - 
  - 
  - E/C; Evaporate purge solenoid
  - E/C; Evaporate vent solenoid (CCV)

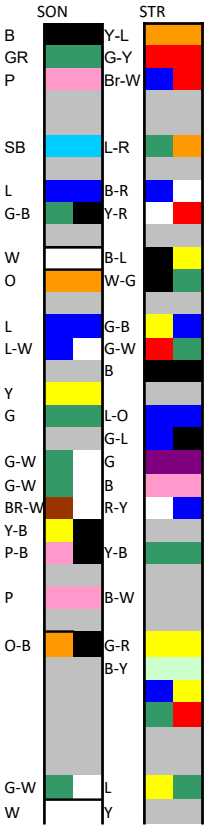

71	72	73	74				75	76	77
78	79	80	81	82	83	84	85	86	87
88	89								
90	91	92	93	94	95	96	97	98	


- Stratos [C117]  
Orange connector (28)
- E/C; Lambda (Front)
  - 
  - E/C; Lambda (Rear)
  - 
  - E/C; Cruze Control
  - A/T; Ground
  - A/T; Soleniod supply
  - E/C; TPS
  - E/T; Throttle Idle switch
  - E/C; Vehicle Speed Sensor
  - 
  - 
  - A/C; pressure switch 1
  - 
  - OBDII; pin7 K-Line
  - 
  - 
  - A/T; Ground
  - A/T; Soleniod supply
  - E/C; Knock Sensor
  - E/C; Map Sensor
  - E/C; Fuel Tank Diff Pressure
  - 
  - 
  - 
  - 
  - 
  - A/T; Ground
  - E/C; +12v ignition IG position (on)



- Key colours
- |     |             |
|-----|-------------|
| L   | blue        |
| G   | Green       |
| W   | White       |
| Y   | Yellow      |
| B   | Black       |
| BR  | Brown       |
| R   | Red         |
| O   | Orange      |
| LG  | Light Green |
| V   | violet      |
| P   | Pink        |
| TRP | transparent |
| SI  | silver      |
| SB  | Sky Blue    |
- KEY
- |     |                        |
|-----|------------------------|
| E/C | enging control         |
| A/T | Automatic Transmission |
| I/D | Instrument display     |
| D/C | Diagnostic Connector   |
| N/C | Not connected          |
| A/C | Air Con                |
| E/T | electronic Throttle    |

41	42	43				44	45	46
47	48	49	50	51	52	53	54	55
56	57							
58	59	60	61	62	63	64	65	66

- Stratos [C114]  
Light blue connector (small) (26)
- +12v
  - Chassis ground
  - E/C; engine ignition signal (tacho)
  - E/C; Coolant temp
  - E/C; Crank angle sensor
  - +5V reference sensor supply
  - +12v
  - Chassis ground
  - E/C; EFI Relay
  - A/T; Relay
  - E/C; Fuel Temp Sensor
  - P/S; Oil pressure switch
  - 
  - E/C; Alternator REG Supply (G)
  - E/C; Mass Airflow Sensor
  - E/C; Cam position
  - Sensor ground
  - E/C; Neu/Prk inhibit (crank)
  - E/C; Ignition inhibit Switch
  - E/C; Fuel Level
  - A/C; Load Signal (Idle Up)
  - A/C; pressure sender
  - 
  - E/C; Intake Air Temp Sensor
  - E/C; MAF Airflow Sensor
  - +12v ECU Memory Backup

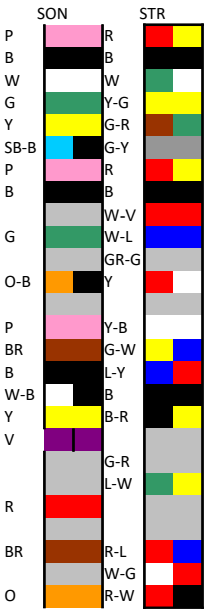

101	102	103	104				105	106	107
108	109	110	111	112	113	114	115	116	117
118	119	120							
121	122	123	124	125	126	127	128	129	130

- Stratos [C121]  
Green connector (30)
- A/T; Park Inhibit switch
  - A/T; Drive Inhibit switch
  - A/T; Input shaft speed sensor
  - A/T; Output shaft speed sensor
  - 
  - A/T; Second solenoid Vv
  - A/T; TQ converter clutch solenoid
  - A/T; Reverse Inhibit switch
  - A/T; shift switch gear 3
  - A/T; shift switch low
  - E/C; Immobilizer
  - 
  - D/C; pin 26 Flash PCM
  - D/C; pin 27 TCU (SH4 ecu only)
  - 
  - 
  - 
  - 
  - 
  - A/T; Underdrive solenoid Vv
  - A/T; Neutral inhibit switch
  - A/T; shift switch gear 2
  - E/T; Stop lamp switch
  - A/T; Oil temp sensor
  - 
  - Not used
  - 
  - 
  - A/T; Low/reverse solenoid Vv
  - A/T; Overdrive solenoid Vv

