



How to download the firmware

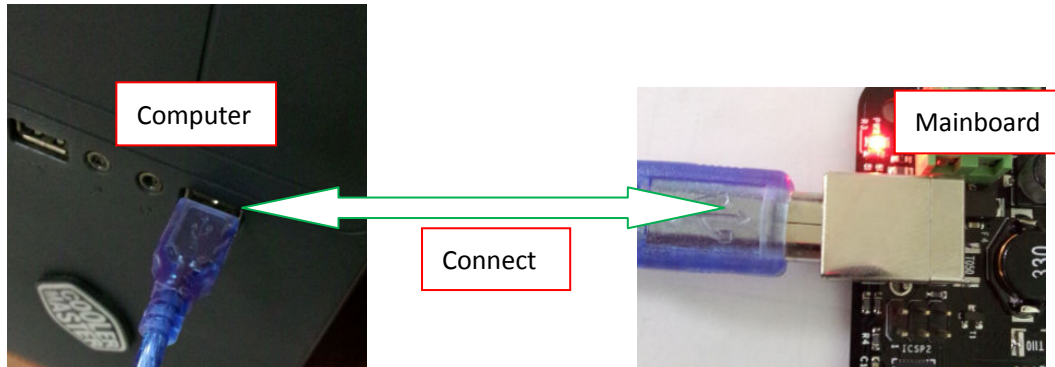


STEP1:

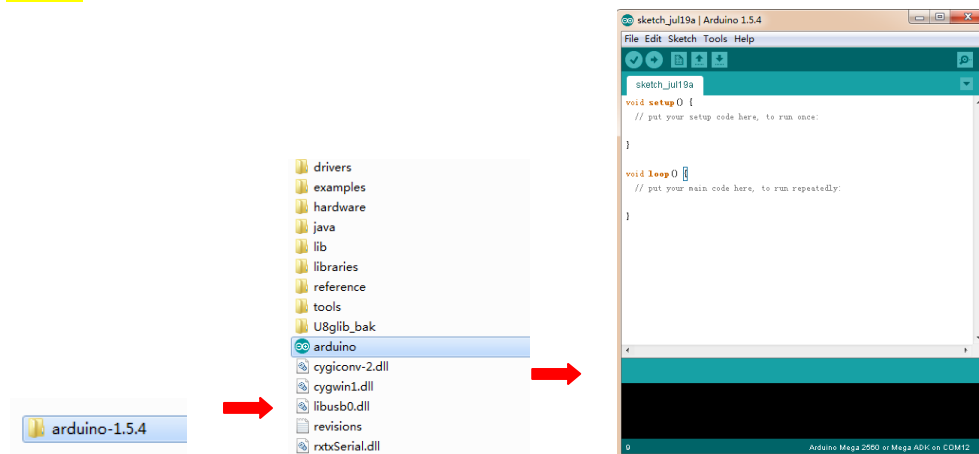

STEP2:




STEP3:

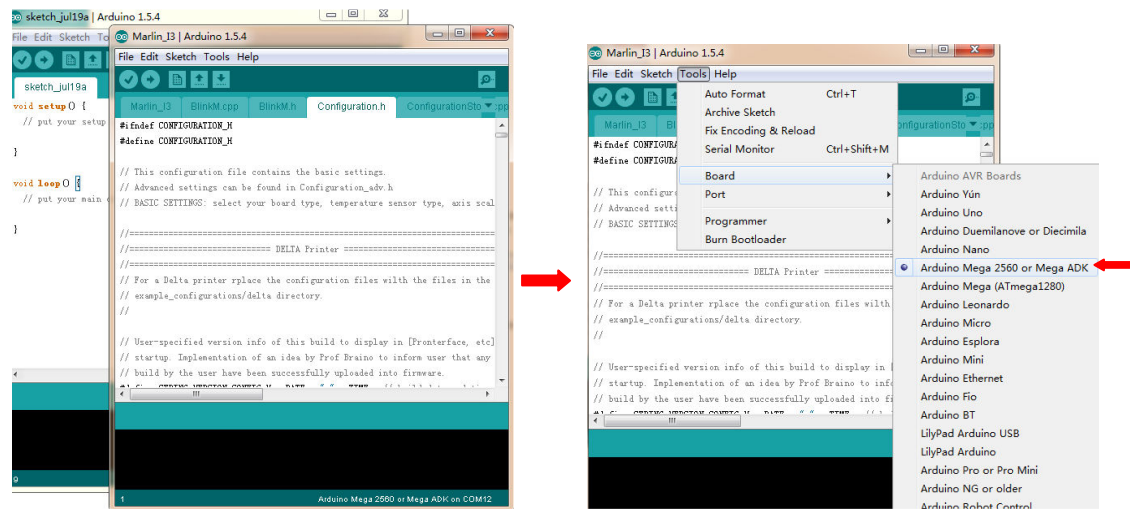

if you need change the parameters

1. pls copy the original firmware to save it in case future needed.
2. make another copy, and change the setting you need to change ,then choose the main board and load the firmware and save it, it will be ok.

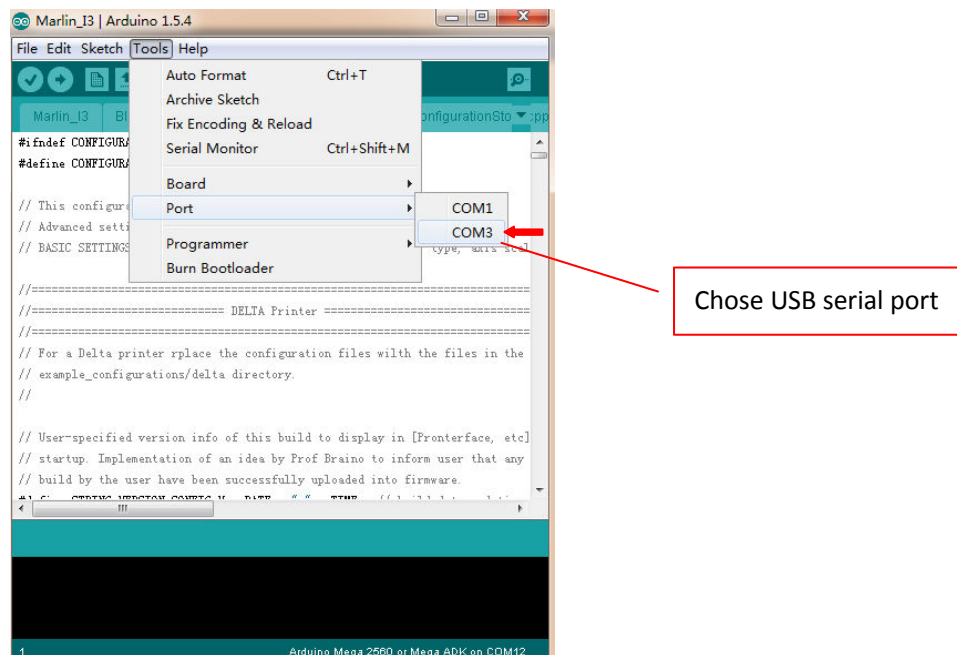

STEP4:

