


## Steps to connect to the ESP8266 FTP Server


1) Download an FTP client. I'll use Filezilla for the configurations explained in this document.

The download is available at: <https://filezilla-project.org/>

2) Create a new session, with the following configurations:

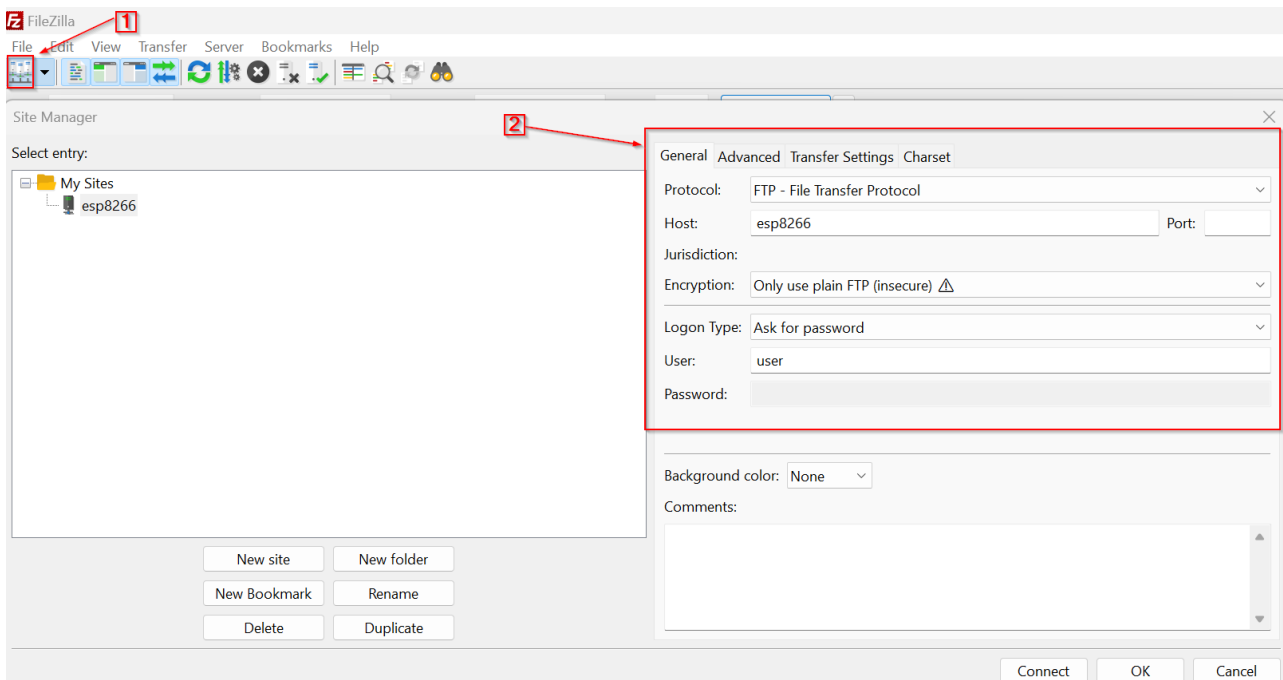

In that screen, in the *Transfer Settings* tab:

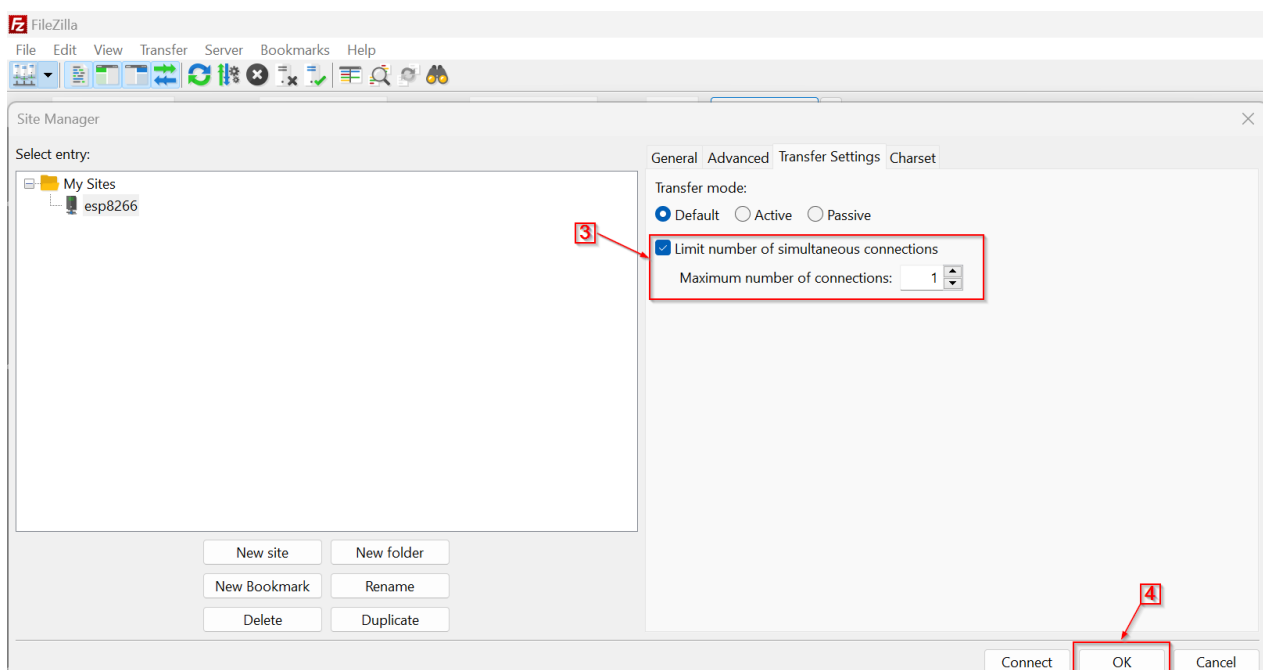

3) Go to *Edit -> Settings -> FTP: File Types*:

- Make sure to uncheck the option specified in “5”:

