

External Library

1.0

Features

- The library provides documentation for external components

General Description

The Off-Chip library in the Component Catalog provides a way for you to mix external and internal components on the same schematic. This makes it possible to improve documentation and better understand the internal schematic and entire design. The components in this library cover the most common components that are most likely to be placed on the periphery of a PSoC device. These components consist of resistors, capacitors, transistors, inductors, switches, and others. The library is not intended to supply every possible part, but should support a wide range of designs. You can easily create your own part or parts library if your design includes a custom or unique component.

This library consists of the following individual components. The table lists the components and the Component Catalog display name for each component defined by this document. Additional components may be added in future releases.

| Component Name | Component Catalog Display Name |
|----------------|---|
| Battery | Off-Chip/Power/Battery |
| BridgeRect | Off-Chip/Diodes/Bridge Rectifier |
| Capacitor | Off-Chip/Passive/Capacitor |
| Connector20 | Off-Chip/Electro-Mechanical/Connector (1-20 pins) |
| Crystal | Off-Chip/Passive/Crystal |
| Diode | Off-Chip/Diodes/Diode |
| ExtBuffer | Off-Chip/Active/Buffer |
| ExtComp | Off-Chip/Active/Comparator |
| ExtInverter | Off-Chip/Active/Inverter |
| ExtOpAmp | Off-Chip/Active/OpAmp |

| Component Name | Component Catalog Display Name |
|----------------|--|
| Fuse | Off-Chip/Passive/Fuse |
| GND | Off-Chip/Power/Ground |
| Inductor | Off-Chip/Passive/Inductor |
| ISource | Off-Chip/Active/Current Source |
| JFET_N | Off-Chip/Transistors/N-Channel JFET |
| JFET_P | Off-Chip/Transistors/P-Channel JFET |
| LED | Off-Chip/Diodes/LED |
| Microphone | Off-Chip/Sensors/Microphone |
| Motor | Off-Chip/Electro-Mechanical/Motor (DC) |
| Motor3PH | Off-Chip/Electro-Mechanical/Motor (3 Phase) |
| NFET_En | Off-Chip/Transistors/N-Channel FET (Enhancement Mode) |
| NFET | Off-Chip/Transistors/N-Channel FET (Depletion Mode) |
| NPN | Off-Chip/Transistors/NPN Transistor |
| PFET_En | Off-Chip/Transistors/P-Channel MOSFET (Enhancement Mode) |
| PFET | Off-Chip/Transistors/P-Channel FET (Depletion Mode) |
| PhotoDiode | Off-Chip/Diodes/Photo Diode |
| PhotoResistor | Off-Chip/Sensors/Photo Resistor |
| ProtoTrans | Off-Chip/Transistors/Photo Transistor |
| PNP | Off-Chip/Transistors/PNP Transistor |
| Potentiometer | Off-Chip/Passive/Potentiometer |
| Power | Off-Chip/Power/Power |
| Relay | Off-Chip/Electro-Mechanical/Relay |

| Component Name | Component Catalog Display Name |
|----------------|--|
| Resistor | Off-Chip/Passive/Resistor |
| Schottky | Off-Chip/Diodes/Schottky Diode |
| SCR | Off-Chip/Diodes/SCR |
| Speaker | Off-Chip/Electro-Mechanical/Speaker |
| StrainGauge | Off-Chip/Sensors/Strain Gauge |
| SwitchDT | Off-Chip/Electro-Mechanical/Switch (SPDT - DPDT) |
| SwitchSPST | Off-Chip/Electro-Mechanical/Switch (SPST) |
| TestPoint | Off-Chip/Electro-Mechanical/TestPoint |
| Thermistor | Off-Chip/Sensors/Thermistor |
| Thermocouple | Off-Chip/Sensors/Thermocouple |
| Transformer | Off-Chip/Passive/Transformer |
| Triac | Off-Chip/Diodes/Triac |
| Varactor | Off-Chip/Diodes/Varactor Diode |
| VREG | Off-Chip/Active/Voltage Regulator |
| VSource | Off-Chip/Active/Voltage Source |
| Zener | Off-Chip/Diodes/Zener Diode |

The following diagrams show an overview of each component and its placement in the library menu.

Figure 1. External Component Library Components



Figure 2. Placement in the Component Catalog

Common Component Parameters

Almost all external components have the following common parameters. If an external component has unique parameters, the descriptions are provided in the specific Component Parameters section.

| Basic Built-in | |
|-----------------------|-------|
| Parameter | Value |
| Include_In_Netlist | true |
| Instance_Name_Visible | true |
| SPICE_Model | D |

Include_In_Netlist

This parameter is reserved for future use when the SPICE template is supported.

Instance_Name_Visible

This parameter indicates whether the instance name is visible. If this parameter is set to **true** (default), the instance name is visible.

SPICE_Model

This parameter is reserved for future use when the SPICE template is supported.

Battery

Symbol Shape



Terminals

The terminals of the Battery component are:

- Pos – Positive battery terminal
- Neg – Negative battery terminal

Component Parameters

Voltage

The **Voltage** parameter is displayed on the schematic next to the component. It will also be used for the SPICE template when that template is supported. Default **Voltage** value is **6V**.

Bridge Rectifier

Symbol Shape




Terminals

The terminals of the Bridge Rectifier component are:

- P – Positive output of the rectifier terminal
 - N – Negative output of the rectifier terminal
 - AC1 – AC input terminal
 - AC2 – AC input terminal
-

Capacitor

Symbol Shape



Terminals

The terminals of the Capacitor component are:

- T1 – Capacitor terminal (positive if polarized)
- T2 – Capacitor terminal (negative if polarized)

Component Parameters

Capacitance

This parameter sets the capacitance of the capacitor. Default capacitance value is **0.1uF**.

Capacitor_Type

This parameter sets the type of the capacitor: **Polarized** or **Non-Polarized**. The default capacitor type is **Non-Polarized**.

Connector20

Symbol Shape



Terminals

The terminals of the Connector20 component are:

- T1 to T20 – Connector pins, up to 20 terminals

Component Parameters

Pin_Count

This parameter sets the number of available pins in the connector. This count can vary from 1 to 20. The default pin count is **5**.

Crystal

Symbol Shape



Terminals

The terminals of the Crystal component are:

- T1 – Crystal terminal 1
- T2 – Crystal terminal 2

Component Parameters

Value

This parameter sets the frequency of the crystal. Default frequency is **10MHz**.

Diode

Symbol Shape



Terminals

The terminals of the Diode component are:

- A – Anode terminal
 - K – Cathode terminal
-

ExtBuffer

Symbol Shape



Terminals

The terminals of the Diode component are:

- Vin – Input terminal
 - Vout – Output terminal
-

ExtComp

Symbol Shape



Terminals

The terminals of the Comparator component are:

- P – Non-Inverting input terminal

- N – Inverting input terminal
- O – Comparator output terminal
- VP (Label V+) – Positive supply terminal
- VN (Label V-) – Negative supply terminal

Component Parameters

Show_Power_Pins

This parameter is used to show power pins in the comparator. Setting this parameter to **true** shows the power pins. The default is **false**.

ExtInverter

Symbol Shape



Terminals

The terminals of the Diode component are:

- A – Input terminal
 - O – Output terminal
-

ExtOpAmp

Symbol Shape



Terminals

The terminals of the Opamp component are:

- P – Noninverting input terminal
- N – Inverting input terminal
- O – Opamp output terminal
- VP (Label V+) – Positive supply terminal
- VN (Label V-) – Negative supply terminal

Component Parameters

Show_Power_Pins

This parameter is used to show power pins in the opamp. Setting this parameter to **true** shows the power pins. The default is **false**.

Fuse

Symbol Shape




Terminals

The terminals of the Fuse component are:

- T1 – Fuse terminal 1
 - T2 – Fuse terminal 2
-

GND

Symbol Shape



Terminals

The terminals of the Ground component are:

- T1 – Ground node connection terminal

Component Parameters

Supply_Name

This parameter sets the ground name of the supply used. Default supply name is **Vss**.

Symbol_Type

This parameter sets the symbol type of the ground used: Signal Ground, Chassis Ground, or Earth Ground. Default symbol type is **Signal Ground**.

Inductor

Symbol Shape



Terminals

The terminals of the Inductor component are:

- T1 – Inductor terminal 1
- T2 – Inductor terminal 2

Component Parameters

Inductance

This parameter sets the inductance of the inductor used. The default is **10uH**.

Inductor Core

This parameter sets the type of the inductor core used: Iron Core or Air Core. The default is **Iron Core**.

Isource

Symbol Shape



Terminals

The terminals of the Current Source component are:

- P – Positive terminal
- N – Negative terminal

Component Parameters

Current

This parameter is used to set the current output of the current source. Default current value is **DC 10m**.

JFET_N

Symbol Shape



Terminals

The terminals of the Diode component are:

- D – Drain terminal
 - S – Source terminal
 - G – Gate terminal
-

JFET_P

Symbol Shape



Terminals

The terminals of the Diode component are:

- D – Drain terminal
 - S – Source terminal
 - G – Gate terminal
-

LED

Symbol Shape



Terminals

The terminals of the LED component are:

- A – Anode terminal
 - K – Cathode terminal
-

Microphone

Symbol Shape



Terminals

The terminals of the Microphone component are:

- T1 – Terminal 1
- T2 – Terminal 2

Component Parameters

Value

This parameter sets the resistance of the microphone in ohms. The default value is **10K**.

Motor

Symbol Shape



Terminals

The terminals of the Motor component are:

- T1 – Terminal 1
 - T2 – Terminal 2
-

Motor3PH

Symbol Shape



Terminals

The terminals of the Motor3PH component are:

- T1 – Terminal 1
 - T2 – Terminal 2
 - T3 – Terminal 3
-

NFET_En

Symbol Shape



Terminals

This section describes the various terminals of the NFET_En component.

- D – Drain terminal
 - S – Source terminal
 - G – Gate terminal
-

NFET

Symbol Shape



Terminals

The terminals of the NFET (Depletion Mode) component are:

- D – Drain terminal
 - S – Source terminal
 - G – Gate terminal
-

NPN Transistor

Symbol Shape



Terminals

The terminals of the NPN Transistor component are:

- E – Emitter terminal
- B – Base terminal
- C – Collector terminal

Component Parameters

Model

This parameter sets the model number of the transistor being used: 2N2222, 2N3904, FZT849, ZTX849, ZTX1048A, 2N4124, 2N3391A, 2N5089, 2N5210, 2N2219A, 2N4401, 2N5550, 2N2369, 2N5769, 2N3055. Default is **2N3391A**.

PFET_En

Symbol Shape



Terminals

The terminals of the PFET_En component are:

- D – Drain terminal



- S – Source terminal
 - G – Gate terminal
-

PFET

Symbol Shape



Terminals

The terminals of the PFET (Depletion Mode) component are:

- D – Drain terminal
 - S – Source terminal
 - G – Gate terminal
-

Photo Diode

Symbol Shape



Terminals

The terminals of the Photo Diode component are:

- A – Anode terminal
- K – Cathode terminal

Component Parameters

Current

This parameter sets the maximum current that can be passed through the diode. The default value is **1mA**.

Photo Resistor

Symbol Shape



Terminals

The terminals of the Photo Diode component are:

- T1 – Terminal 1
- T2 – Terminal 2


Component Parameters

Value

Sets the resistance. The default value is **10K**.

Photo Transistor

Symbol Shape



Terminals

The terminals of the Photo Transistor component are:

- E – Emitter terminal
- C – Collector terminal


Component Parameters

Current

This parameter sets the maximum current that can be passed through the photo transistor. The default value is **10mA**.

PNP Transistor

Symbol Shape

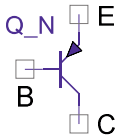

Terminals

The terminals of the PNP Transistor component are:

- E – Emitter terminal
- B – Base terminal
- C – Collector terminal

Component Parameters

This parameter sets the model number of the transistor being used: AN2907, 2N3906, 2N4126, 2N5087, 2N2905, 2N4403, 2N5401, 2N5771. Default is **AN2907**.

Potentiometer

Symbol Shape



Terminals

The terminals of the Potentiometer component are:

- T1 – Terminal 1(CW)
- T2 – Terminal 2(CW)
- W – Wiper terminal

Component Parameters

Value

This parameter sets the resistance of the potentiometer in ohms. The default is **10K**.

Wiper_Position

This parameter sets the position of the wiper in potentiometer in range 0 to 100. The default is **50**.

Power

Symbol Shape



Terminals

The terminals of the Power component are:

- T1 – Power node connection terminal


Component Parameters

Supply_Name

This parameter sets the name of the power supply used. The default is **Vdd**.

Relay

Symbol Shape

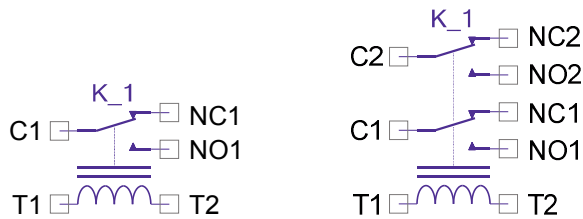

Terminals

The terminals of the Relay component are:

- T1 – Coil Terminal 1
- T2 – Coil Terminal 2
- C1 – Common terminal for pole 1
- NO1 – Normally open terminal for pole 1
- NC1 – Normally closed terminal for pole 1
- C2 – Common terminal for pole 2
- NO2 – Normally open terminal for pole 2
- NC2 – Normally closed terminal for pole 2

Component Parameters

Coil_Resistance

This parameter sets the resistance of the coil in relay. Default resistance value is **50 ohms**.

Relay_Type

This parameter sets the type of the relay used: SPDT or DPDT. Default relay type is **DPDT**.

Resistor

Symbol Shape



Terminals

The terminals of the Resistor component are:

- T1 – Terminal 1
- T2 – Terminal 2

Component Parameters

Value

This parameter sets the resistance of the resistor used in ohms. Default resistance value is **10K**.

Schottky Diode

Symbol Shape



Terminals

The terminals of the Schottky Diode component are:

- A – Anode terminal
 - K – Cathode terminal
-

SCR

Symbol Shape



Terminals

The terminals of the SCR component are:

- A – Anode terminal
 - K – Cathode terminal
 - G – Gate terminal
-

Speaker

Symbol Shape



Terminals

The terminals of the Speaker component are:

- T1 – Terminal 1
- T2 – Terminal 2

Component Parameters

Coil_Resistance

This parameter sets the coil resistance of the speaker in ohms. The default is **8**.

Strain Gauge

Symbol Shape



Terminals

The terminals of the StrainGauge component are:

- T1 – Top terminal
- T2 – Right terminal
- T3 – Bottom terminal
- T4 – Left terminal

Component Parameters

Resistance_R1

This parameter sets the resistance R1 in StrainGauge. Default value is **10**.



Resistance_R2

This parameter sets the resistance R2 in StrainGauge. Default value is **10**.

Resistance_R3

This parameter sets the resistance R3 in StrainGauge. Default value is **10**.

Resistance_R4

This parameter sets the resistance R4 in StrainGauge. Default value is **10**.

SwitchDT

Symbol Shape



Terminals

The terminals of the SwitchDT component are:

- C1 – Common terminal for pole 1
- NO1 – Normally open terminal for pole 1
- NC1 – Normally closed terminal for pole 1
- C2 – Common terminal for pole 2
- NO2 – Normally open terminal for pole 2
- NC2 – Normally closed terminal for pole 2

Component Parameters

Switch_Type

This parameter sets the type of switch used, **DPDT** or **SPDT**. The default is **DPDT**.

SwitchSPST

Symbol Shape



Terminals

The terminals of the SwitchSPST component are:

- T1 – Switch terminal 1
 - T2 – Switch terminal 2
-

Test Point

Symbol Shape



Terminals

The terminals of the Test Point component are:

- T1 – Net node connection terminal


Component Parameters

Net_Name

This parameter sets the net name of the test point used. The default name is **TP**.

Thermistor

Symbol Shape



Terminals

The terminals of the Thermistor component are:

- T1 – Terminal 1
- T2 – Terminal 2

Component Parameters

Value

This parameter sets the resistance of the thermistor. The default is **25K**.

Thermocouple

Symbol Shape



Terminals

The terminals of the Thermocouple component are:

- P – Positive terminal
- N – Negative terminal

Component Parameters

Voltage

This parameter sets the voltage of the thermocouple. Default voltage is **10mV**.

Transformer

Symbol Shape



Terminals

The terminals of the Transformer component are:

- P1 – Primary winding terminal 1
- P2 – Primary winding terminal 2
- PCT – Primary winding center tap
- S1 – Secondary winding terminal 1
- S2 – Secondary winding terminal 2
- SCT – Secondary winding center tap

Component Parameters

Center_Tap

This parameter sets whether a center tap is present in the transformer. If this parameter is set to **false** (default), a center tap is absent.

Core_Type

This parameter sets the type of the core used in the transformer, **Iron Core** or **Air Core**. **Iron Core** is the default setting.



Primary Inductance

This parameter sets the inductance of the primary coil in the transformer. Default is **10uH**.

Secondary inductance

This parameter sets the inductance of the secondary coil in the transformer. Default is **10uH**.

Triac

Symbol Shape



Terminals

The terminals of the Triac component are:

- T1 – Terminal 1
 - T2 – Terminal 2
 - G – Gate terminal
-

Varactor

Symbol Shape



Terminals

The terminals of the Varactor component are:

- A – Anode terminal

- K – Cathode terminal
-

VREG

Symbol Shape



Terminals

The terminals of the Voltage Regulator component are:

- VIN – Input Voltage terminal
- VOUT – Output Voltage terminal
- REF – Reference terminal

Component Parameters

Voltage

This parameter sets the regulated output voltage of the Voltage Regulator. Default value is **3.3V**.

VSource

Symbol Shape



Terminals

The terminals of the Voltage Source component are:

- P – Positive terminal
- N – Negative terminal

Component Parameters

Voltage

This parameter sets the output voltage of the voltage source. Default is **DC 5V**.

Voltage source is not specific to AC or DC. You can specify Voltage source type using Voltage parameter. You can set value of Voltage parameter e.g. to "3V DC" or "3Vpp AC 1kHz" to specify AC or DC source.

Zener

Symbol Shape



Terminals

The terminals of the Zener Diode component are:

- A – Anode terminal
- K – Cathode terminal

Component Parameters

Voltage

This parameter sets the voltage of the Zener used in the circuit. Default Zener voltage value is **4.7V**.

Component Changes

| Version | Change |
|---------|---|
| Rev. *B | The word “Annotation” was changed to “External” and “Off-Chip” to reflect that these components do not implement actual functionality but do document the design on the context of the target board. The version of these components was not changed. Likewise, the library file name was not changed to maintain compatibility with previous versions of PSoC Creator. |
| | Added External Inverter, External Buffer, Photo Resistor, N-Channel and P-Channel JFETs components. |
| | Added list of available components with Component Catalog display name for each component. |
| | Added overview diagrams for each component and its placement in the Component Catalog. |
| | Moved Common Component Parameters to one section. |

© Cypress Semiconductor Corporation, 2011-2012. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control, or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life- support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

