


# Timer

## 1.50

## Features

- Supports fixed-function and UDB-based implementations
- 8-, 16-, 24-, or 32-Bit Resolution
- Configurable Capture modes
- 4 deep capture FIFO
- Optional capture edge counter
- Configurable Trigger and Interrupts
- Configurable Hardware/Software Enable
- Continuous or 1 shot run modes

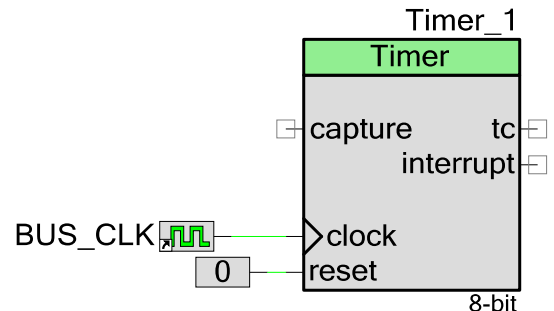

## General Description

The Timer component provides a capture timer used to time the interval between hardware events. The Timer is designed to provide an easy method of timing complex real time events accurately with minimal CPU intervention. The Timer component features may be combined with other analog and digital components to create complex peripherals.

Timers count only in the down direction starting from the period value and require a single clock input. The input clock period is the minimum time interval able to be measured. The maximum timer measurement interval is the input clock period multiplied by the resolution of the timer. The signal to be captured may be routed from an IO pin or from other internal component outputs. Once started, the Timer component operates continuously and reloads the timer period value on reaching the terminal count.

The Timer component capture input is the most useful feature of the timer. On a capture event the current timer count is copied into a storage location. Firmware may read out the capture value at any time without timing restrictions as long as the capture FIFO has room. You should take care to avoid writing to the FIFO if it is full. If the FIFO is full, the oldest value will be overwritten and the newly captured value returned in its place the next time the FIFO is read. The Capture FIFO allows storage of up to 4 capture values. The capture event may be generated by software, rising edge, falling edge or all edges allowing great measurement flexibility. To further assist in measurement accuracy of fast signals an optional 7-bit counter may be used to only capture every  $n[2..127]$  of the configured edge type.

**PRELIMINARY**

The trigger and reset inputs allow the Timer component to be synchronized with other internal or external hardware. The optional trigger input is configurable so that a rising edge, falling edge or any edge starts the timer counting. A rising edge on the reset input causes the counter to reset its count as if the terminal count was reached.

An interrupt can be programmed to be generated under any combination of the following conditions; when the Timer component reaches the terminal count, when a capture event occurs or after n[1..4] capture events have occurred. The interrupt signal is a read to clear signal.

## When to use a Timer

A typical use of the Timer is to record the number of clock cycles between events. A common use is to measure the number of clocks between two rising edges as might be generated by a tachometer sensor. A more complex use is to measure the period and duty cycle of a PWM input. For PWM measurement the Timer component is configured to start on a rising edge, capture the next falling edge and then capture and stop on the next rising edge. An interrupt on the final capture signals the CPU that all the captured values are ready in the FIFO. The Timer component can be used as a clock divider by driving a clock into the clock input and using the terminal count output as the divided clock output.

Timers share many features with counters and PWMs. A Counter component is better used in situations that require the counting of a number of events but also provides rising edge capture input as well as compare output. A PWM component is better used in situations requiring multiple compare outputs with control features like center alignment, output kill and deadband outputs.

## Input/Output Connections

This section describes the various input and output connections for the Counter. Some I/Os may be hidden on the symbol under the conditions listed in the description of that I/O.

**Note** All signals are active high unless otherwise specified.

Input	May Be Hidden	Description
clock	N	The clock input defines the operating frequency of the Timer component. That is, the timer period counter value is decremented on the rising edge of this input while the Timer component is enabled.
reset	N	<p>This input is a synchronous reset requiring at least one rising edge of the clock to implement the resets of the counter value and the capture counter. It resets the period counter to the period value. It also resets the capture counter.</p> <p><b>Note</b> For PSoC 3 ES2 silicon, the Terminal Count pin for the fixed function Timer is held HIGH in Reset. A schematic fix for this is provided under "Reset in Fixed Function Block" in the Functional Description section of this data sheet.</p> <p>For PSoC 3 ES3 or later silicon, the Terminal Count pin for the fixed function Timer is held LOW in Reset</p>

PRELIMINARY




Input	May Be Hidden	Description
enable	Y	Hardware enable of the Timer component. This connection enables the period counter to decrement on each rising edge of the clock. If this input is low the outputs are still active but the Timer component does not change states.
capture	Y	Captures the period counter value to a 4-sample FIFO in the UDB, or to a single sample register in the Fixed Function block. The input pin is visible if enabled by the <b>Capture Mode</b> parameter as set in the Configure dialog. No values will be captured if the Timer is disabled.
trigger	Y	This input only displays when the <b>Trigger Mode</b> parameter is enabled in the Configure dialog. If the <b>Trigger Mode</b> parameter is set to "None" it causes the Timer to operate by beginning to down count from the period as soon as the block is started. If the parameter is set to one of the edge types, it causes the Timer to delay the start of the Period down count until the appropriate edge type is detected. The trigger edge is not captured nor does it generate an interrupt. Typically the trigger and capture inputs are tied together but may be used separately for design flexibility.

Output	May Be Hidden	Description
tc	N	Terminal count output goes high if the Timer component has started and the count value is equal to the terminal count (zero). The terminal count output is a zero compare of the period counter value. As long as the period counter is zero and the Timer component is enabled, the output will be high.
interrupt	N	The interrupt output is a copy of the interrupt source configured in the hardware. The sources of the interrupt are configured through software as being any of the status bits: <ul style="list-style-type: none"> <li>Terminal Count Event</li> <li>Capture Event</li> <li>Capture FIFO Full (UDB implementation only)</li> </ul> Once an interrupt has been triggered, the status register must be read in order to clear it. This is easily done using either GetInterruptSource() or ReadStatusRegister().
capture_out	Y	The capture_out output is an indicator of when a hardware capture has been triggered. The output pin is available for the UDB implementation only.

## Schematic Macro Information


The default Timer in the Component Catalog is a schematic macro using a Timer component with default settings. It is connected to a 24 MHz bus clock and a Logic Low component.

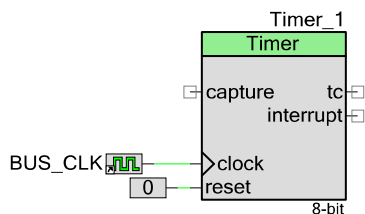

**PRELIMINARY**

## Parameters and Setup

Drag a Timer component onto your design and double-click it to open the Configure dialog.

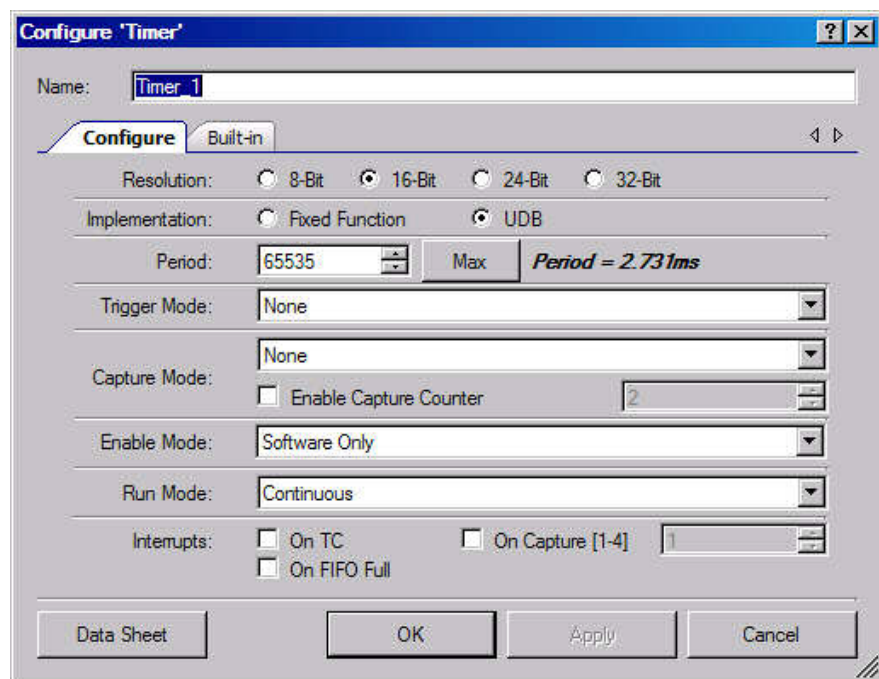

### Hardware vs. Software Configuration Options

Hardware configuration options change the way the project is synthesized and placed in the hardware. You must rebuild the hardware if you make changes to any of these options. Software configuration options do not affect synthesis or placement. When setting these parameters before build time you are setting their initial value which may be modified at any time with the API provided. Most parameters described in the next sections are hardware options. The software options will be noted as such.

### Resolution

The Resolution parameter defines the bit-width resolution of the Timer. The default is 8-bit.

### Implementation

The Implementation parameter allows you to choose either a fixed function block (default) or a UDB implementation of the Timer.

**PRELIMINARY**



## Period (Software)

The **Period** parameter defines the max counts value (or rollover point) for the period counter. The default is 256. The limits of this value are defined by the **Resolution** parameter. The maximum value of the **Period** value is defined as  $(2^8)$ ,  $(2^{16})$ ,  $(2^{24})$ , and  $(2^{32})$ , as shown in the following table. The **Period** value may be modified by the WritePeriod() API.

Resolution	Maximum period count values
8	256
16	65536
24	16777216
32	4294967296

## Trigger Mode (Software)

The Trigger Mode parameter configures the implementation of the trigger input. This parameter is only active when Implementation is set to "UDB." This parameter is not available when set to "Fixed Function."

This value is an enumerated type and can be set to any of the following values:

- "None" (default): No trigger implemented and the trigger input pin is hidden
- "Rising Edge": Trigger (enable) the period counter value on the first rising edge of the trigger input
- "Falling Edge": Trigger (enable) the period counter value on the first falling edge of the trigger input
- "Either Edge": Trigger (enable) the period counter value on the first edge of the trigger input
- "Software Controlled": Control register bits define what edge of the trigger input to use to trigger the timer. May be changed at any time by API by setting calling the SetTriggerMode() function

## Capture Mode (Software)

The Capture Mode section contains three parameters: Capture Mode Value, Enable Capture Counter, and Capture Count.

### Capture Mode Value

The Capture Mode Value Parameter configures the implementation of the capture input. This parameter is available in the fixed function timer implementation but is not configurable to which edge. All capture on the fixed function block is implemented on the rising edge of the capture input.



**PRELIMINARY**

This value is an enumerated type and can be set to any of the following:

- “None”: No capture implemented and the capture input pin is hidden
- “Rising Edge” (default): Capture the period counter value on any rising edge of the capture input
- “Falling Edge”: Capture the period counter value on any falling edge of the capture input
- “Either Edge”: Capture the period counter value on any edge of the capture input
- “Software Controlled”: Control register bits define what edge of the capture input to use to capture data to the FIFO. May be changed at any time by API by setting calling the SetCaptureMode() function

### Enable Capture Counter (Software)

The Capture Counter Enabled parameter allows you to implement a 7-bit counter that is accessible by software to define how many capture events happen before the period counter is captured to the FIFO. It may be necessary to capture every 3rd event in which case the capture counter should be set to a value of 3. If this parameter is set the 7-bit counter may be changed at any time with the API SetCaptureCount().

### Capture Count (Software)

The Capture Count parameter configures the initial value in the capture counter. The capture counter allows for 2-127 capture events to happen before the period counter value is captured to the data FIFO. If the capture count is set to 100 then every 100th capture event will capture the period counter to the FIFO. The capture count value may be modified by the API SetCaptureCount().

### Enable Mode

This parameter specifies the mode of the component:

- “Software Only”: The Timer is enabled only by setting the enable bit in the control register. In this mode the enable input pin will be hidden from the symbol.
- “Hardware Only”: The Timer is enabled only by setting the enable bit in the control register. In this mode the control register may be removed from the implementation but the control register enable bit has no affect on operation. This option is only available when Implementation is set to "UDB."
- “Hardware and Software”: The Timer is enabled only if both the control register bit and the hardware input are active (high).

**PRELIMINARY**



## Run Mode

The **Run Mode** parameter allows you to configure the Timer component to run continuously or in one of two one shot modes:

- “Continuous”: The Timer will run so long as the enable conditions are true
- “One Shot”: The Timer will run through a single period and stops after terminal count. On stop, it reloads period into period counter. It will begin another single cycle if the period counter is reset or Timer component is hardware reset.
- “One Shot halt on Interrupt”: The Timer will run through a single period. Timer stops on occurrence of any interrupt or after terminal count. If the Timer reaches terminal count after stop, it reloads period into period counter. It will begin another single cycle if the period counter is reset or Timer component is hardware reset.

**Note** In order to be sure that One Shot mode does not start prematurely, you should use a Trigger Mode to control the start time, or use some form of software enable mode ("Software Only" or "Hardware and Software").

## Interrupt (Software)

The Interrupt section contains various "Interrupt On" parameters. These values are OR'd with any of the other "Interrupt On" parameters to give a final group of events that can trigger an interrupt. This configures the startup setting, it may be modified at any time with the API `SetInterruptMode()`.

- **On TC** – Allows you to interrupt on a terminal count.
- **On Capture** – Allows you to configure a valid capture as an interrupt source.
  - **Number Of Captures** – This field is used to specify the number of captures to count before an interrupt on capture is triggered. This allows software to deal with capture data only after the data expected is available and to not be overworked by calling the ISR too often. This value can be set to a value from 1 to 4. It may also be set at any time with the API `SetInterruptCount()`.
- **On FIFO Full** – The Interrupt on FIFO Full parameter allows you to interrupt when the capture FIFO is full.



**PRELIMINARY**

## Clock Selection

For the Timer component, the clock input can be any signal for which you wish to count the rising edges. It is expected that this input is periodic with its frequency, in combination with the period counts definition of your timer, defining the output period of your timer.

**WARNING** When configured to utilize the fixed function block in the device, the Timer component will have the following restrictions:

1. The clock input must be from a local clock that is synchronized to the bus clock or directly sourced from the bus clock (configure the **Clock Type** as "Existing" and **Source** as "BUS\_CLK").
2. If the frequency of the clock matches the bus clock, then the clock must be a direct connection to the bus clock (again configure the **Clock Type** as "Existing" and **Source** as "BUS\_CLK"). A local clock with a frequency that matches the bus clock will generate an error during the build process.

## For UDB-based Components

If the component allows asynchronous clocks, you may use any clock input frequency within the device's frequency range.

If the component requires synchronization to the bus clock, then when using a routed clock\* to clock the component, the frequency of the routed clock cannot exceed 1/2 the routed clock's source clock frequency.

- If the routed clock is synchronous to the bus clock, then it is 1/2 the bus clock.
- If the routed clock is synchronous to one of the clock dividers, its maximum is 1/2 of that clock rate.

## Placement

The Timer component is placed based on the FixedFunction parameter. Whether you set this option or it is set by the auto placement operation, if the FixedFunction is set then this component will be placed in an available fixed function Counter/Timer block; otherwise it will be placed in the UDB array as determined for best placement for the whole design.

---

\* A routed clock is anything that is not a clock symbol directly attached to the clock input.



## Resources

Resolution	Digital Blocks					API Memory (Bytes)		Pins (per External I/O)
	Datapaths	Macro cells	Status Registers	Control Registers	Counter7	Flash	RAM	
8-Bits	1	TBD	1	1	0	TBD	TBD	TBD
16-Bits	2	TBD	1	1	0	TBD	TBD	TBD
24-Bits	3	TBD	1	1	0	TBD	TBD	TBD
32-Bits	4	TBD	1	1	0	TBD	TBD	TBD
Other options	TBD	TBD	TBD	TBD	TBD	TBD	TBD	TBD

## Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name “Timer\_1” to the first instance of a component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is “Timer”.

Function	Description
void Timer_Init(void)	Initializes or Restores default Timer configuration
void Timer_Enable(void)	Enables the Timer.
void Timer_Start(void)	Initialize the Timer with default customizer values. Enable the Timer operation by setting the enable bit of the control register for either of the software controlled enable modes.
void Timer_Stop (void)	Disable the Timer operation; Clears the enable bit of the control register for either of the software controlled enable modes.
void Timer_SetInterruptMode (uint8 interruptMode)	Enables or disables the sources of the interrupt output from the optional interrupt sources defined by the bits in the status register.
uint8Timer_GetInterruptSource (void)	Provides an interface where the firmware can query for the source of the a triggered interrupt placed on the interrupt output pin of the Timer
void Timer_SetCaptureMode (uint8 captureMode)	Sets the capture mode of the Timer from one of the enumerated type options available



**PRELIMINARY**

Function	Description
void Timer_SetTriggerMode (uint8 triggerMode)	Sets the trigger mode of the timers trigger input from one of the enumerated type options available
void Timer_EnableTrigger (void)	Enables the trigger mode of the timer by setting the correct bit in the control register
void Timer_DisableTrigger (void)	Disables the trigger mode of the timer by clearing the correct bit in the control register
void Timer_SetInterruptCount (uint8 interruptCount)	Sets the number of captures to count before an interrupt is triggered for the InterruptOnCapture source. Only available in a UDB implementation.
void Timer_SetCaptureCount (uint8 captureCount)	Sets the number of captures events to count before actually capturing the Timer value to the FIFO. Only applicable in the UDB implementation.
uint8 Timer_ReadCaptureCount (void)	Reads the current value of the NumberOfCaptures definition which defines the number of captures counted before an interrupt is triggered for the InterruptOnCapture source
void Timer_SoftwareCapture (void)	Forces a capture of the period counter to the capture FIFO
uint8 Timer_ReadStatusRegister (void)	Reads the status register and returns its state. This function should use defined types for the bit-field information as the bits in this register may be permutable.
uint8 Timer_ReadControlRegister (void)	Reads the control register and returns its state. This function should use defined types for the bit-field information as the bits in this register may be permutable.
void Timer_WriteControlRegister (uint8 control)	Sets the bit-field of the control register. This function should use defined types for the bit-field information as the bits in this register may be permutable.
uint8/16/32 Timer_ReadPeriod (void)	Reads the Period register returning the last period value written to it
void Timer_WritePeriod (uint8/16/32 period)	Writes the Period register with the new desired period or max counts value
uint8/16/32 Timer_ReadCounter (void)	Forces a software capture of the period value into the capture FIFO and oldest data from the capture FIFO
void Timer_WriteCounter (uint8/16/32 counter)	Allows the user to overwrite the counter value as a new value to count down from. Called during initialization to preload the period value.
uint8/16/32 Timer_ReadCapture (void)	Reads the latest captured period counter value. Firmware must check the FIFO status for data before reading
void Timer_ClearFIFO (void)	Clears all previous capture data from the capture FIFO
void Timer_Sleep (void)	Stops the Timer operation and saves the user configuration
void Timer_Wakeup (void)	Restores and enables the user configuration
void Timer_SaveConfig(void)	Save the configuration of Timer.

PRELIMINARY



Function	Description
void Timer_RestoreConfig(void)	Restore the configuration of Timer.

## Global Variables

Variable	Description
Timer_initVar	Indicates whether the Timer has been initialized. The variable is initialized to 0 and set to 1 the first time Timer_Start() is called. This allows the component to restart without reinitialization in after the first call to the Timer_Start() routine. If reinitialization of the component is required, then the Timer_Init() function can be called before the Timer_Start() or Timer_Enable() function.

## void Timer\_Init(void)

- Description:** Initialize/restore default Timer configuration. The Timer starts in "Continuous" run mode by default. The interrupts are chosen as the output from the status register. If UDB mode is set, then the default Compare mode and Capture mode values are set as defined per the user configuration. The FIFO is cleared in case of UDB mode.
- Parameters:** None
- Return Value:** None
- Side Effects:** All registers will be set to their initial values and FIFO is cleared. This will reinitialize the component.

## void Timer\_Enable(void)

- Description:** Enables the Timer by setting 7th bit of the control register for either of the software controlled enable modes. In case of Fixed function mode of the Timer, the chosen fixed function block is enabled.
- Parameters:** None
- Return Value:** None
- Side Effects:** If the Enable mode is set to Hardware only then this function has no effect on the operation of the Timer.



**PRELIMINARY**

## void Timer\_Start(void)

- Description:** Initialize the Timer with default customizer values. Enable the Timer operation by setting the enable bit of the control register for either of the software controlled enable modes.
- Parameters:** None
- Return Value:** None
- Side Effects:** Sets the enable bit in the control registers of the Timer. If the Enable Mode is set to hardware only this has no affect on the Timer. If the enable mode is set to Hardware and Software then this will only enable the software portion of this mode and the hardware input must also be enabled to finally enable the Timer.

## void Timer\_Stop (void)

- Description:** Disable the Timer operation by resetting the 7th bit of the control register for either of the software controlled enable modes. Disables the Fixed function block which had been chosen.
- Parameters:** None
- Return Value:** None
- Side Effects:** Clears the enable bit in the control register of the counter.

## void Timer\_SetInterruptMode (uint8 interruptMode)

- Description:** Enables or disables the sources of the interrupt output from the optional interrupt sources defined by the bits in the status register.
- Parameters:** uint8: interruptMode – Bit-Field containing the status bits you want enabled as interrupt sources. This parameter should be an OR'ing of the desired status bit masks defined in the Timer.h header file.
- Return Value:** None
- Side Effects:** All interrupt sources are OR'd together to provide a single interrupt output. You must call GetInterruptSource to review which enabled status bit caused the interrupt and to clear the interrupt as they are sticky bits in the status register.

## uint8 Timer\_GetInterruptSource (void)

- Description:** Returns the mode register defining which events are enabled as interrupt sources.
- Parameters:** None
- Return Value:** uint8: Bit-Field containing the enabled interrupt sources as defined by the status register bit-field constants defined in the *Timer.h* header file
- Side Effects:** Clears any active interrupts.

PRELIMINARY



**void Timer\_SetCaptureMode (uint8 captureMode)**

**Description:** Sets the capture mode of the Timer component from one of the enumerated type options available. The 5th and 6th bits of the control register are cleared and rewritten with the new user configuration.

**Parameters:** enum: captureMode – This parameter should be defined using one of the capture mode constants defined in the *Timer.h* header file. Available enum values are:

```
Timer__B_TIMER__CM_NONE
Timer__B_TIMER__CM_RISINGEDGE
Timer__B_TIMER__CM_FALLINGEDGE
Timer__B_TIMER__CM_EITHEREDGE
Timer__B_TIMER__CM_SOFTWARE
```

**Return Value:** None

**Side Effects:** Only available if the Capture Mode parameter is set to Software Controlled on the Configure dialog. Resource usage may be minimized by not allowing software control of the capture mode and the API resource is minimized by optimizing out.

**void Timer\_SetTriggerMode (uint8 triggerMode)**

**Description:** Sets the trigger mode of the timer from one of the enumerated type options available.

**Parameters:** enum: triggerMode – This parameter should be defined using one of the trigger mode constants defined in the *Timer.h* header file.

Available enum values are:

```
Timer__B_TIMER__TM_NONE
Timer__B_TIMER__TM_RISINGEDGE
Timer__B_TIMER__TM_FALLINGEDGE
Timer__B_TIMER__TM_EITHEREDGE
Timer__B_TIMER__TM_SOFTWARE
```

**Return Value:** None

**Side Effects:** Only available if the trigger mode is set to Software Controlled. Resource usage may be minimized by not allowing software control of the trigger mode and the API resource is minimized by optimizing out.

**void Timer\_EnableTrigger (void)**

**Description:** Enables the trigger mode of the timer by setting the 4th bit in the control register.

**Parameters:** None

**Return Value:** None

**Side Effects:** None



**PRELIMINARY**

## void Timer\_DisableTrigger (void)

**Description:** Disables the trigger mode of the timer by resetting the 4th bit in the control register.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void Timer\_SetInterruptCount (uint8 interruptCount)

**Description:** Sets the number of captures to count before an interrupt is triggered for the InterruptOnCapture source. This function is available only when InterruptOnCaptureCount is enabled and the control register is not removed.

**Parameters:** uint8: interruptCount – The desired number of capture events to count before the interrupt is on capture event is triggered to the interrupt output. A value between 0-3 is valid.

**Return Value:** None

**Side Effects:** None

## void Timer\_SetCaptureCount (uint8 captureCount)

**Description:** Sets the number of capture events to count before a capture is actually performed. This function is only available if the **Enable Capture Counter** parameter is selected on the Configure dialog.

**Parameters:** uint8: captureCount – The desired number of capture events to count before capturing the counter value to the capture FIFO

**Return Value:** None

**Side Effects:** None

## uint8 Timer\_ReadCaptureCount (void)

**Description:** Reads the current value set for the captureCount parameter as set in the SetCaptureCount function. This function is only available if the **Enable Capture Counter** parameter is selected on the Configure dialog.

**Parameters:** None

**Return Value:** uint8: current capture count

**Side Effects:** None

## void Timer\_SoftwareCapture (void)

**Description:** Forces a software capture of the period counter value to the FIFO

**Parameters:** None

**Return Value:** none:

**Side Effects:** Pushes another value onto the capture FIFO

**PRELIMINARY**



## uint8 Timer\_ReadStatusRegister (void)

**Description:** Returns the current state of the status register

**Parameters:** None

**Return Value:** uint8: Current status register value. The Status register bits are:  
[7:4] : Unused (0)  
[3] : FIFO not empty status  
[2] : FIFO full status  
[1] : Registered Capture value  
[0] : Terminal count

**Side Effects:** Interrupt bits in the status register are clear on read.

## uint8 Timer\_ReadControlRegister (void)

**Description:** Returns the current state of the control register. This API is available only if control register is not removed.

**Parameters:** None

**Return Value:** uint8: Current control register value.

**Side Effects:** None

## void Timer\_WriteControlRegister (uint8 control)

**Description:** Sets the bit-field of the control register. This API is available only if control register is not removed.

**Parameters:** uint8: Control – Control register Bit-Field. This parameter should be an OR'd grouping of the control register constants. The control register bits are:  
[7] : Timer Enable  
[6:5] : Capture Mode select  
[4] : Trigger Enable  
[3:2] : Trigger Mode select  
[1:0] : Interrupt count

**Return Value:** None

**Side Effects:** None

## uint8/16/32 Timer\_ReadPeriod (void)

**Description:** Reads the Period register returning the last period value written to it.

**Parameters:** None

**Return Value:** uint8/16/32: Period Value

**Side Effects:** None



**PRELIMINARY**

**void Timer\_WritePeriod (uint8/16/32 period)**

- Description:** Writes the Period register with the new desired period or max counts value.
- Parameters:** uint8/16/32: Period – New Period Value
- Return Value:** None
- Side Effects:** This period value will not be implemented until the current Timer period is complete (that is, at TC). When TC is reached the new period value will be loaded into the counter and the new period time will take affect until the period value is written over.  
**Note** If the desired period from the Timer is 'n' times units period, the value passed to this API must be 'n-1'.

**uint8/16/32 Timer\_ReadCounter (void)**

- Description:** Forces a software capture of the period value into the capture FIFO and oldest data from the capture FIFO
- Parameters:** None
- Return Value:** uint8/16/32: Counter Value
- Side Effects:** If there was already capture data in the FIFO before this function is called then the existing data will be returned and the forced software capture value will be added to the FIFO and may be read later with a ReadCapture() call. The user should check the status of the FIFO before calling the ReadCounter() API to avoid reading unexpected data from the FIFO.

**void Timer\_WriteCounter (uint8/16/32 counter)**

- Description:** Writes a value to the counter enabling the user to restart the counter from any value they deem necessary.
- Parameters:** uint8/16/32: Counter – New Counter Value
- Return Value:** None
- Side Effects:** None

**PRELIMINARY**



## uint8/16/32 Timer\_ReadCapture (void)

- Description:** Reads the latest captured period counter value. If no value has been captured to the FIFO then this value will be the current period counter value.
- Parameters:** None
- Return Value:** uint8/16/32: Counter or Capture Value
- Side Effects:** Once the FIFO is fully read/emptied or it is cleared using ClearFIFO() and no more captures are taking place, then you can still read the capture FIFO content using the ReadCapture API. ReadCapture always returns a value from top of the FIFO because it returns TIMER\_LSB\_PTR. If you use this API, check for capture FIFO empty status before calling this API.

## void Timer\_ClearFIFO (void)

- Description:** Clears the capture FIFO of any previously captured data. Here Read capture is called until FIFO becomes empty.
- Parameters:** None
- Return Value:** None
- Side Effects:** None

## void Timer\_Sleep (void)

- Description:** Stops the Timer operation and saves the user configuration. If Control Register is being used the enable state of the Timer is saved.
- Parameters:** None
- Return Value:** None
- Side Effects:** None

## void Timer\_Wakeup (void)

- Description:** Restores and enables the user configuration.
- Parameters:** None
- Return Value:** None
- Side Effects:** None



**PRELIMINARY**

## void Timer\_SaveConfig(void)

**Description:** Saves the configuration of Timer. Counter and capture values are saved. In UDB mode the control register value is saved if its not removed.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void Timer\_RestoreConfig(void)

**Description:** Restores the configuration of Timer.

**Parameters:** None

**Return Value:** None

**Side Effects:** Calling this function without calling Timer\_SaveConfig() may produce unexpected behavior.

## Sample Firmware Source Code

The following is a C language example demonstrating the basic functionality of the Timer component. This example assumes the component has been placed in a design with the default name "Timer\_1."

Note If you rename your component you must also edit the example code as appropriate to match the component name you specify.

```
#include <device.h>

void main()
{
    Timer_1_Start();
}
```

PRELIMINARY



## Functional Description

As described previously the Timer component can be configured for multiple uses. This section will describe those configurations in more detail. Before digging into the possible configurations it is important to know the limitations of using the fixed function timer versus the UDB implementation.

### Fixed Function Block Limitations


The Counter, Timer, and PWM components have very similar internal requirements that are implemented as fixed function blocks in the chip. There are a few configuration options for one of these blocks, and the limitations of this block as a timer versus the UDB implementation are listed below. The fixed function timer:

- Is 8 or 16-bits only
- Interrupts on Terminal Count and/or Capture only.
- Captures on Rising Edge only.
- Must be run in continuous mode; As a corollary, no trigger mode is available.
- Disables the 7-bit Capture Counter.
- Has a single sample register instead of a 4 sample FIFO for captured values.

### Default Configuration

The default configuration of the Timer component provides the most basic timer which simply decrements a period count value on every rising edge of the clock input. With this configuration the component symbol will look like this:

**Figure 1: Default Timer Configuration**

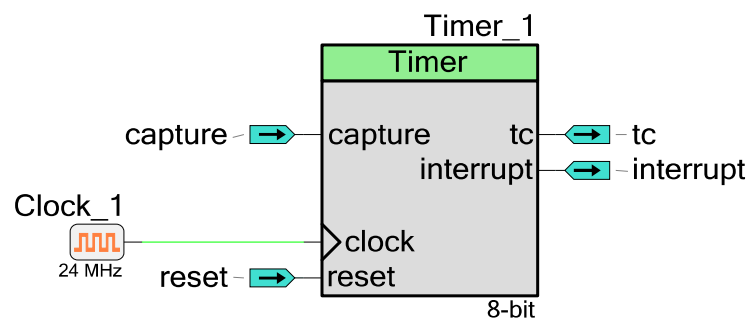

Terminal count indicates in real time whether the counter value is at the terminal count (zero). The period is programmable to be any value from 1 to  $(2^{\text{Resolution}}) - 1$ .

By default the capture functionality is configured to capture on every rising edge of the capture input. Since the default configuration is using the fixed function block the only option for capture




**PRELIMINARY**

mode is rising edge. Other modes are available when the implementation is changed to the UDB selection.

The following is a waveform showing the expected results.

**Figure 2: Default Timer Implementation Example Waveform**

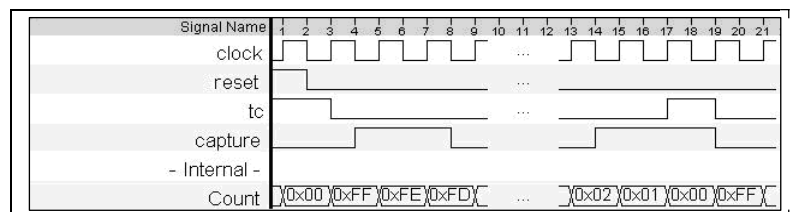

## Fixed Function Configuration


When configured to use the Fixed Function block for the Timer implementation, the Timer component is limited in placement options to one of the Fixed Function blocks on the chip. You should consider your resource needs when choosing to implement the Timer component in the fixed function block as an 8-bit timer placed in the Fixed Function block wastes half of the fixed function block.

## High/Low Time Measure Mode

It is often important to measure the high and low times of a signal. The Timer can be configured to make this implementation much simpler. By configuring the Trigger Mode as "Rising Edge" and the Capture Mode as "Either Edge," the Timer will start on the first rising edge at the Period value and count down capturing each edge of the input signal after that.

As long as data is read in a timely manner from the capture FIFO, the calculations for High and Low time will be as follows:

**Figure 3 High/Low Time Calculations**

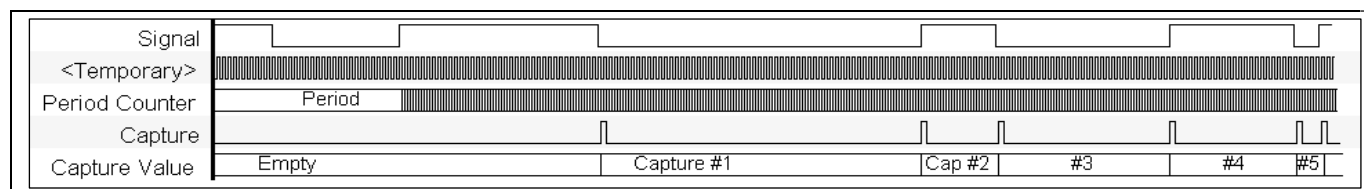


1. High Time #1 = (Period – Capture #1) \* Clock Frequency
2. Low Time #1 = (Capture #1 – Capture #2) \* Clock Frequency
3. High Time #2 = (Capture #2 – Capture #3) \* Clock Frequency
4. Etc.

**PRELIMINARY**




With the following Schematic implementation, setting the Trigger Mode to "Falling Edge" will first measure the low time and continue with alternating edge types until the timer is enabled or reset:

**Figure 4 Timer Schematic**

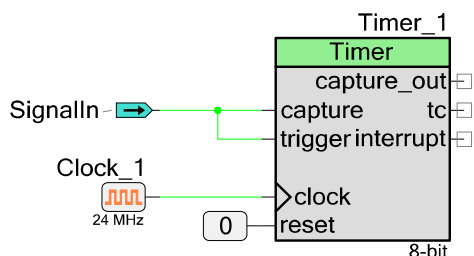

## Reset in Fixed Function Block

On PSoC3 ES2 silicon, the fixed function implementation of the Timer differs from the UDB implementation in that the TC during reset goes high, whereas in the UDB implementation the TC goes low. The schematic below shows a Fixed Function Timer implementation which drives the TC low while the reset input is active, thus giving the same functionality as the UDB implementation of the same component.

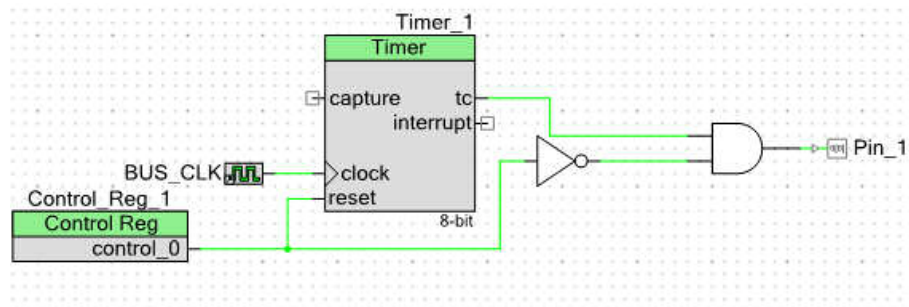


## Block Diagram and Configuration

The Timer component may be implemented using a fixed function block or using UDB components. An advance parameter "Implementation" (FixedFunction) allows you to specify the block that you expect this component to be placed in or you may choose the Auto implementation, which will select either of these implementations at build time based on the components and parameters of your entire design.

The Fixed function implementation will consume one of the Timer/Counter/PWM blocks defined in the TRM. In either the fixed function or UDB configuration all of the registers and API are consolidated to give a single entity look and feel. The API is described in the previous section and the registers are described here to define the overall implementation of the Timer.

The two hardware implementations you chose are selected from a top level schematic as shown in the following diagram:

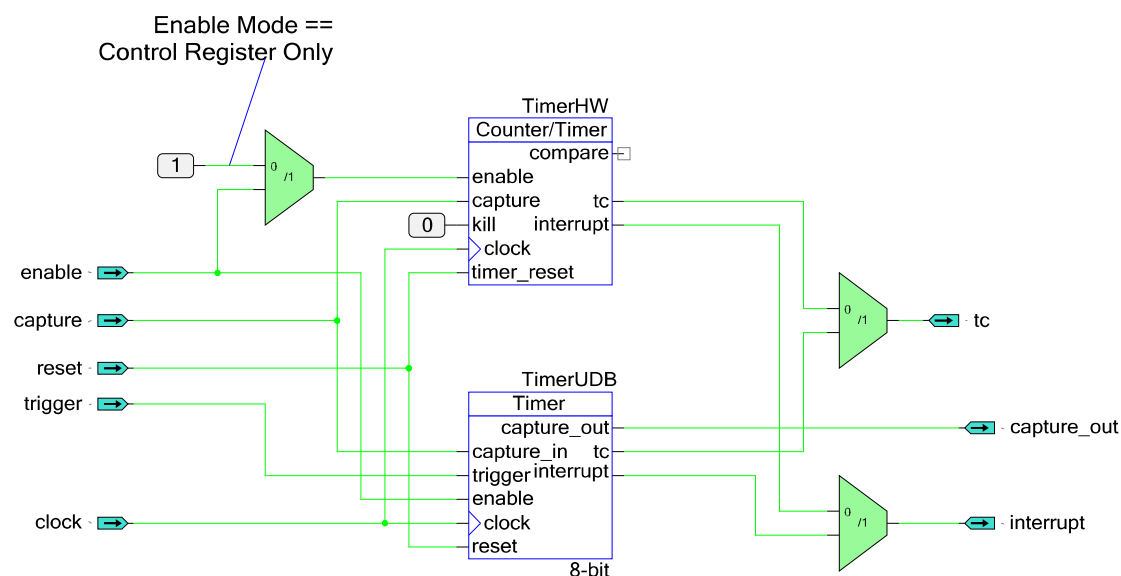**Figure 5 Timer Implementations Schematic**

This configuration allows for either the Fixed Function block or the UDB implementation to be selected and the extra pieces such as the internal interrupt and the routing of the I/O are handled in the background to give this single component look and feel.

## Registers

### Timer\_Status

The status register is a read only register which contains the various status bits defined for the Timer component. The value of this register is available with the `Timer_ReadStatusRegister()` function call. The interrupt output signal (`interrupt`) is generated from an OR'ing of the masked bit-fields within this register. You can set the mask using the `Timer_SetInterruptMode()` function call and upon receiving an interrupt you can retrieve the interrupt source by reading the Status register with the `Timer_GetInterruptSource()` function call. The Status register is a clear on read register so the interrupt source is held until the `Timer_GetInterruptSource()` or the `Timer_ReadStatusRegister()` function is called. The `Timer_GetInterruptSource()` API will handle which interrupts are enabled to provide an accurate report of what the actual source of the interrupt was. All operations on the status register must use the following defines for the bit-fields as these bit-fields may be moved around within the status register during place and route.

The status data is registered at the input clock edge of the counter giving all bits configured as `Mode=1` the timing resolution of the counter, these bits are sticky and are cleared on a read of the status register. All other bits configured as `mode=0` are transparent and read directly from the inputs to the status register, they are not sticky and therefore not clear on read. All bits configured as `Mode=1` are indicated with an asterisk (\*) in the defines listed below.

**PRELIMINARY**



There are several bit-fields masks defined in the status register. Any of these bit-fields may be included as an interrupt source. The #defines are available in the generated header file (.h) as follows:

- `Timer_STATUS_TC *` – Indicates a terminal count has been reached. This bit may be used as an interrupt source.
- `Timer_STATUS_CAPTURE *` – Indicates a Capture event has been triggered. This bit may be used as an interrupt source.
- `Timer_STATUS_FIFO_FULL` – Indicates that the capture FIFO is full. This bit may be used as an interrupt source.
- `Timer_STATUS_FIFO_NEMPTY` – Indicates that the capture FIFO is not empty.

**Note** The `Timer_STATUS_FIFO_FULL` and `Timer_STATUS_FIFO_NEMPTY` bits are not available for the Fixed-Function implementation of the Timer component since there is no FIFO available.

## Timer\_Control

The Control register allows you to control the general operation of the counter. This register is written with the `Timer_WriteControl()` function call and read with the `Timer_ReadControl()`. When reading or writing the control register you must use the bit-field definitions as defined in the header (.h) file. The #defines for the control register are as follows:

- `Timer_CTRL_INTCNT` – The interrupt count control is a 3-bit field that allows you to configure the number of captures to count before an interrupt is triggered. The value of this bit-field defines a value of 1-4 (as 0-3 + 1) for the number of capture events to count. Set this value by calling the `Timer_SetInterruptCount()` function with a value of 0-3.
- `Timer_CTRL_TRIGPOL` – The trigger polarity mode control is a 2-bit field used to define the expected trigger input operation. This bit-field will be 2 consecutive bits in the control register and all operations on this bit-field must use the #defines associated with the capture types available. These are:
  - `Timer__B_TIMER__TM_NONE`
  - `Timer__B_TIMER__TM_RISINGEDGE`
  - `Timer__B_TIMER__TM_FALLINGEDGE`
  - `Timer__B_TIMER__TM_EITHEREDGE`

This bit-field is configured at initialization with the trigger type defined in the `TriggerMode` parameter. Or this functionality can be set with the `Timer_SetTriggerMode()` function passing one of the enumerated values listed above. There is no trigger function in the Fixed Function block.

- `Timer_CTRL_TRIG_EN` – The trigger enable control allows you to disable the trigger functionality through software for any period of time when that functionality is not required. While this bit is zero the Timer component will function normally. If this bit set to zero



PRELIMINARY

while the timer is waiting for a trigger event the Timer component will resume operation as if a trigger has happened.

- **Timer\_CTRL\_CPOL** – The capture polarity mode control is a 2-bit field used to define the expected capture input operation. This bit-field is 2 consecutive bits in the control register and all operations on this bit-field must use the #defines associated with the capture types available. These are:
  - `Timer__B_TIMER__CM_NONE`
  - `Timer__B_TIMER__CM_RISING`
  - `Timer__B_TIMER__CM_FALLING`
  - `Timer__B_TIMER__CM_EITHER`
  - `Timer__B_TIMER__CM_ALT_RISING`
  - `Timer__B_TIMER__CM_ALT_FALLING`

This bit-field is configured at initialization with the capture type defined in the CaptureMode parameter.

- **Timer\_CTRL\_ENABLE** – The enable bit controls software enabling of the Timer component operation. The Timer component has a configurable enable mode defined at build time. If the Enable mode parameter is set to “Input Only” then the functionality of this bit is none. However in either of the other modes the Timer component does not decrement if this bit is not set to one. Normal operation requires that this bit is set and held at one during all operation of the Timer component.

### **Capture (8, 16, 24 or 32-bit based on Resolution)**

The capture register contains the FIFO's capture counter value. Any hardware capture event will push the current counter value onto this FIFO. The FIFO is read one entry at a time using the `Timer_ReadCapture()` function call. It may be useful to read the status register for the level indication of the FIFO before trying to read from the FIFO.

Additionally the `Timer_1_ReadCounter()` function call forces a capture of data to the FIFO and returns the oldest data from the FIFO, thus adding one capture to the FIFO and removing one capture. This information is indicated in the `STATUS_FIFOFULL` and `STATUS_FIFONEMPTY` status bits. Hardware captures are blocked while the FIFO is full preventing overwriting of data in the FIFO. The user must handle data in the FIFO in a timely manner to avoid missing capture data.

### **Period (8, 16, 24 or 32-bit based on Resolution)**

The period register contains the period value set by the user through the `Timer_WritePeriod()` function call and defined by the Period parameter at initialization. The Period register has no affect on the Timer component until a terminal count is reached at which time the period counter register is reloaded.

**PRELIMINARY**





## Counter (8, 16, 24 or 32-bit based on Resolution)

The counter register contains the period counter value throughout the operation of the Timer component. Any hardware capture event will push the current counter value onto the FIFO. This counter is decremented on each rising edge of the clock input so long as the Timer component is in an enabled state. The counter register should not be written to from the CPU.

## Component Debug Window

The Timer component supports the PSoC Creator component debug window. Refer to the appropriate device data sheet for a detailed description of each register. The following registers are displayed in the Timer component debug window. Some registers are available in the UDB implementation (indicated by \*) and some registers are only available in the Fixed Function Implementation (indicated by \*\*). All other registers are available for either configuration.

<b>Register:</b>	Timer_1_CONTROL
<b>Name:</b>	Control Register
<b>Description:</b>	Refer to Timer_Control register description above for bit-field definitions.
<b>Register:</b>	Timer_1_CONTROL2 **
<b>Name:</b>	Fixed Function Control Register #2
<b>Description:</b>	The Fixed Function Timer block has a second configuration register. Refer to the Technical Reference Manual for bit-field definitions.
<b>Register:</b>	Timer_1_STATUS_MASK *
<b>Name:</b>	Status Register Interrupt Mask Configuration
<b>Description:</b>	Allows the user to enable any status bit as an interrupt source at the interrupt output pin of the component. Refer to Timer_Status register description above for 1-to-1 correlation of bit-field definitions.
<b>Register:</b>	Timer_1_STATUS_AUX_CTRL *
<b>Name:</b>	Auxilliary Control Register for the Status Register
<b>Description:</b>	Allows the user to enable the interrupt output of the internal status register through the bit-field "INT_EN". Refer to the Technical Reference Manual for bit-field definitions.
<b>Register:</b>	Timer_1_STATUS_MASK *
<b>Name:</b>	Status Register Interrupt Mask Configuration
<b>Description:</b>	Enables interrupt mask bits with a 1-to-1 correspondence to the status register (Timer_Status) bit-field descriptions above.



**PRELIMINARY**

<b>Register:</b>	Timer_1_PERIOD
<b>Name:</b>	Timer Period Register
<b>Description:</b>	Defines the period value reloaded into the period counter at the beginning of each cycle of the Timer.
<b>Register:</b>	Timer_1_COUNTER
<b>Name:</b>	Timer Counter Register
<b>Description:</b>	Indicates the current counter value (in clock cycles from Period down to zero) of the current timer period cycle.
<b>Register:</b>	Timer_1_GLOBAL_ENABLE **
<b>Name:</b>	Fixed Function Timer Global Enable Register
<b>Description:</b>	Enables the Fixed Function Timer for operation. Refer to the Technical Reference Manual for bit-field definitions.

## Conditional Compilation Information

The counter API requires two conditional compile definitions to handle the multiple configurations it must support. It is required that the API conditionally compile on the Resolution chosen and the Implementation chosen from either the fixed function block or the UDB blocks. The two conditions defined are based on the parameters FixedFunction and Resolution. The API should never use these parameters directly but should use the two defines listed below.

### Timer\_DataWidth

The datawidth define is assigned to the Resolution value at build time. It is used throughout the API to compile in the correct data width types for the API functions relying on this information.

### Timer\_UsingFixedFunction

The Using Fixed Function define is used mostly in the header file to make the correct register assignments as the registers provided in the fixed function block are different than those used when the Timer component is implemented in UDB's. In some cases this define is also used with the DataWidth define because the Fixed Function block is limited to 16 bits maximum data width.

## Constants

There are several constants defined for the status and control registers as well as some of the enumerated types. Most of these are described above for the Control and Status Register. However there are more constants needed in the header file to make all of this happen. Each of the register definitions requires either a pointer into the register data or a register address. Because of multiple Endianness` of the compilers, it is required that the CY\_GET\_REGX and

**PRELIMINARY**




CY\_SET\_REGX macros are used for register accesses greater than 8-bits. These macros require the use of the \_PTR definition for each of the registers.

It is also required that the control and status register bits be allowed to be placed and routed by the fitter engine in that we must have constants that define the placement of the bits. For each of the status and control register bits there is an associated \_SHIFT value which defines the bit's offset within the register. These are used in the header file to define the final bit mask as an \_MASK definition (The \_MASK extension is only added to bit-fields greater than a single bit, all single bit values drop the \_MASK extension).

The fixed function block has some limitations compared to the UDB implementations because it is designed with limited configurability. The UDB implementation is implemented according to the following block diagram.

**Figure 6 UDB Implementation**

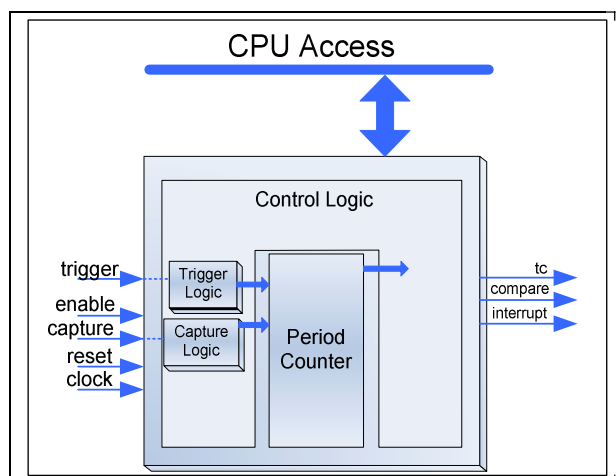

The block diagram above shows the Timer component period counter implemented as a datapath and some control logic. There is a status register and a control register that feed into and come out of the logic cloud as well. All of the logic for the Timer component is the same whether the datapath is 8, 16, 24, or 32 bits wide.

## References

Not applicable

## DC and AC Electrical Characteristics

### 5.0V/3.3V DC and AC Electrical Characteristics

Parameter	Typical	Min	Max	Units	Conditions and Notes
Input					
Input Voltage Range	---		Vss to Vdd	V	
Input Capacitance	---		---	pF	
Input Impedance	---		---	$\Omega$	
Maximum Clock Rate	---		67	MHz	

## Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.50.a	Added information to the component that advertizes its compatibility with silicon revisions.	The tool reports an error/warning if the component is used on incompatible silicon. If this happens, update to a revision that supports your target device.
1.50	Added Sleep/Wakeup and Init/Enable APIs.	To support low power modes, as well as to provide common interfaces to separate control of initialization and enabling of most components.
	Updated the Verilog file to implement address an issue where Capture logic does not check for FIFO status.	Capture implementation does not check for FIFO status. If captures are done even after FIFO is full, the oldest value gets overwritten, and so on. So, FIFO has to be read before the values get overwritten.
	Updated the Verilog file so that the Trigger mode implementation starts the Timer only after triggering the Timer.	This change addresses a noted issue with a previous version of the Timer. The Timer should start only after triggering it if Trigger Mode is used.
	Updated the Configure dialog to display a warning if an incorrect configuration combination of parameters is used.	In certain combinations of parameters, One Shot mode does not work. So a warning was added to indicate when those certain parameters are used.
	Updated the Configure dialog to show capture out terminal when Fixed Function Timer is chosen.	When using a Fixed Function Timer, the capture_out terminal was getting incorrectly hidden giving an impression that capture is not supported in Fixed Function mode.
	Updated the Configure dialog to hide the capture count value field when a Fixed Function Timer is used.	The Capture Count feature should not be available for the Fixed Function Timer but this was visible.
	Updated how the Period count value is calculated.	In earlier versions of the Timer, the Period displayed in Configure dialog was incorrect. This is fixed by making the count value loaded to the count register off by one. Timers

**PRELIMINARY**



Version	Description of Changes	Reason for Changes / Impact
		that are updated from earlier versions will behave identically but the Period displayed in the Configure dialog will be one higher than before.
	Updated how reset works to be synchronous with the clock.	Reset is synchronous with the clock. It requires at least one clock cycle to reset the Timer. Clarified this in the data sheet.
	Fixed a warning related to the 'Counter' parameter in the WriteCounter() API.	The 'Counter' parameter was undefined in the FF block of the WriteCounter() API. Therefore, a warning was getting generated. Now the 'Counter' parameter is included.
	Changed the ReadCounter() API to be a single cycle operation for all Timer resolutions.	When using the software capture option of the UDB FIFOs, it is critically important that we don't do a CY_GET_REG16/24/32 to force the capture. This implements 2/3/4 reads, 1/2/3 shifts and a large OR of the results which takes a lot of cycles and isn't interrupt protected.
	Update the Verilog code to fix an issue with the Timer 7-bit counter.	The 7-bit counter for capture count was being clocked by a combinatorial signal. The counter has an enable signal which should be used to cause the counter to count or not count rather than gating the clock. So now the Timer 7-bit counter for capture count is being clocked by a DP clock.
	Added Keil function reentrancy support to the relevant APIs.	Add the capability for customers to specify individual generated functions as reentrant.
	Updated the API files to add support for PSoC 3 ES3 and PSoC 5 ES2 silicon.	In PSoC 3 ES2 / PSoC 5 ES1, [3:1] bits of the CFG1 register must be used to set the run mode. In PSoC 3 ES3 / PSoC 5 ES2, [1:0] bits of CFG2 register must be used to set the run mode.
	Added sync mode support for the Control Register.	To fix the critical timing violation and to reduce the timing constraints.

© Cypress Semiconductor Corporation, 2008-2010. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.



**PRELIMINARY**