


4-Point High-Pass FIR Filter Controller

State Transition Diagram

No separate state for setting cnt_up high, ZERO does it

No separate state for clearing the counter, LOAD_F0 does it

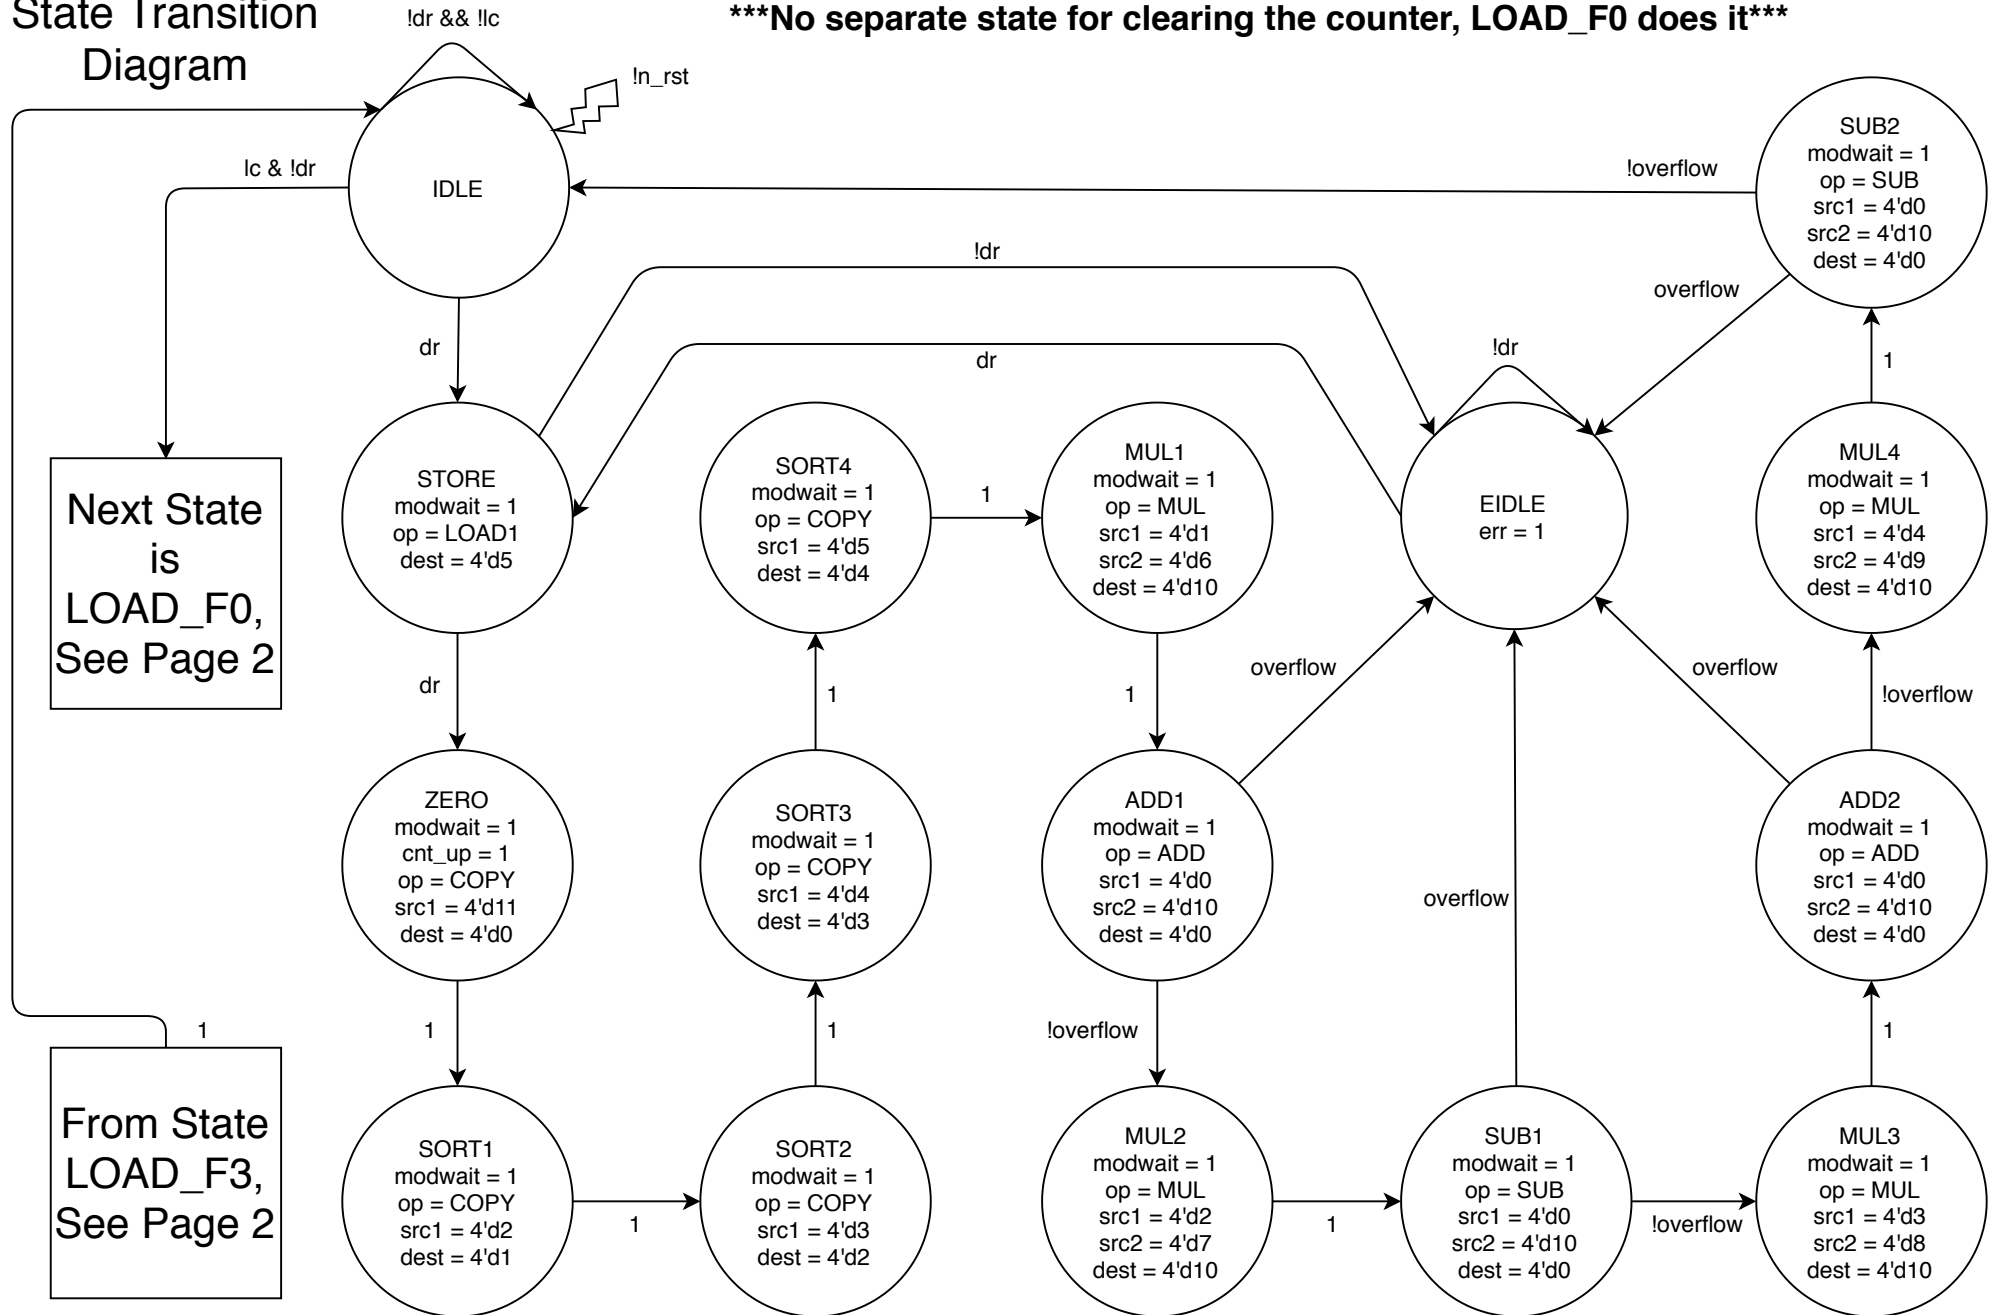

From IDLE,
See Page 1

To IDLE,
See Page 1

