


CHECK TRANSMISSION FOR OIL LEAKAGE

CHECK OIL LEAKAGE


Check the transmission case for oil leakage visually or by touching it with hand.

NOTE: If an oil leakage is not detected, the oil level check is necessary.

CHECK OIL LEVEL

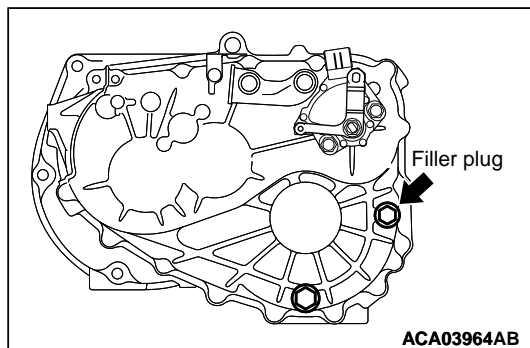

1. Remove the filler plug and gasket.

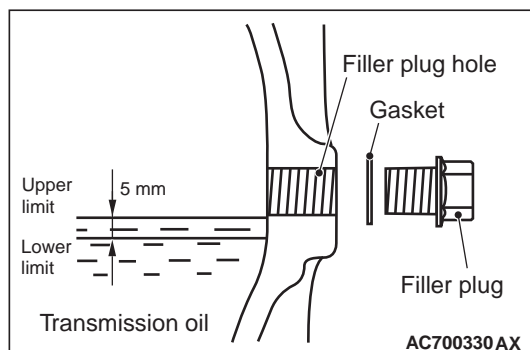

2. Check that the oil level is in the range between the upper limit (filler plug hole lower end) and lower limit as shown in the figure.
3. Check that the oil is not excessively foul and has moderate viscosity.


4. If the oil level is not in between the upper limit and the lower limit, refill the specified gear oil to the bottom of the oil filler plug hole.

Transmission oil:
GENUINE ATF SP III

5. Install a new gasket to the oil filler plug, and then tighten the plug to the specified torque.

Tightening torque: 32 ± 2 N·m

CHANGE GEAR OIL IN TRANSMISSION

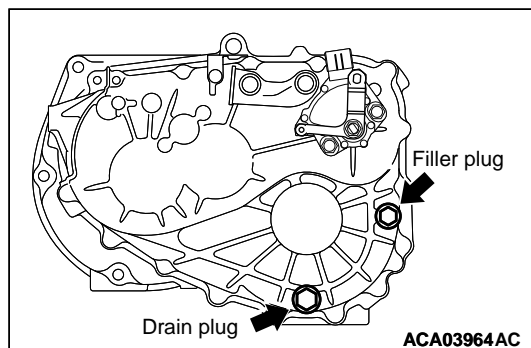

1. Remove the filler plug.
2. Remove the drain plug, and drain the oil.
3. Install a new gasket to the drain plug, and then tighten the plug to the specified torque.

Tightening torque: 32 ± 2 N·m

4. Fill the specified oil up to the bottom end of oil filler plug hole.

Transmission oil:
GENUINE ATF SP III

Quantity: 0.75 L

5. Install a new gasket to the filler plug, and then tighten the plug to the specified torque.

Tightening torque: 32 ± 2 N·m