







## MaxAir – Status Indicators

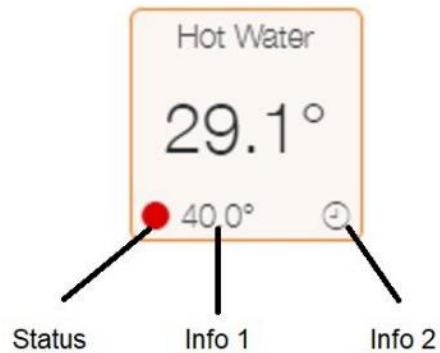








MaxAir implements status indicators, which reflect the current operational state of the system. These indicators vary depending on the function of the on-screen tile.

### Zone Tiles





Status	Meaning
	Fault or Idle
	Deadband or Coop
	Away, Holidays or Hysteresis
	Running
	All other states

Info 1	Meaning
Numeric Value	Target Temperature for the Zone

Info 2	Meaning
	Controller or Sensor Fault
	Schedule Running
	Zone Overrun
	Manual Mode
	Override in Operation
	Maximum Zone Temperature Exceeded
	Night Climate in Operation
	Away in Operation
	Holiday Schedule in Operation
	Boost in Operation


## Sensor Tiles



Status	Meaning
	Normal Operation
	Sensor has Not Reported within timeout

## System Controller Tile

The System Controller Tile uses colour coding of the flame to indicate the current state.

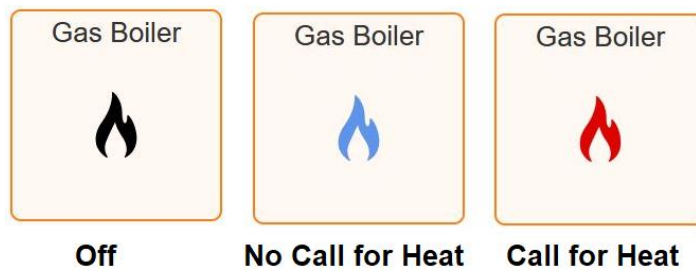

Additional information is shown by the right corner status indicator.

