


MaxAir Technical – Zone Types

MaxAir supports zones based on their type, these types define the basic capability of the zone:

- Associated with a sensor, zone controller relays and system controller relays
- Associated with a sensor and zone controller relays
- Associated with only zone controller relays
- Associated with a sensor and system controller relays

A number of Zone Types are pre-defined:

- Heating – has a temperature sensor, zone controller relays and a system controller relay
- Water – has a temperature sensor, zone controller relays and a system controller relay
- Immersion – has a temperature sensor and zone controller relays
- Switch – has system controller relays
- HVAC – has a temperature sensor and system controller relays
- Humidity - has a humidity sensor and zone controller relays
- Binary – has a ON/OFF sensor and zone controller relays
- HVAC-M – has a temperature sensor, zone controller relays and system controller relays
- Cooling - has a temperature sensor and zone controller relays and works with a negative temperature profile (used to chill a zone).

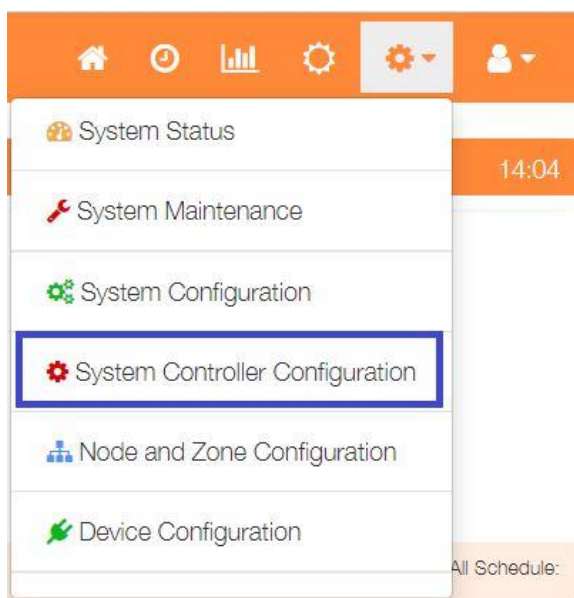










The currently defined Zone Types can be viewed by selecting 'Node and Zone Configuration' from the Settings dropdown list, then clicking the 'Zone Type' button.



Zone Type

Add Zone Type

Type	Category	
Heating	Controller, Sensor and System Control	
Water	Controller, Sensor and System Control	
Immersion	Controller, Sensor and NO System Control	
Switch	Controller, NO Sensor and NO System Control	
HVAC	NO Controller, Sensor and System Control (HVAC)	
Humidity	Controller, Sensor and NO System Control	
Binary	Controller, Sensor and NO System Control	
HVAC-M	Controller, Sensor and System Control (HVAC Multi Zone)	
Cooling	Controller, Sensor and NO System Control (Negative Temperature Profile)	

Close

Add Type

Zone Types can be deleted by clicking on the 'trash' icon or addition ones added by clicking on the 'Add Type' button.

Add Type

You can Add New Zone Types.

Zone Type Zone type i.e. Heating, Hot Water or Electrical Immersion

Category Select Zone Type Category for Process Control



Close

Save

Enter a name for the new Zone the and select the appropriate 'Category' from the dropdown list, finally click on the 'Save' button.