


MaxAir - Setup Sensor Value Notifications

MaxAir can be configured to send email notifications if a sensor value is either below a pre-set minimum value or above a pre-set maximum value.

In order to use this feature 'Email Notifications' must be configured, please see relevant documentation.

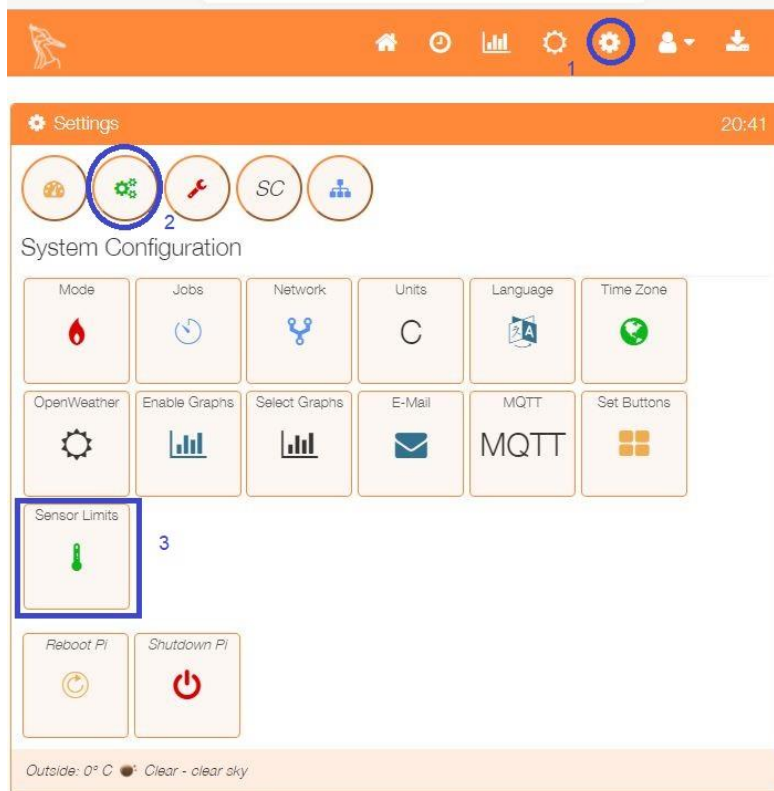

Go to Settings/System Configuration and click on the Sensor Limits menu option.

If no Sensor limits have been defined, then click on the 'Add Sensor Limits' button.

Sensor Limits Settings

Set the Minimum and Maximum Sensor Values and Enable Notification if Limits Exceeded.

Sensor Name	Minimum Value	Maximum Value	Enabled	Edit/Delete
-------------	---------------	---------------	---------	-------------

CloseAdd Sensor Limits

+ Add Sensor Limits
21:00

☒ Enabled Enable Notification if Limits Exceeded.

Sensor Name Select Sensor to which Minimum and Maximum Threshold are to be applied.

Downstairs

Minimum Value Set the Minimum Threshold Value

-1.5

Maximum Value Set the Maximum Threshold Value

26.0

Submit

Cancel

Outside: 0° C ☀ Clear - clear sky

Click to enable these limits.

Select the sensor.

Set the minimum value.

Set the maximum value.

Click 'Submit' to save the limits for the selected sensor.

Sensor Limits Settings

Set the Minimum and Maximum Sensor Values and Enable Notification if Limits Exceeded.

Sensor Name	Minimum Value	Maximum Value	Enabled	Edit/Delete
Downstairs	-1.50	26.00	Yes	<div></div> <div></div>

Close

Add Sensor Limits

Any defined sensor limits can be shown from Settings/System Configuration and click on the Sensor Limits menu option.

Limits for a particular sensor can be either edited or delete from this screen.

Note: Email Notifications needs to be active.