

Soil PH-S (RS485 type) sensor manual


Soil parameters measuring

PH	<ul style="list-style-type: none"> Measuring range: 3-9 PH Accuracy: $\pm 0.3\text{PH}$ Long-term stability: $\leq 5\%/ \text{year}$ Response time: $\leq 10\text{S}$
----	--

Specification

Power supply	DC4.5-30V
Max Power consumption	0.5W@24V DC
Protection class	IP68, long-term immersion in water use
Cable length	2M
Operating environment	-40°C-80°C
Overall dimensions	45 * 15 * 123mm


Size

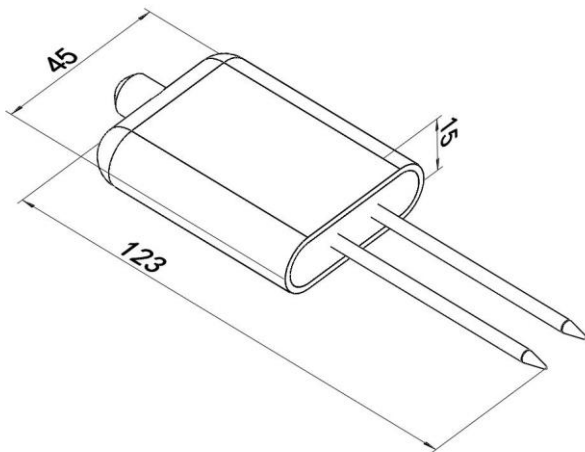


Wiring

Cable color	description
Brown	Power + (DC5-30V)
black	Power -
yellow	RS485 A+
blue	RS485B-

Measuring range

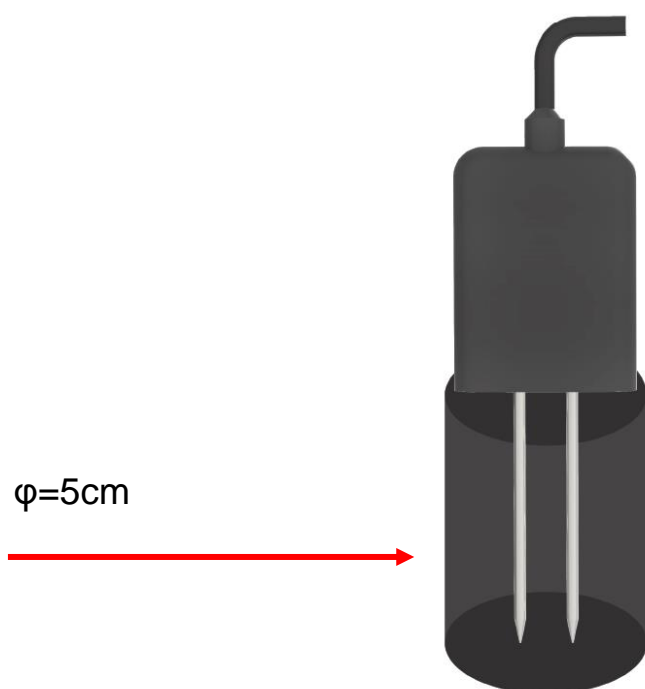

Installation

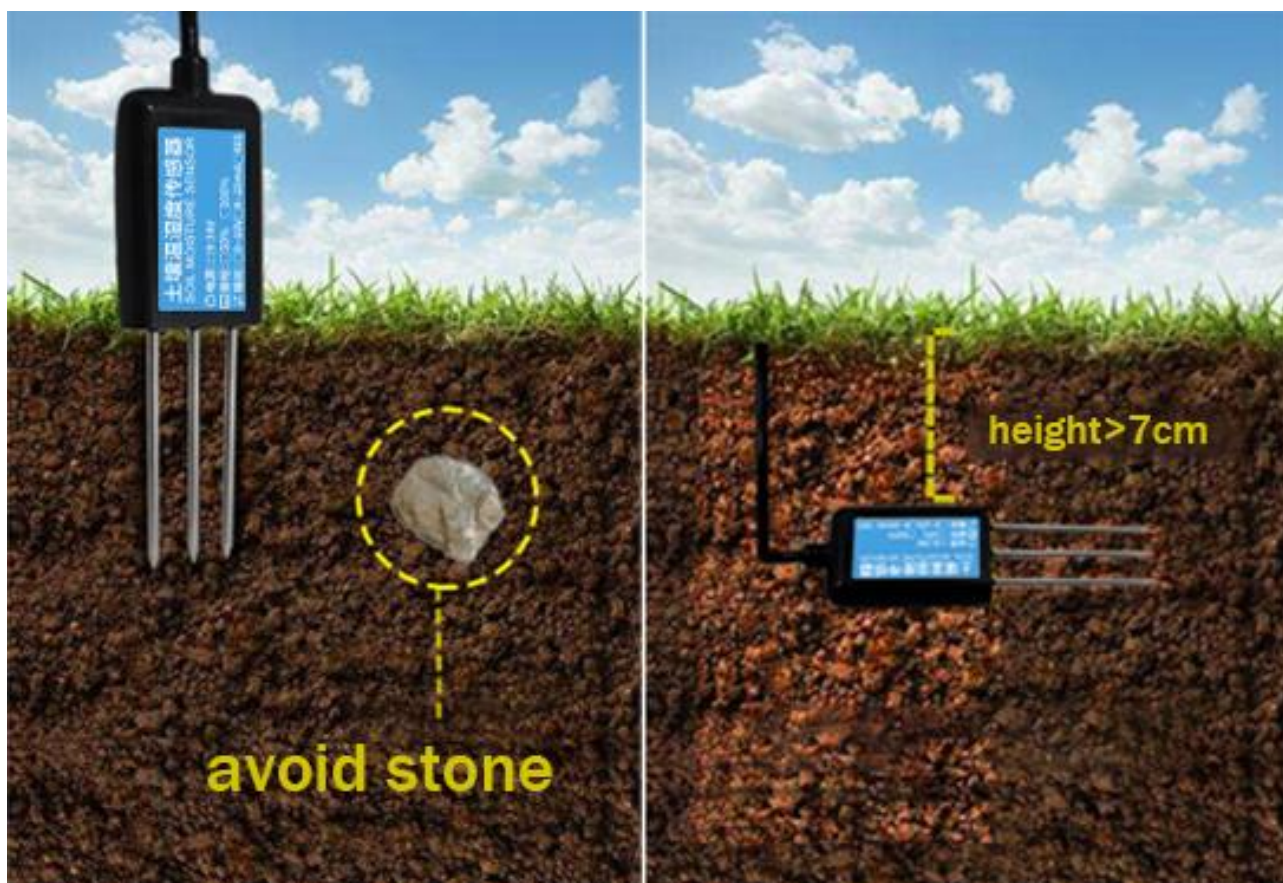

RS485 communication

Default parameters: 4800,n,8,1

Default device address is 1

Modbus RTU protocol

Read status registers, read function code: 0x30					
Register address (Hex)	PLC Address (decimal)	meaning	Number of bytes	unit	remark
0000	40001	PH	2	0.1	
Parameters registers, read function code: 0x30 (0x40), write function code: 0x10					
07D0	42001	Slave ID	2		1-254
07D1	42002	baud rate	2		0: 2400 1: 4800 2: 9600 Default is 4800

E.g. master read PH:

Address	Function Code	Start Address (Hi)	Start Address (Lo)	Number of Points (Hi)	Number of Points (Lo)	Error Check (Lo)	Error Check (Hi)
0x01	0x03	0x00	0x00	0x00	0x01	0x84	0x0A

Sensor responds:

Address	Function Code	Number of byte	PH value	Error Check (Lo)	Error Check (Hi)
0x01	0x03	0x02	0x00 0x42	0x38	0x75

PH calculate:

0042 H= 66 => PH = 6.6

Set slave ID

E.g., set slave ID=2, Master sends

Address	Function Code	Start Address (Hi)	Start Address (Lo)	ID	Error Check (Lo)	Error Check (Hi)
0x01	0x06	0x07	0xD0	0x00 0x02	0x08	0x86

Sensor responds:

Address	Function Code	Start Address (Hi)	Start Address (Lo)	ID	Error Check (Lo)	Error Check (Hi)
0x01	0x06	0x07	0xD0	0x00 0x02	0x08	0x86

Set baud rate

E.g., set baud rate to 9600, Master sends

Address	Function Code	Start Address (Hi)	Start Address (Lo)	command	Error Check (Lo)	Error Check (Hi)
0x01	0x06	0x07	0xD1	0x00 0x02	0x59	0x46

Sensor responds:

Address	Function Code	Start Address (Hi)	Start Address (Lo)	command	Error Check (Lo)	Error Check (Hi)
0x01	0x06	0x07	0xD1	0x00 0x02	0x59	0x46

Enquiry slave ID

Master sends

Address	Function Code	Start Address (Hi)	Start Address (Lo)	Number of Points (Hi)	Number of Points (Lo)	Error Check (Lo)	Error Check (Hi)
0xFF	0x03	0x07	0xD0	0x00	0x01	0x91	0x59

Sensor responds:

Address	Function Code	Number of Points	address	Error Check (Lo)	Error Check (Hi)
0xFF	0x03	0x02	0x00 0x01	0x50	0x50