



ETR CELLMETER STATE MANAGER FLOWCHART

STATE MANAGER

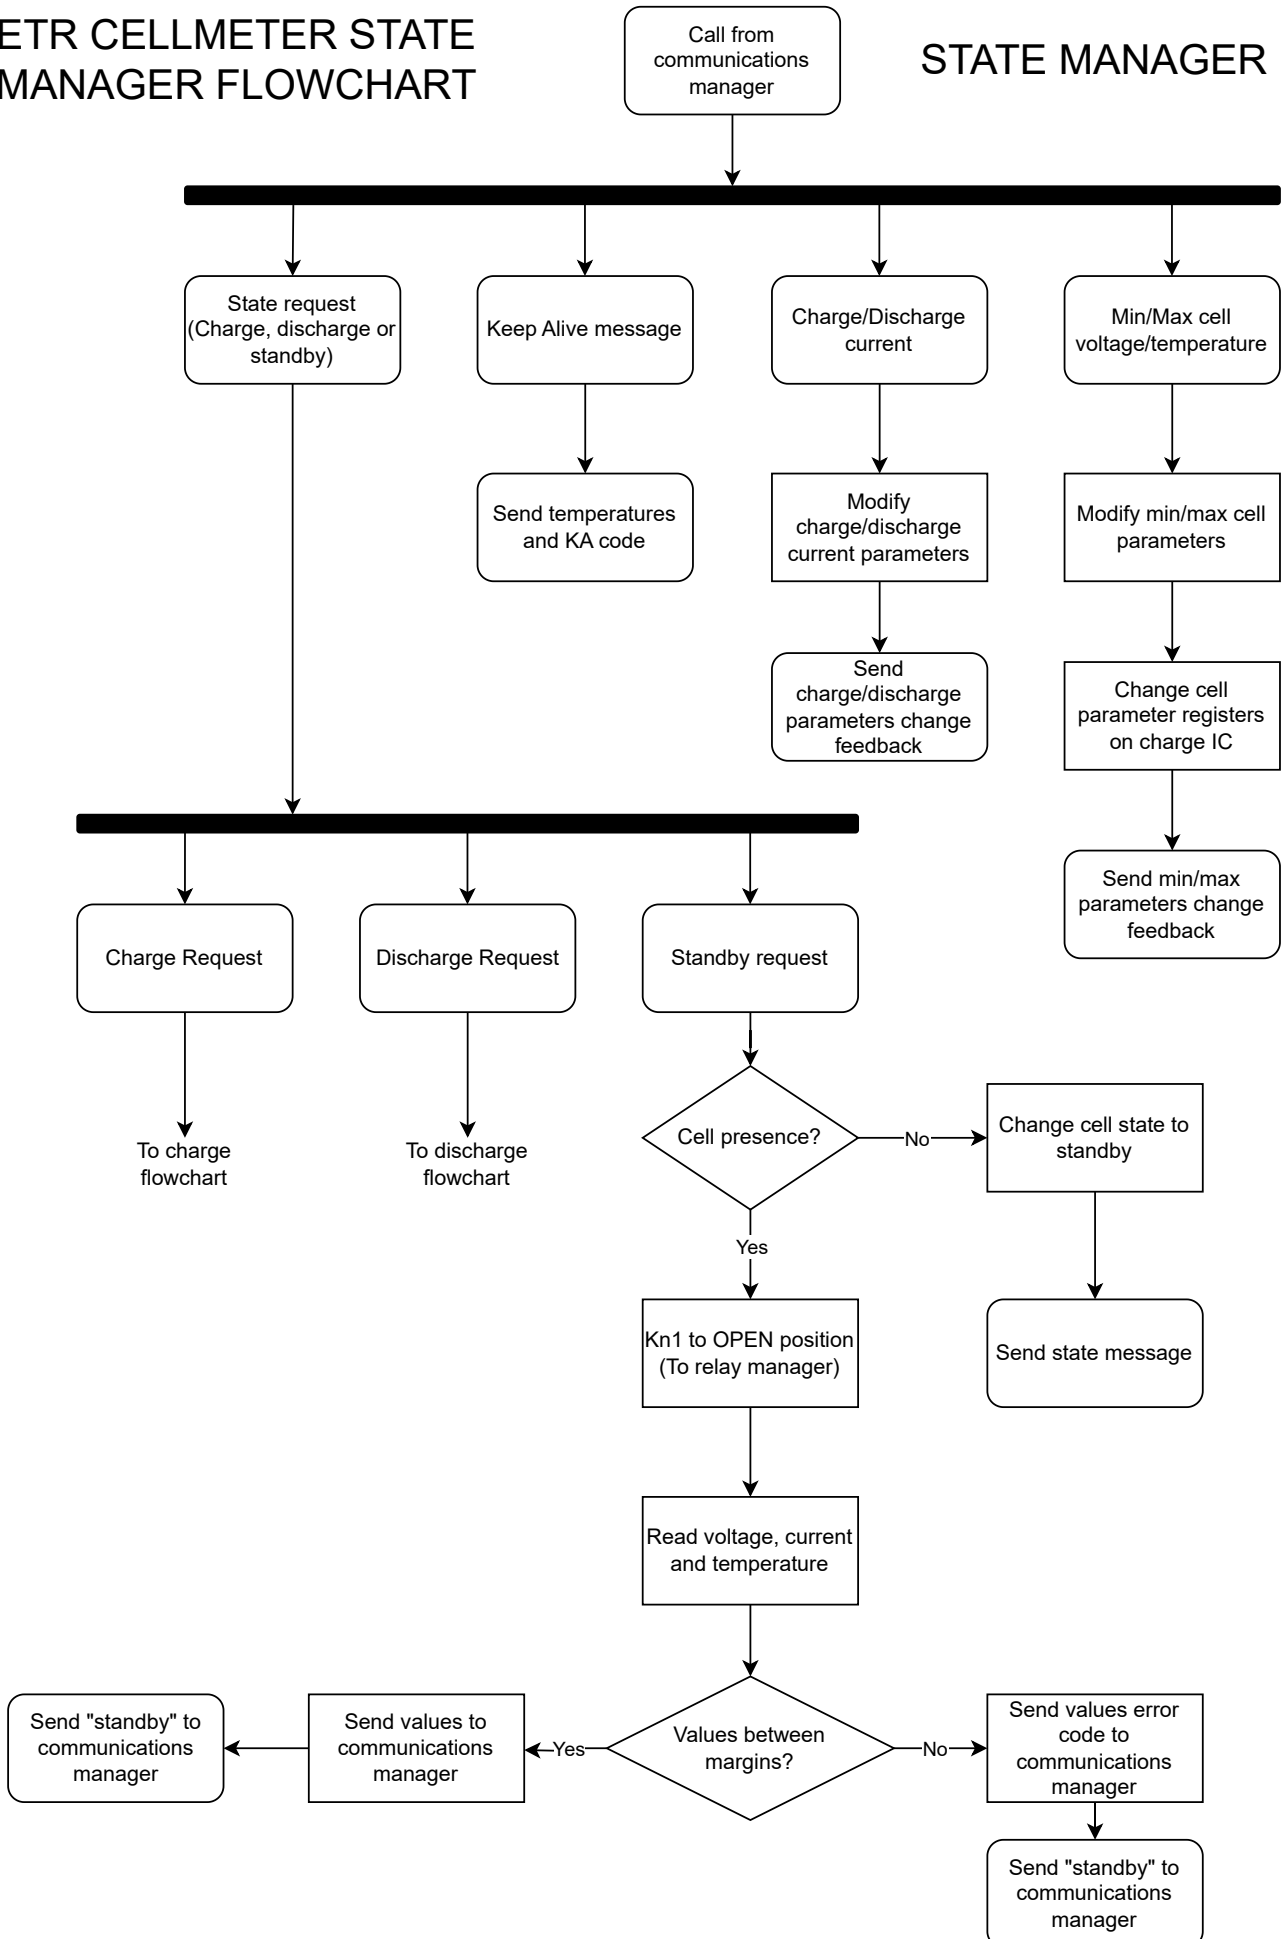

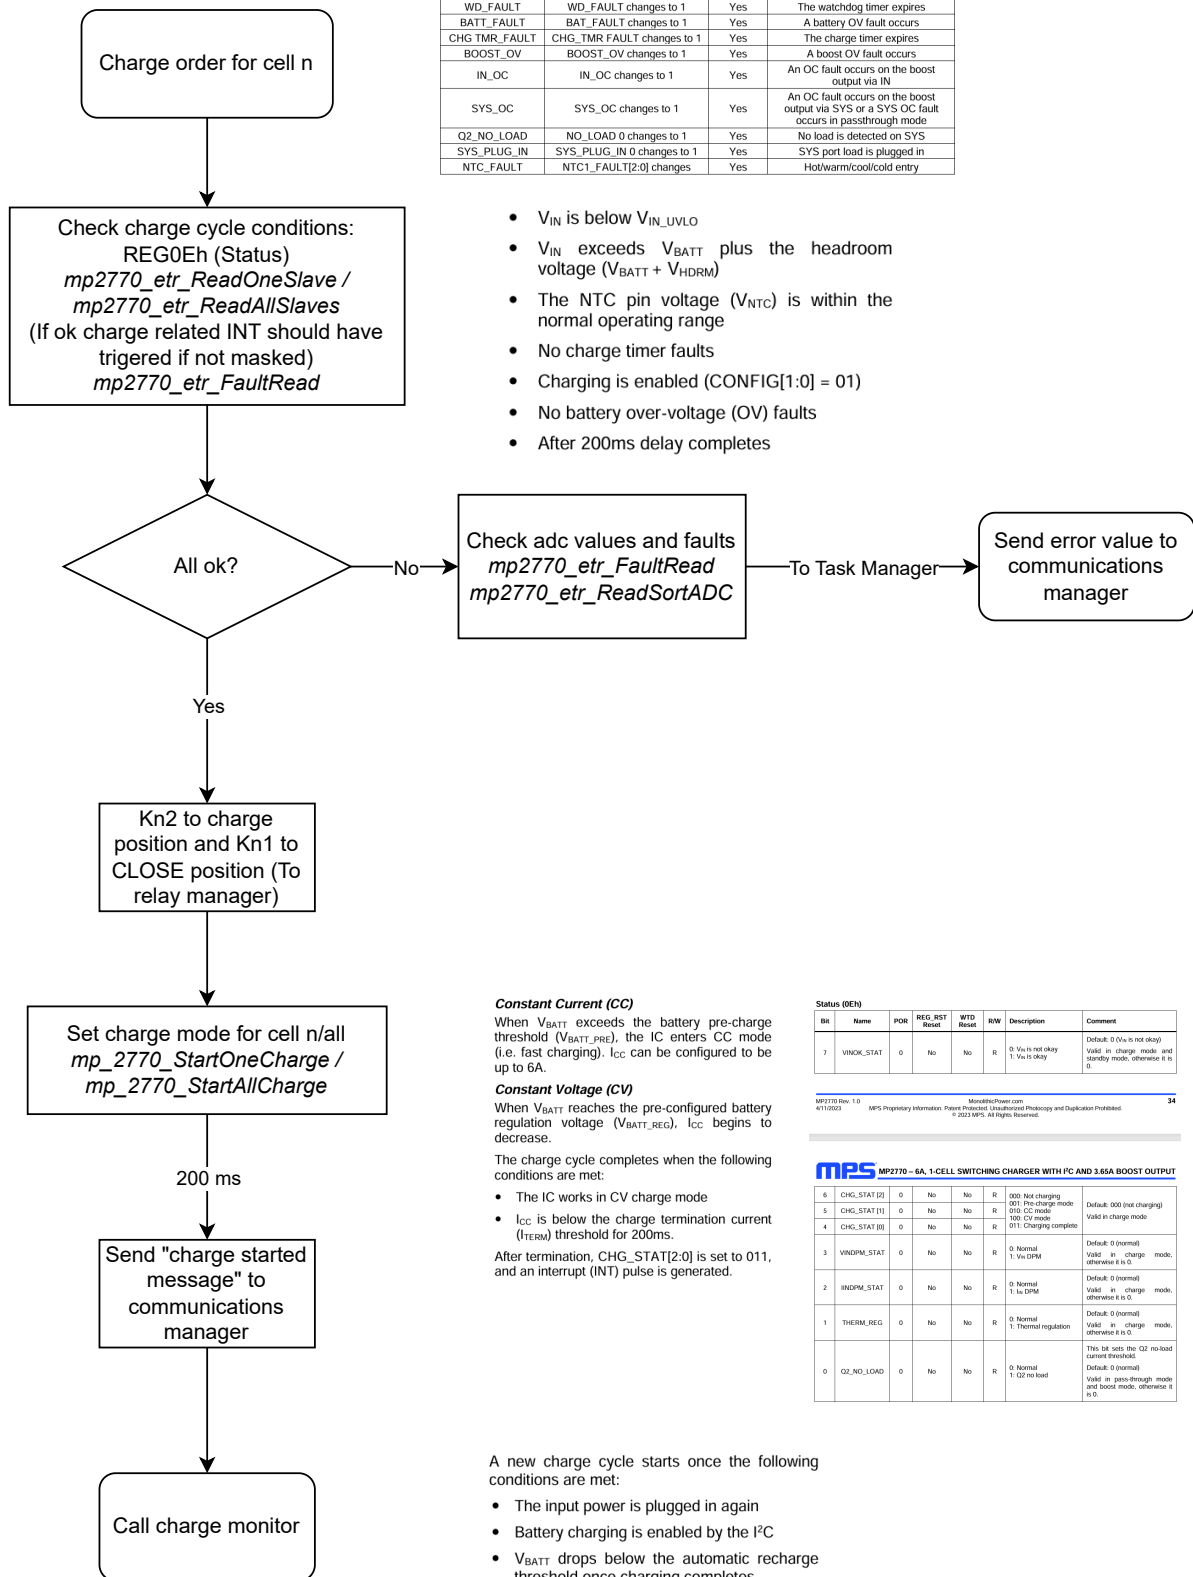

ETR CELLMETER DISCHARGE FLOWCHART

STATE MANEGER: DISCHARGE

