


TSB4 Brewer Tablet Power-up Guide

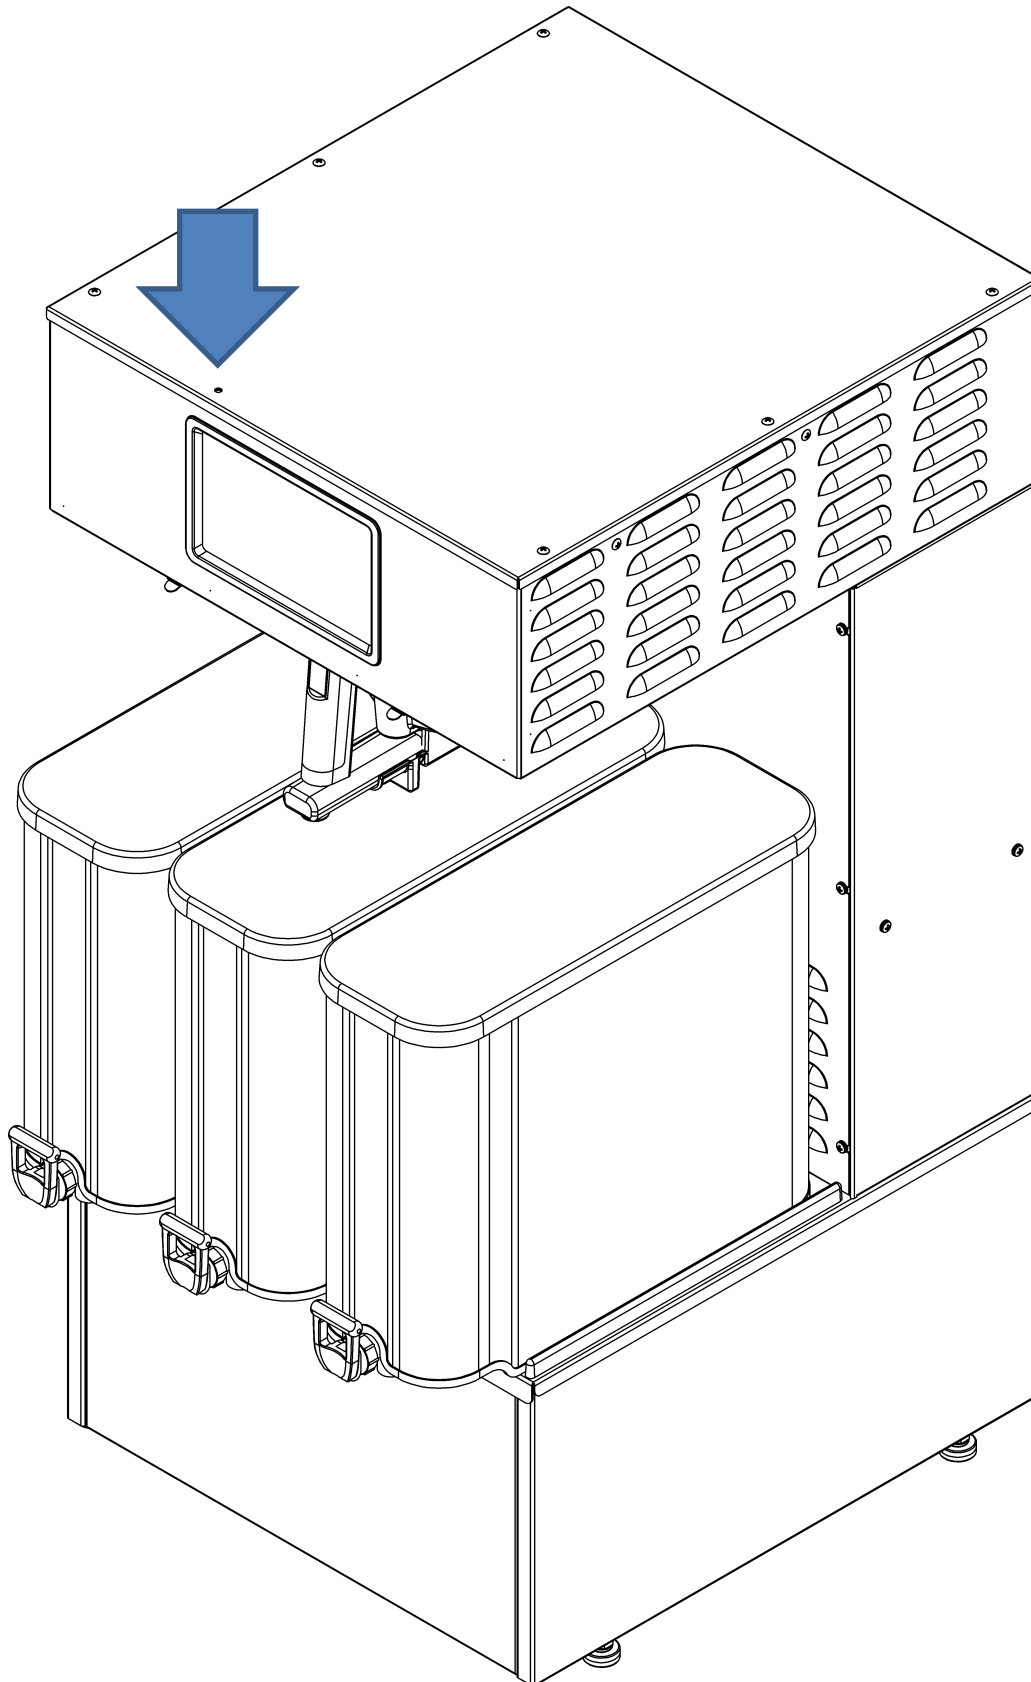

The enclosed S/S rod may be used to access the power button on the touch screen display without removing the brewer top cover in the event that it is necessary to power-up, shut down or restart the device. The access port is indicated with an arrow on the prior page.

To access the tablet power button, a 1/8" or 5/32" diameter rod may be used. Actuate the button through the small access hole on the top front edge of the brewer cover. Your brewer was shipped with a small diameter rod placed inside a small plastic bag which should be taped to the sidewall in the lower sweetener compartment. Please return the rod to this location for future use when finished with it. The access hole is about 1/2" back from the edge on the left side of the display. See illustration below. The button is on an angle and you will be contacting just one edge. Insert the rod straight down, perpendicular to the cover, about 7/8" to contact the tablet power button and gently press and hold the button until the tablet turns on (about 3 seconds). Continue to hold until power off and restart options are shown. Do not select any other option that may be displayed. If using a screwdriver (NOT RECOMMENDED), position so blade runs front to back of brewer rather than side to side to have best opportunity to contact edge of button.

Display/Tablet Power Button Access – Rear View (partial view for clarity)

