


Open the Sateline Saterm application of the attached compressed folder "Sateline_SaTerm_4_0_0"

In the Mode menu, select Open Terminal:

Locate the COM port of the ALR3206T (in normal mode) and complete the settings with:

- COM port
- Baud rate: 9600
- Handshake: None
- Parity: None
- Data bits: 8
- Stop bits: 1
- View: ASCII
- Miscellaneous: "Local echo" and "CR->CR/LF"

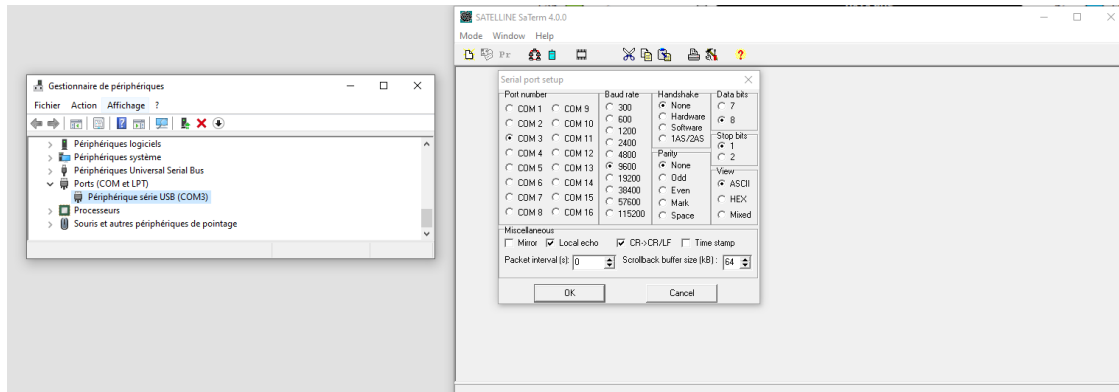

Test the communication with the ALR3206T by sending "0 IDN RD" or "0 VOLT1 WR 1" or "0 TEST". If the power supply returns the correct character string or "0 ERR", the communication is operational.

