


BHT-212-MM

Bell **212**
MODEL

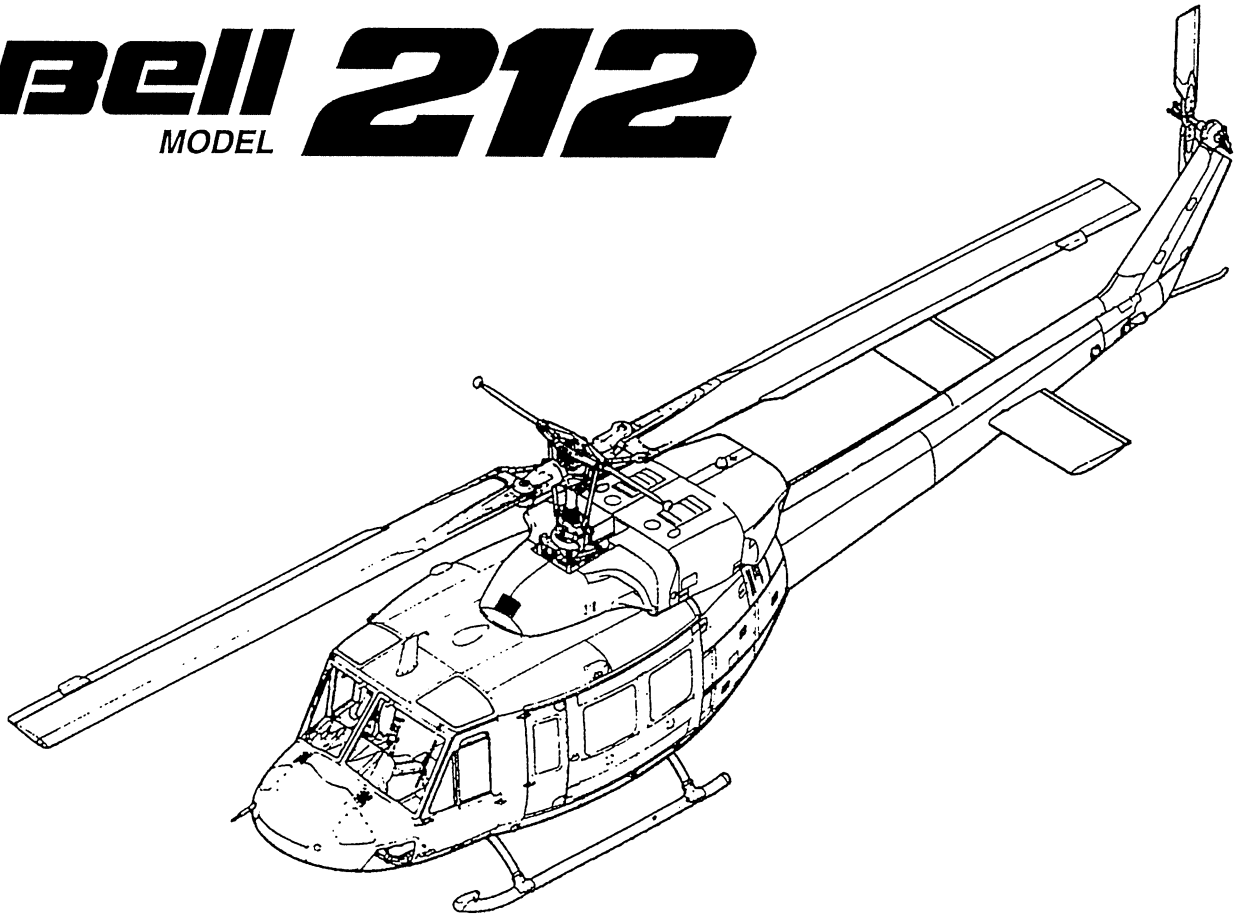

**MAINTENANCE
MANUAL**

VOLUME 12

WIRING DIAGRAMS

NOTICE

The instructions set forth in this manual, as supplemented or modified by Alert Service Bulletins and other directions issued by Bell Helicopter Textron and Airworthiness Directives issued by the Federal Aviation Administration, shall be strictly followed.


Bell Helicopter **TEXTRON**

A Subsidiary of Textron Inc.

POST OFFICE BOX 482 • FORT WORTH, TEXAS 76101

BHT-212-MM

Bell **212**
MODEL

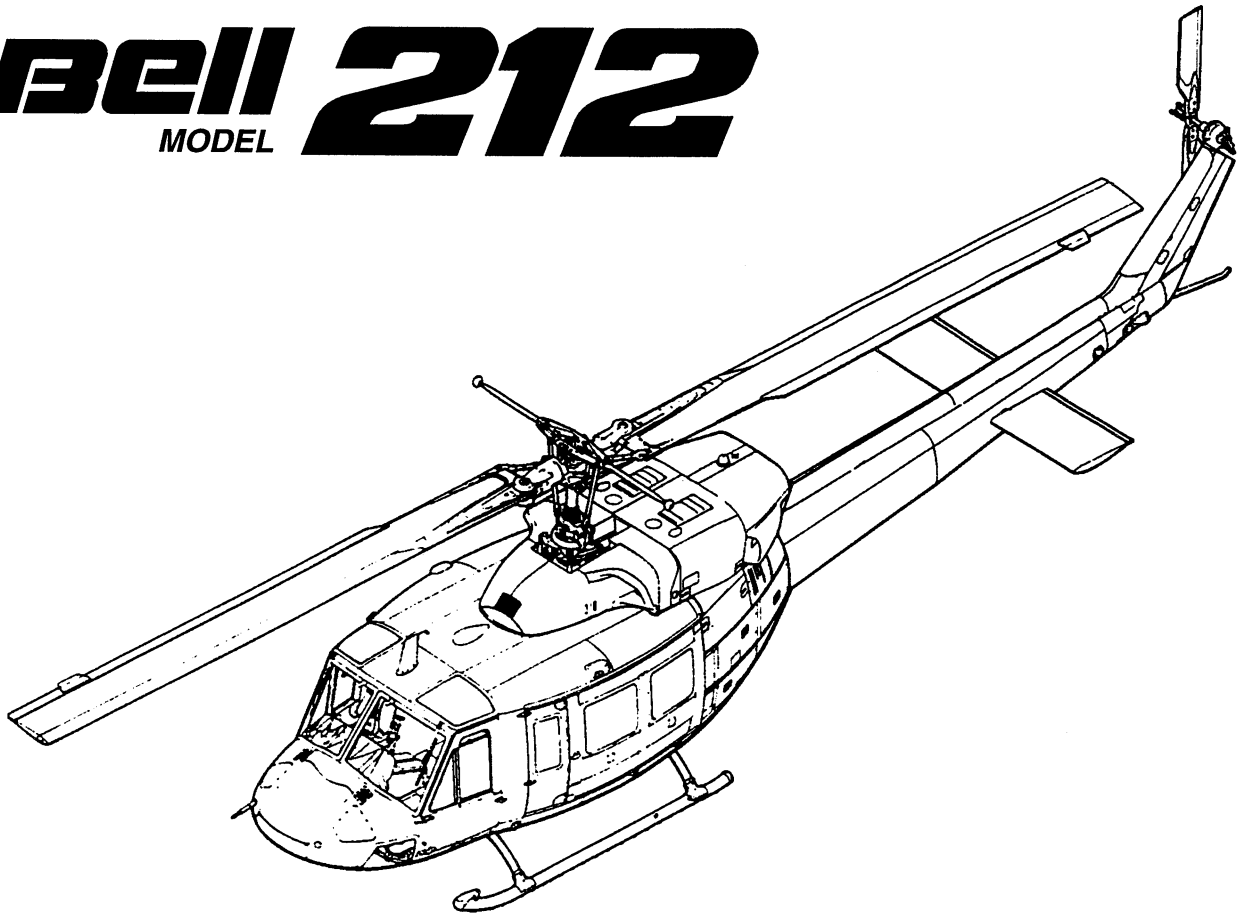

MAINTENANCE MANUAL

VOLUME 12

WIRING DIAGRAMS

NOTICE

The instructions set forth in this manual, as supplemented or modified by Alert Service Bulletins and other directions issued by Bell Helicopter Textron and Airworthiness Directives issued by the Federal Aviation Administration, shall be strictly followed.

COPYRIGHT NOTICE

COPYRIGHT 1997
BELL © HELICOPTER TEXTRON INC.
AND BELL HELICOPTER TEXTRON,
A DIVISION OF TEXTRON CANADA LTD.
ALL RIGHTS RESERVED

Bell Helicopter **TEXTRON**

A Subsidiary of Textron Inc.

POST OFFICE BOX 482 • FORT WORTH, TEXAS 76101

7 JUNE 1993

REVISION 5 — 25 SEPTEMBER 1997

PROPRIETARY RIGHTS NOTICE

These data, excluding Chapter 4, Airworthiness Limitations, are proprietary to Bell Helicopter Textron, Inc. Disclosure, reproduction, or use of these data for any purpose other than helicopter operation and/or maintenance is forbidden without prior written authorization from Bell Helicopter Textron, Inc.

Additional copies of this publication may be obtained by contacting:
Commercial Publication Distribution Center
Bell Helicopter Textron
P. O. Box 482
Fort Worth, Texas 76101-0482