


1. Driveshaft
2. Bolt
3. Steel washer
4. Aluminum washer
5. Tailboom
6. Shim
7. Driveshaft
8. Coupling
9. Gearbox
10. Coupling
11. Temperature indicator
TEMP-PLATES

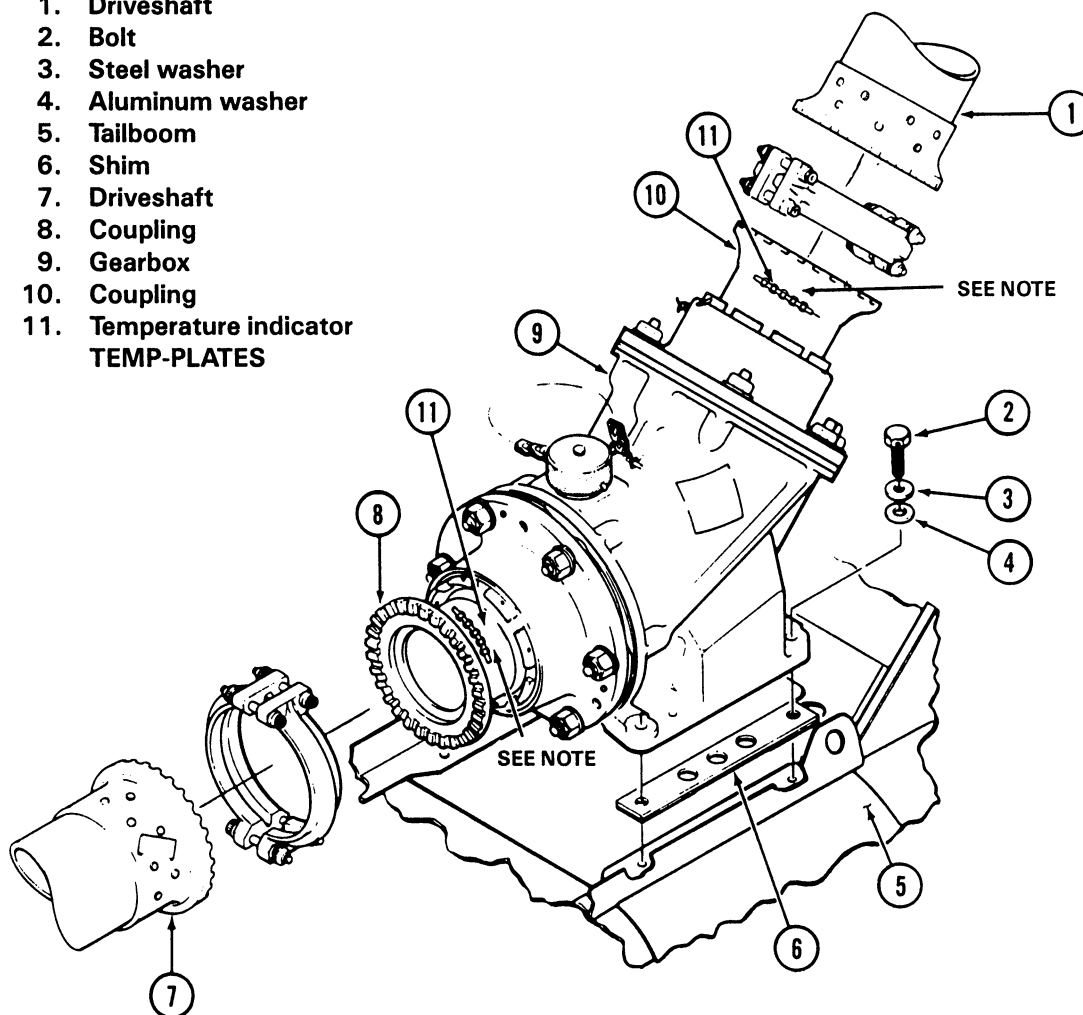

NOTE

Refer to BHT-212-CR&O for TEMP-PLATES installation procedure.

212-M-65-6

Figure 65-6. Intermediate gearbox