


Figure 26-1. Engine compartment fire detection sensing element (sheet 1 of 2)

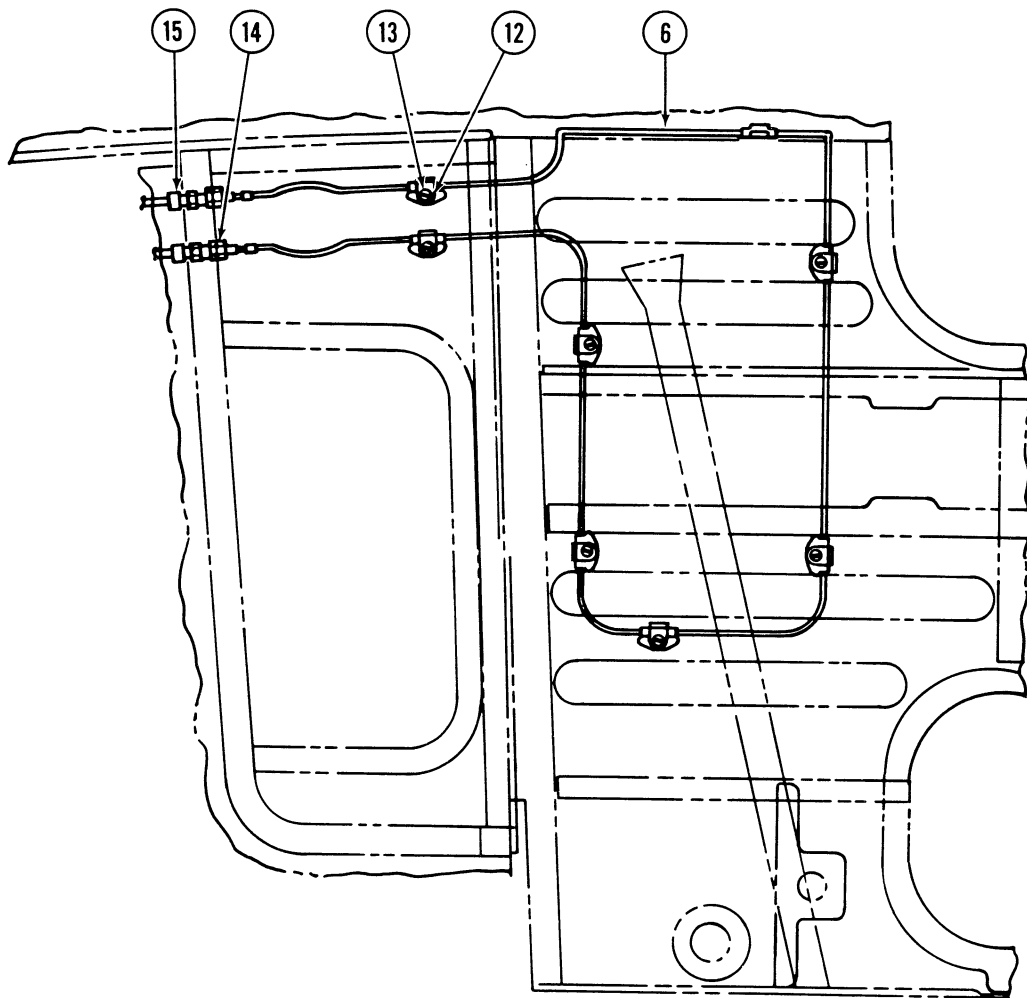

SENSING ELEMENT ON
LEFT ENGINE POWER
SECTION FIREWALL
(VIEW LOOKING FORWARD)
VIEW **B**

1. Sensing element (right engine power section top cowl)
2. Sensing element (left engine power section top cowl)
3. Flex cable
4. Upper engine cowling
5. Engine cowl top panel
6. Sensing element (left power section firewall)
7. Sensing element (right power section firewall)
8. Clamp (seven required)

9. Screw
10. Electrical connector
11. Electrical connector
12. Clamp (eight required)
13. Screw
14. Electrical connector
15. Electrical connector

212-M-26-1-2

Figure 26-1. Engine compartment fire detection sensing element (sheet 2)