


Figure 63-13. Transmission oil system (sheet 1 of 2)

212-M-63-13-1

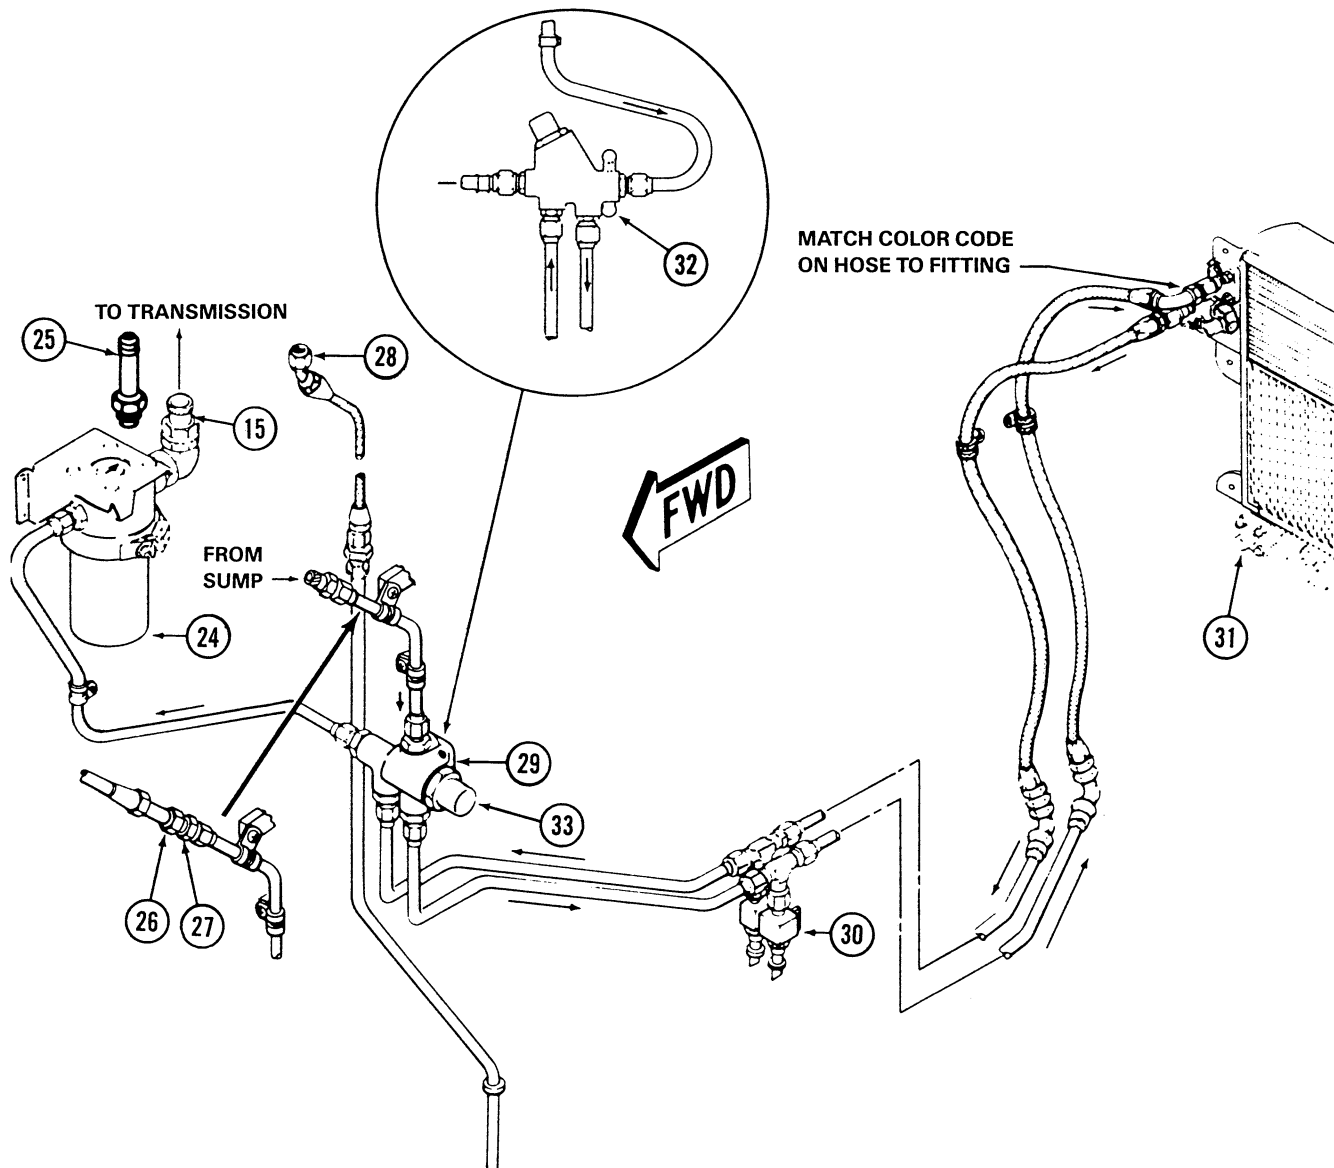

- | | | |
|---------------------------|---------------------------|--|
| 1. Breather | 13. Sump filter | 25. Fitting (212-040-272) |
| 2. Line to mast jet | 14. Inlet hose | 26. Fitting (212-040-272) |
| 3. Jet no. 1 | 15. Deleted | 27. Bushing |
| 4. Jet no. 5 | 16. Drain hose connection | 28. Drain hose |
| 5. Jet no. 2 | 17. Drain valve | 29. Relief valve and bypass manifold (205-060-537) |
| 6. Pressure switch | 18. Pump | 30. Drain valves |
| 7. Pressure transmitter | 19. Outlet hose | 31. Cooler |
| 8. Thermoswitch | 20. Jet no. 4 | 32. Relief valve and bypass manifold (212-040-237) |
| 9. Jet no. 7 | 21. Jet no. 6 | 33. Thermo bypass valve |
| 10. Pressure relief valve | 22. Filler cap | |
| 11. Temperature bulb | 23. Auxiliary jet | |
| 12. Jet no. 3 | 24. External filter | |

212-M-63-13-2

Figure 63-13. Transmission oil system (sheet 2)