


1. Main driveshaft
2. Bolt
3. Engine combining gearbox
4. Nut
5. Steel washer
6. Engine-to-driveshaft curvic coupling adapter
7. Washer (MS172290)
8. Nut

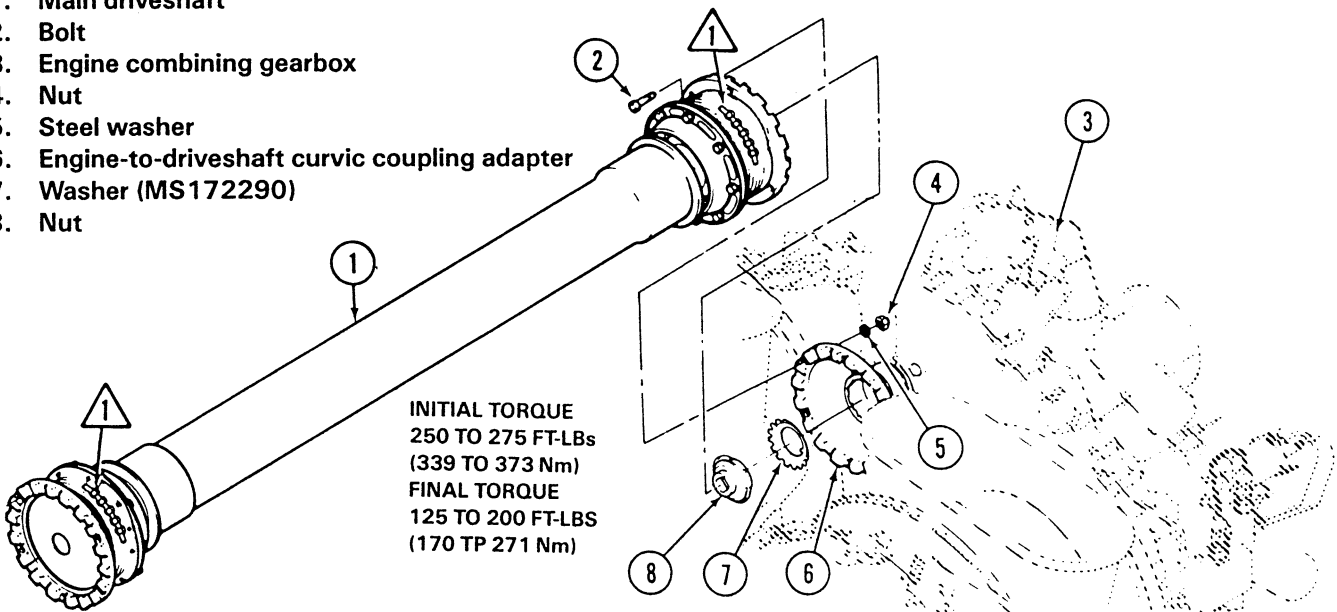

**NOTE**

- 1** Location of temperature indicator TEMP-PLATES.

212-M-63-5

**Figure 63-5. Engine-to-transmission driveshaft adapter**