


LATERAL ACCELEROMETER
LOCATED ON FRONT FACE OF
TRANSMISSION ISLAND AS
SHOWN WITH CONNECTOR TO
THE LEFT

FRONT FACE OF TRANSMISSION ISLAND
(LOOKING AFT)

VIEW A.

LOCATION OF LATERAL ACCELEROMETER

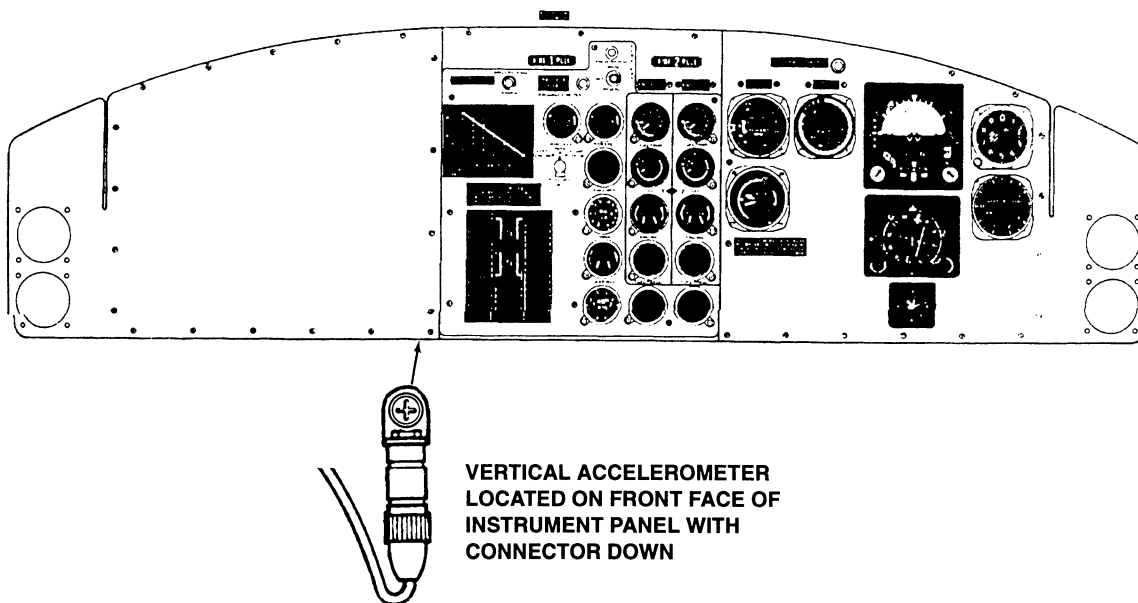

VERTICAL ACCELEROMETER
LOCATED ON FRONT FACE OF
INSTRUMENT PANEL WITH
CONNECTOR DOWN

VIEW B.

LOCATION OF LATERAL ACCELEROMETER

212-M-18-5

Figure 18-5. Accelerometer locations