

Instructions for etee Demo

Version: 7.1.0 or higher

Compatibility

This software is compatible with the following firmware:

- **etee controller version:** 1.3.2 or higher
- **etee dongle version:** 1.1.8 or higher

Getting Started

1. First, connect the BLE **dongle** to the PC/laptop.
2. Turn on both **controllers** and make sure they are connected to the dongle. You will know they are connected if the LED in the controllers turn pink, and the dongle flashes pink-pink-blue.
3. Run the **executable** file (e.g. `eteeDemo_7.1.0.dev.1.exe`).
4. When the application opens, you should be able to see the devices as connected in the top bar.




5. To initialise the **hand rotation**, press 'I' on your keyboard and follow the instructions.

- a. *Note:* Have your palms facing down until you see the message below:
“You have successfully reset the rotation of the device”

Tips

- If the rotations are or become incorrect at any point, you can always recalibrate by pressing ‘I’.
- If the finger detection is not accurate:
 - **Solution 1 - Quick Baseline Reset:**
 - Extend your fingers .
 - Double-click the controller’s ON/OFF button, located at the bottom of the etee device. This will recalibrate the baseline.

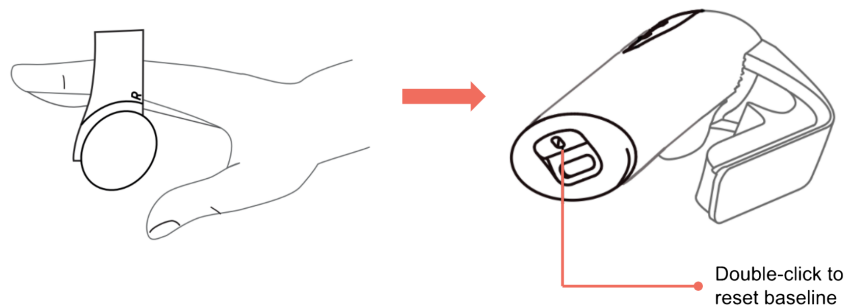

- **Solution 2 - Full Device Calibration:**
 - Run the eteeConnect software.
 - Go to “Options > Calibration”, and follow the on-screen guide.



- For more information, check the eteeConnect guide.