




POWER CONNECTORS

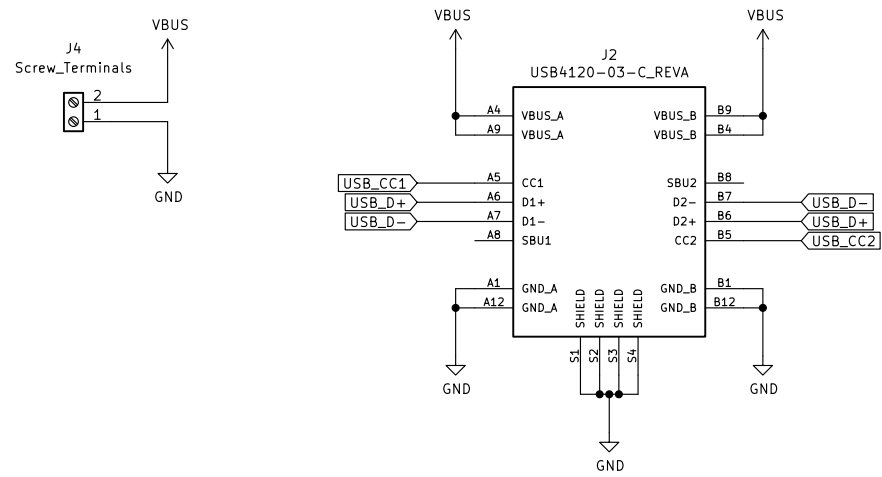

STEPPER CONTROL

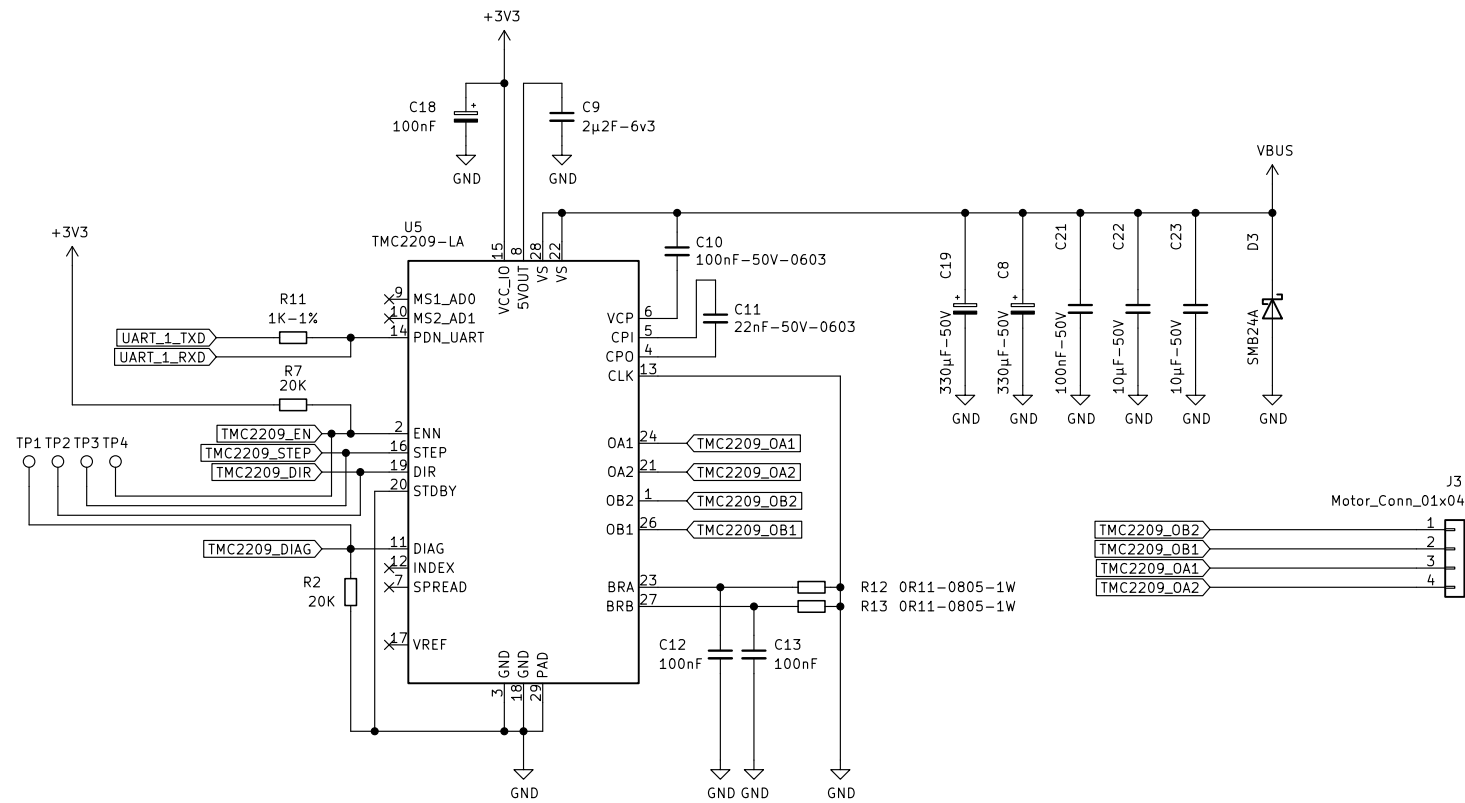


STEPPER FEEDBACK

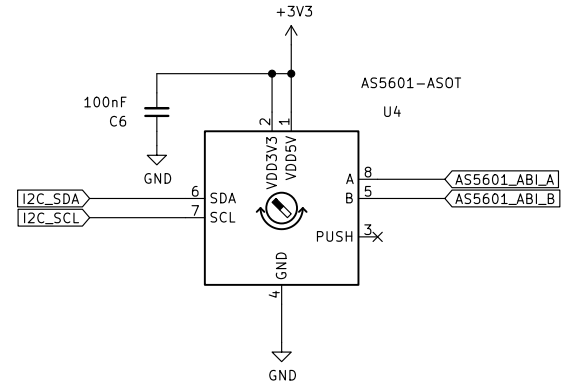


POWER SUPPLY


LET STU5B4500QTR enable BA33DDOT?

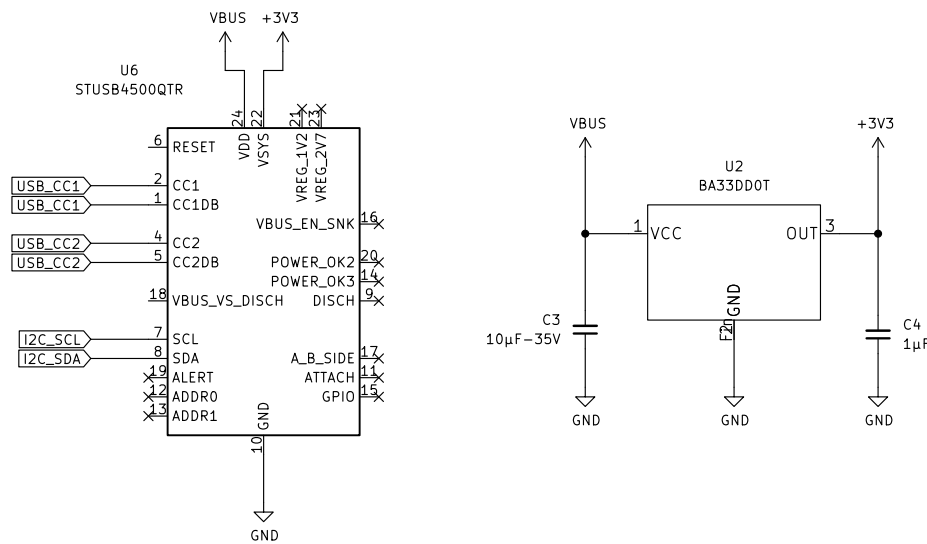

MAIN CONTROL UNIT

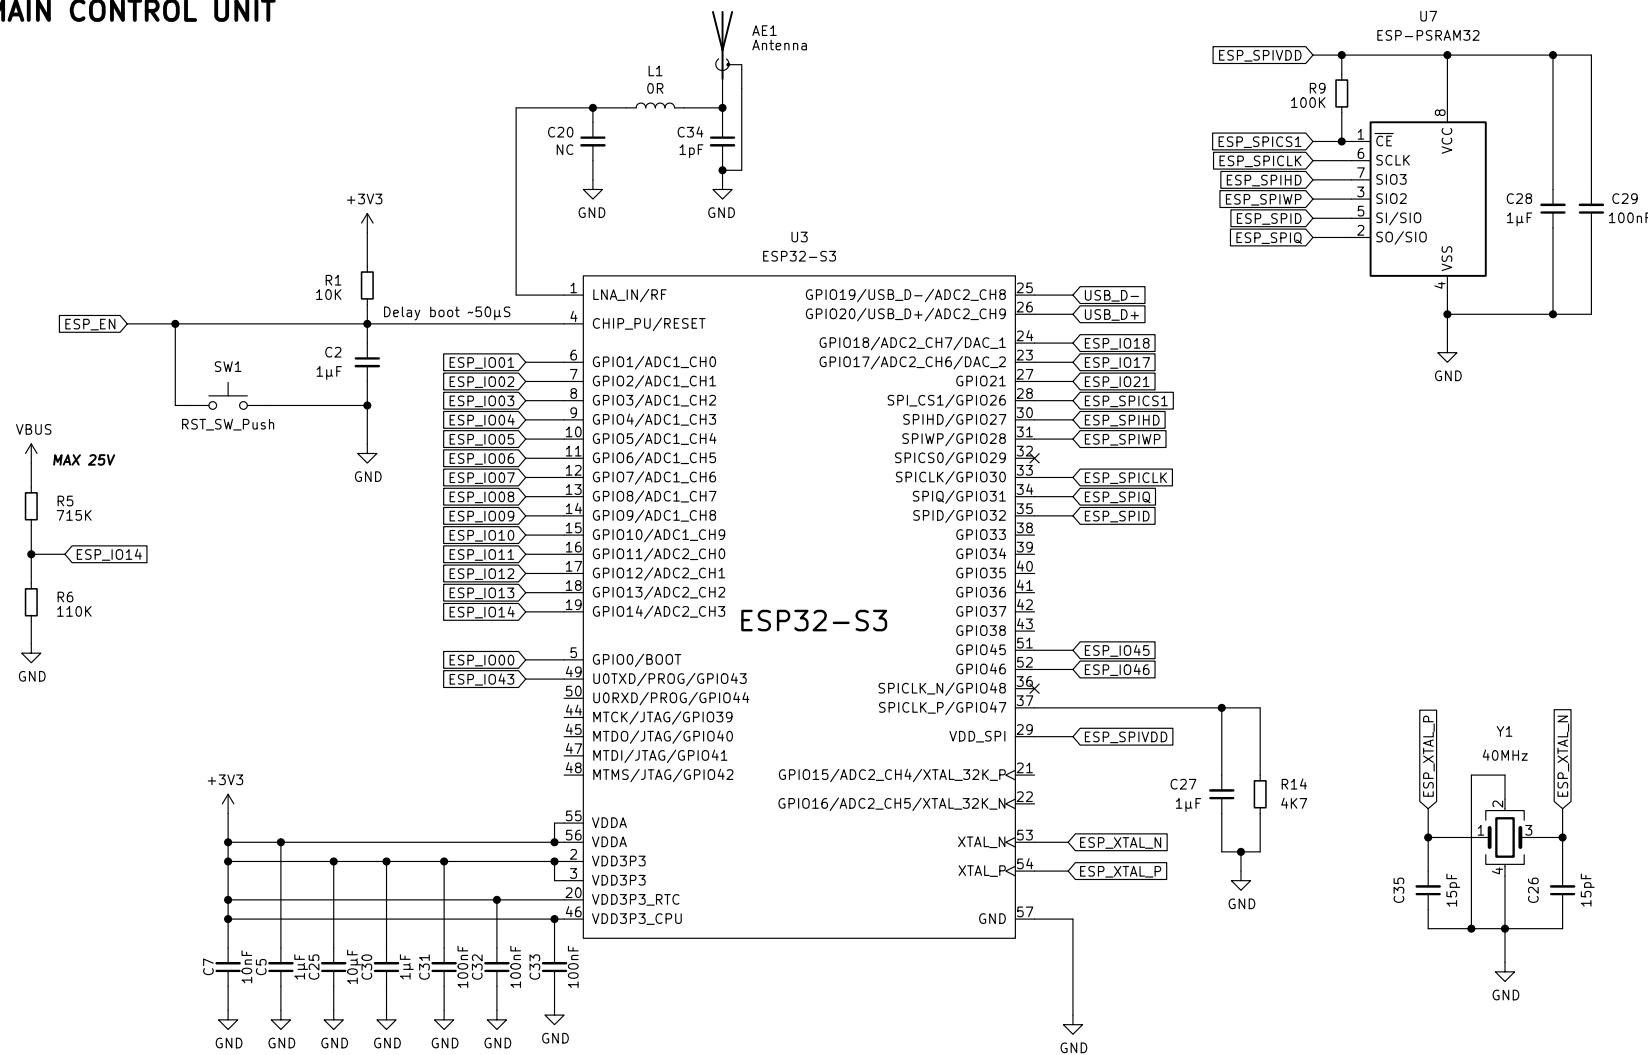

IO MAPPING AND EXPANSION HEADER

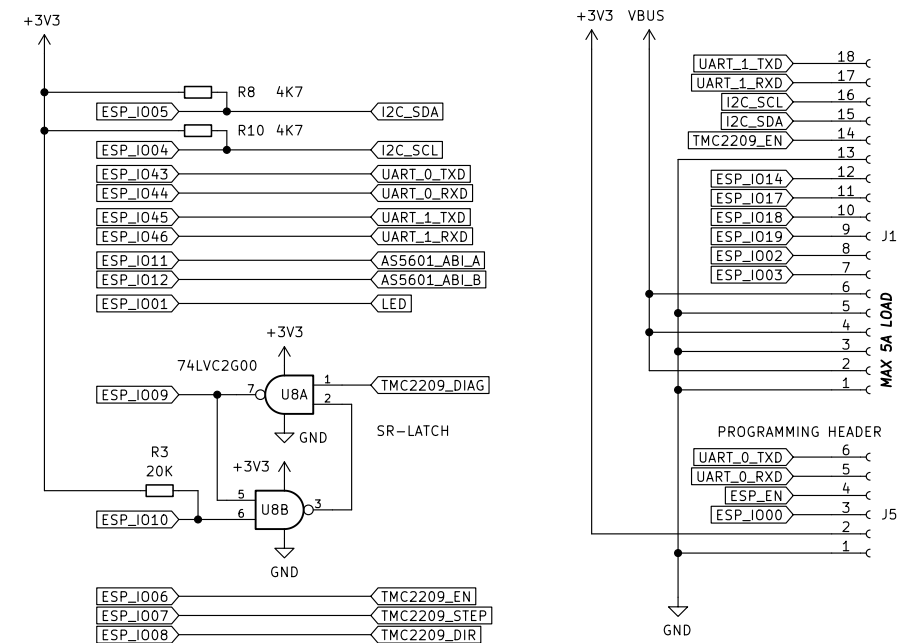

MOUNTING

- H1 MountingHole
- H2 MountingHole
- H3 MountingHole
- H4 MountingHole
- H5 MountingHole

from https://dl.espressif.com/dl/SCH_ESP32-S3-DEVKITC-1_V1_20210312C.pdf

github.com/slimcdk/esp-stepper-servo
github.com/slimcdk/esp-stepper-servo/tree/abc5fc4

Sheet: /
File: driver-board.kicad_sch

Title: ESP Stepper Servo

Size: A2 Date: 2022-05-26 Rev: abc5fc4
KiCad E.D.A. eeschema 6.0.5-a6ca702e91-116-ubuntu22.04.1 Id: 1/1