

產品服務保証卡
产品服务保証卡
Product service card

本保証卡是快奘對其系列產品品質和服務承諾，且謝謝您享受我們的產品售後服務權益的憑證。
This service card is for products' quality and service commitments of Q-Point, and thank you very much for enjoying our products.
本保証卡是快奘對其系列產品品質和服務承諾，且謝謝您享受我們的產品售後服務權益的憑證。




特別說明Notes特別说明

※購買產品後，請填寫相關信息。
※產品自售日（以購買發票上日期為準）起，提供一年的服務。保修期過後繼續提供維修服務，需按標準收取費用。
※在保修期內，若因客戶使用不當或未經我公司授權自行拆開或修理等人為因素造成的故障或損壞由用戶自行負責，不在保修之列，應按標準收取換件費。
※Please fill in your information as soon as you bought our product.
※Product Warranty is 12 months. (Date start according to invoice date)
※If the Smart Pico Box have been taken apart, refitted, or mis-usage by user, it will not be accepted for repairing or replacement.
※购买产品后，请填写相关信息。
※产品自售日（以购买发票上日期为准）起，提供一年的服务。保修期过后继续提供维修服务，需按标准收取费用。
※在保修期內，若因客户使用不当或未经我公司授权自行拆开或修理等人為因素造成的故障或损坏由用戶自行负责，不在保修之列，应按标准收取换件费。

注意

●請將本機器與電源適配器置於通風良好的地方	●將插頭插入或拔離插座時，一定要握住電源適配器的插頭部分
●在長期不使用本設備的情況下，要將電源線拔除防止灰塵堆積。電源插頭和插座之間聚集的灰塵可能造成不良絕緣，導致火災發生	●請盡量不要讓電源線與各種導線互相糾纏。另外，也請讓孩童遠離導線 ●請勿將重物至於機器上
●當所處地區有雷擊的可能時，請拔掉電源適配器，避免在雷電時期使用本產品	●手部潮濕時，請勿拿取電源適配器插入或拔離插座
●進行本機清潔之前，請關閉電源並拔掉電源適配器	●在移動本產品前，請先拔掉電源適配器，並且拔掉所有外接器材的連接線

About PICO Box

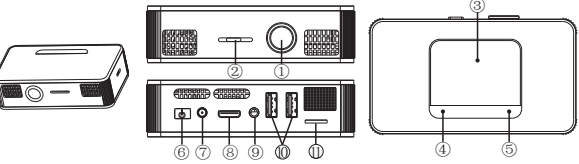

No	Name	Function
1	Projector window	投影出高清畫面
2	Adjustment focus	調整投影清晰度
3	Touch-pad	操作畫面鼠標
4	Left button	畫面選取和確認
5	Right button	返回和取消
6	Power	主機開關機/待機
7	DC 5V	直流5V電源輸入
8	Mini HDMI	HDMI1.3數字高清輸出
9	Headphone	3.5 mm帶檢測耳機座
10	USB	USB移動存儲設備接口
11	TF	TF卡插入

繁體中文

另外也確保用戶能了解安卓高清微投影機所提供的各項性能,掌握該機的各項操作方法,敬請用戶全部閱讀手冊,並妥善保存手冊以便隨時查閱!

安全須知

警告

*提醒用戶本產品使用不當，可能會導致機器的傷害或損害。
*避免火災、電擊、以及人體傷害的指示。

注意

*機器的損壞指的是關於家庭、傢具、寵物所造成的損壞或影響。

警告

●使用本產品前，請先閱讀如下提示，以及使用手冊	●確保使用標配的電源適配器給機器供電，並確定實際線路電壓與電源適配器所載明的輸入電壓相同，使用不同電壓或不同極性的錯誤電源適配器，可能導致機器損壞、故障、短路等現象發生
●請勿拆開機器或電源變壓器，並對其作任何變動	
●請勿自行對機器進行維修，或更換其中任何零件（除非本手冊有特別指示做法）	●請避免損傷電源線，請勿把它過度彎折，踩踏或壓上重物等，損傷電源線可能會導致觸電或走火，電源線損壞後，請不要再繼續使用
●請勿將任何物體（如可燃物、硬幣、針）或任何液體（如水、飲料）塞入或滲入機器內	●當發生下列情形時，請馬上關掉電源：將電源適配器拔離插座，並且洽詢最近的授權代理商 1、電源適配器或電源線已損壞 2、液體滲入本機 3、本機暴露於雨水下 4、本機無法正常操作
●請勿在如下場所使用或放置本器材： 1、溫差劇烈的場所（如陽光直射車廂、發熱的管線或器材上面） 2、潮濕的環境（如浴室，洗手間） 3、暴露在多塵的環境、劇烈振動的環境	●請注意孩童，應在成人監護下操作機器，並確保其有能力安全使用本機器
●確保機器保持平放平穩，請勿在搖晃的地方放置本機器；機器應避免強烈的碰撞，請勿摔落機器	●使用過程中請勿將產品蓋住以免發生危險
●確保只使用本公司所提供的電源適配器	●此core要夾於電源線上，距離電源插頭15公分位置上，電源線繞core 2圈,若沒有加此core，可能會造成輻射干擾及影響產品EMI特性

Icon	Application	Description
	Miracast	Miracast function support (receiver mode)
	Calculator	Math calculation
	FireAir Receiver	Share specific relative media data with other devices

Troubleshooting

Under no circumstances should you try to repair the TV box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
NO Power	-check if the power adaptor is properly connected to the power and the PICO Box -press the power on the remote controller to turn on the power
NO picture	-Check the TV is switched on -Reconnect with HDMI cable or AV cable
NO sound or distorted sound	-Adjust the volume -Check that the speakers are connected correctly
NO audio or digital output	-Check the digital connections -Check if your amplifier is set correctly
Player does not respond to Some operating commands During playback	-Operations may not be permitted. Refer to the user manual -Possibility of system halted, re-insert with power adaptor to restart
NO sound during movies Playback	-The audio codec may not be supported by the TV Box You can change to the supported audio on playing menu -Check the volume setting
The contents of the USB flash Drive cannot be read.	-The USB flash drive format is not compatible with the box -If one of the USB can not be read, please turn off the TV Box for 30 Seconds and restart the TV Box
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen
NO sound with HDMI connection	-Check the connection between the TV and the HDMI jack of box -Check your TV system, set up -Check the volume
The TV screen is blank	-Turn off your TV Box, wait 30 seconds, turn it on again -If under HDMI status, check if HDMI connection is correct or Change another HDMI cable, set the output resolution of this TV Box into 720p

Get Started

- **Connecting to TV**
✓ **HDMI Connection HDMI**
※Connect HDMI Cable into the TV set, the other end to Q-Light Engine's MINI HDMI output interface.
※ Power on the Q-Light Engine and TV, setting TV video mode HDMI input.
- **Projection**
Please project on a flat & light color wall or projection screen to get the best performance. When you find the focus is indistinct, please use focus adjuster to do the focus adjustment.
- **Charging**
✓ When charging projector, it will display the “ ” symbol at power-off mode.
✓ You can see charging status on the home screen.
- **Power on**
Hold down the power button on the cover of Smart Pico Box until the Android Logo appears on the screen. Wait for a few seconds, after the system startup is completed then enter into the main interface
- **Mouse and touch-PAD operation**
✓ Mouse Setting(Support standalone USB mouse only)
※Please simply connect your USB wire/wireless mouse into Smart Pico Box' s USB port to start use
✓ Left Key of Mouse and touch-Pad
※Confirm or Open APK
※Push on left key of mouse for more than 3 seconds to POP-UP windows.
Left Key of Mouse and touch-Pad
※Cancer or Return to prior page.
- **Hibernate**
Once booted up, a short press of power button will put the PICO Box to hibernate state. During hibernation, PICO Box will into the standby condition, where it will consume very little power. Another short press of power button will bring the PICO Box out of hibernation and you can continue with your operation.
- **Shutdown and forced shutdown**
Hold down the power button for two seconds, and select “Power off” from the pop-up window to completely shut down the PICO Box.
In case of a system crash and the PICO Box stops responding to your commands, please hold down the power button for more than 10 seconds to forced shutdown. You need to reboot the PICO Box after a forced shutdown.
- **Device operation**
✓ Home Screen

Icon	Function Description
	Return back to previous screen
	Back to Home
	Review recent used applications and in operating applications
	Volume up
	Volume down
	Power off
	Network connection indicator
	Voice search function
	Applications


Home Screen has 5 pages, and you could explore each page by swiping or sliding screen side to side.
✓ Applications interface

Icon	Application	Description
	Settings	Setup of Wi-Fi control, Display, Language, Time & Date and other settings of Q BOX.
	Music player	Music player
	Download	Save data of browser download files
	File manager	File management
	Graph	Browse your photo and graph
	Clock	Time, alarm
	Calendar	Calendar management
	Browser	Webpage browse

CAUTION

●Please keep the device and the power adapter in a well ventilated place	●Insert or pull the plug from the socket, be sure to hold tight the power adapter plug part
●If the device is not use over long period of time, please unplug the power cord to prevent dust accumulation. Dust gathered between the power plug and socket may cause poor insulation then causing fires	●Please try not to let the power cord and cables entangled with each other. Also, please keep children away from wires ●Do not place heavy objects on device
●If locations are possible to get lightning, please unplug the power adapter, avoid using this device during an electrical storm	●Do not plug/unplug the power adapter from the outlet when your hands wet
●Please turn off the power and unplug the power adapter before cleaning the machine	●Before moving this device, please unplug the power adapter and disconnect all external devices before move

About PICO Box

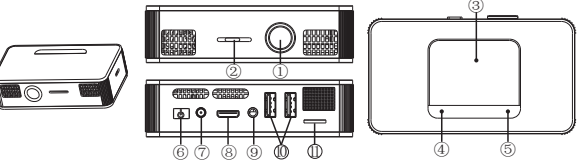

No	Name	Function
1	Projector window	HD projected window
2	Adjustment focus	Adjusting focus of the Projector
3	Touch-pad	Mouse operation pad
4	Left button	Select and confirm
5	Right button	Return and Cancel
6	Power	Power on/off, standby mode
7	DC 5V	DV 5V input
8	Mini HDMI	HDMI Port
9	Headphone	3.5 mm headphone socket
10	USB	USB port
11	TF	TF card reader

English

These documents are devoted to make sure you can understand all the characteristics of Smart Pico Box(PICO Box) and obtain the best experience of using it. Please carefully go through these articles and enjoy your new media experience!

Safety Usage Guide

WARNING

*Reminder: Abnormal or incorrect usage of this device will cause unexpected harm or damage of device.
*Instruction of avoiding fire expoxion, thunder lightning and human harm risk.

CAUTION

*Harms or damages of device indicate the actions that are relating to the risk of harms and affects of family, furniture, pets.

WARNING

●Please read following notices & this manual carefully before you start to use this device	●Be sure to use the standard power adapter to charge this device and make sure of actual voltage of device is the same as power adapter input voltage. Using different voltage or different polarity wrong power adapter may result in damage, malfunction, short-circuit of the device
●Don't try to open this device and add additional accessories on your own nor do any change on them	
●Don't try to repair this device, or change any parts of this device and additional accessories.(Besides any part of allowance that is mentioned in this manual with clear instruction)	●Please avoid to damage the power cord. Do not bend it excessively, step on or pressure on with heavy object. Damage the cord may cause electric shock or fire. After the power cord is damaged, please do not continue to use it
●Please don't try to insert any objects (e.g. flammable objects, coins, needles) or any liquid (e.g. water, Beverages) into device	
●Please don't use or put this device in following places: 1. In areas with extreme temperature change (Such as direct sunlight exposed cars' inside, on the heat pipes or equipment) 2. Humid environment (such as bathrooms, toilets). 3. Exposure to dusty environments, severe vibration environment.	●When the following occurs, immediately turn off the power; unplug the power adapter from the outlet, and contact the nearest authorized dealer. 1. Power adapter or power cord is damaged. 2. Liquid into the unit. 3. Machine exposed to rain 4. Machine does not operate normally
●Ensure that this device remain flat & steady, do not put this device on oscillating akira place, device should avoid to be strong collision, do not let this device fall or drop	●Please note that children should be under adult supervision to operate this device and to ensure their ability to be safe use of this device
●Ensure to use only the power adapter provided by Q-Point	●Please don't cover any materials on machine when it is working.


Q-Light Engine
智能安卓雲端微投影
智能安卓云端微投影
QPI-1
Android Smart PC Projector

Q-Point Technology Incorporation

Please read the following "Safety usage guide" & "Important notes of using device" carefully before you start to use this device.
使用本裝置之前請詳細閱讀“ 使用須知”和“重要注意事項”這些章節將提供關於正確操作本裝置的重要信息。
使用本裝置之前请详细阅读“ 使用须知”和“重要注意事项”这些章节将提供关于正确操作本装置的重要信息。

Hardware Reference/产品清单


Contents包裝清單
Before you start using Smart Pico Box, please open your product pack and check the contents as following. If you found anything is missing in product pack, please contact the shop/agent you bought this product from for replacement.
在購買了本產品使用之前，請確認彩盒包裝中是否有以下物品，如有缺在購買了本產品使用之前，請確認彩盒包裝中是否有以下物品，如有缺漏，请及时与您购买的经销商进行联系，以确保您的权益。




DC 5V 2A Charger



Quick Guide & Warranty



Smart TV Box

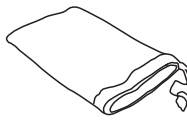

Charpie Protector Bag

快速操作

- 連接高清電視
 - ✓ 連接
 - ※將HDMI連接線的一端插在高清電視的HDMI接口，另一端插在產品主機的HDMI接口。
 - ※打開並開啟智能投影機和電視，設定電視為HDMI模式輸入。
- 投影
 - 請以平坦白色牆面或投影布做為投影背景，當畫面不清晰時，請調整本機的投影調整撥桿。
- 充電
 - ✓ 開機狀態，充電時投影機輸出■符號，輕按主機電源鍵可查看充電符號狀態。
 - ✓ 開機狀態，充電時，主界面右下腳可看到充電狀態。
- 開機
 - 按住主機電源鍵(1~2秒)，然後稍等片刻主機安卓系統啟動，之後進入主畫面。
- 滑鼠和觸摸板操作
 - ✓ 滑鼠安裝(只限USB滑鼠)
 - ※將有線滑鼠USB或無線的USB加密器插在機器的USB接口上。
 - ✓ 滑鼠和觸摸板左鍵
 - ※確認或是開啟軟件
 - ※當長按左鍵3秒以上會出現快速功能。
 - ✓ 滑鼠和觸摸板右鍵鍵
 - ※取消或是回到上一頁
- 休眠
 - 短暫按下主機電源鍵，系統會進入休眠模式。在休眠低功耗的模式下，機頂盒關閉信號畫面。再次短暫按下主機電源鍵，機頂盒退出休眠模式，可以進行正常相關操作。
- 開機和強制開機
 - 如果出現系統死機，操作不響應的情況，請按住電源鍵10秒鐘以上強制關閉電源，然後重新開機。
- 基本操作
 - ✓ 主畫面

圖示	功能描述
	點擊返回上一界面
	返回主頁面
	查看最近使用的應用程序和正在使用的應用程序
	增高輸出音量
	降低輸出音量
	開機
	網絡連接狀態圖標
	點擊打開語音搜索框，根據提示實現語音搜索
	點擊進入應用程序行表界面

主畫面共有5頁，您可以隨意將應用程序放置在主畫面中。

- ✓ 應用界面

圖示	應用名稱	功能描述
	應用界面	Wi-Fi連接、顯示、語言等各參數的設置
	音樂播放器	音樂播放器
	下載	存放瀏覽器中下載的文件
	文件管理器	文件存放於管理
	圖庫	瀏覽圖片
	時鐘	顯示時間，設置鬧鐘
	日曆	管理日程
	瀏覽器	網頁瀏覽器

圖示	應用名稱	功能描述
	Miracast接收	同步接受並顯示其它對等設備上的視頻、圖片等內容
	計算器	數學計算
	FireAir Receiver	共享其它對等設備影音數據

常見問題解答

友情提示：請不要自行維修機器，這會導致保修失效；請不要擅自打開電源適配器外盒，這會引起觸電危險。如果本機在使用過程中出現問題，請對照下表解決問題，如果問題不能解決，請與經銷商或售後服務部門聯繫。

問題	解決方法
沒有電源	-檢查電源適配器是否連接良好，電源線是否連接正確 -按下遙控器的開機電源，重新上電
沒有畫面	-檢查電視是否開啟 -重新插拔HDMI線
沒有聲音或出現噪音	-調整音量 -檢查功放器是否連接正確
沒有數字音頻輸出	-檢查數字輸出是否連接 -檢查你的功放器是否設置正確
播放器有時無響應	-有些操作可能不被允許，詳情請參考用戶使用手冊 -可能機器處於死機狀態，需拔插電源重新啟動
在播放影片時沒有聲音 在播放影片時沒有聲音	-可能正在播放的音頻譯碼播放器不支持，可以在播放菜單中切換本機支持的音軌 -檢查音量是否設置太小或靜音狀態 -可能正在播放的音頻譯碼播放器不支持，可以在播放菜單中切換本機支持的音軌 -檢查音量是否設置太小或靜音狀態
無法讀取USB閃存驅動器的內容	-UCB設備或儲存卡的格式與本機不兼容 -如果遇到其中一個USB不讀的情況，請關閉電源，半分鐘後重新開機
USB閃存驅動器讀取速度很慢	-如果USB閃存驅動器內含較大檔或高分辨率檔，則需要花費較長的時間進行讀取
HDMI輸出沒有聲音	-檢查電視機和播放機的HDMI連接是否良好 -檢查您的電視系統輸入設置是否正確 -音量是否設置太小
電視屏幕出現長時間黑屏	-請關閉本機，等半分鐘重新開機 -在HDMI狀態下，請檢查HDMI線連接是否正確，或者更換HDMI線，將本機輸出設置成720p

简体中文

另外也确保用户能了解安卓高清微投影机所提供的各项性能,掌握该机的各项操作方法,敬请用户全部阅读手册,并妥善保存手册以便随时查阅!

安全须知

- 警告
 - *提醒用户本产品使用不当，可能会导致机器的伤害或损害。
 - *避免火灾、电击、以及人体伤害的指示。
- 注意
 - *机器的损坏指的是关于家庭、家具、宠物所造成的损坏或影响。

警告	警告
● 使用本产品前，请先阅读如下提示，以及使用手册	● 确保使用标配的电源适配器给机器供电，并确定实际线路电压与电源适配器所载明的输入电压相同，使用不同电压或不同极性的错误电源适配器，可能导致机器损坏、故障、短路等现象发生
● 请勿拆开机器或电源变压器，并对其进行任何变动	● 请避免损伤电源线，请勿将它过度弯折，踩踏或压上重物等，损伤电源线可能会导致触电或起火，电源线损坏后，请不要再继续使用
● 请勿自行对机器进行维修，或更换其中任何零件（除非本手册有特别指示做法）	● 当发生下列情形时，请马上关掉电源：将电源适配器拔离插座，并且洽询最近的授权代理商 1、电源适配器或电源线已损坏 2、液体渗入本机 3、本机暴露于雨水下 4、本机无法正常操作
● 请勿在如下场所使用或放置本器材： 1、温差剧烈的场所（如阳光直射车厢、发热的管线或器材上面） 2、潮湿的环境（如浴室，洗手间） 3、暴露在多尘的环境、剧烈震动的环境	● 请注意孩童，应在成人监护下操作机器，并确保其有能力安全使用本机器
● 确保机器保持平放平稳，请勿在摇晃的地方放置本机器；机器应避免强烈的碰撞，请勿摔落机器	● 使用过程中请勿将产品盖住以免发生危险
● 确保只使用本公司所提供的电源适配器	● 此core要夹于电源线上，距离电源插头15公分位置上，电源线绕core 2圈，若没有加此core，可能造成辐射干扰及影响产品EMI特性

注意	注意
● 请将本机器与电源适配器置于通风良好的地方	● 将插头插入或拔离插座时，一定要握住电源适配器的插头部分
● 在长期不使用本设备的情况下，要将电源线拔除防止灰尘堆积。电源插头和插座之间聚集的灰尘可能造成不良绝缘，导致火灾发生	● 请尽量不要让电源线与各种导线互相纠缠。另外，也请让孩童远离导线 ● 请勿将重物至于机器上
当所处地区有雷击的可能时，请 ● 拔掉电源适配器，避免在雷电时期使用本产品	● 手部潮湿时，请勿拿取电源适配器插入或拔离插座
● 进行本机清洁之前，请关闭电源并拔掉电源适配器	● 在移动本产品前，请先拔掉电源适配器，并且拔掉所有外接器材的连接线

About PICO Box

No	Name	Function
1	Projector window	投影出高清画面
2	Adjustment focus	调整投影清晰度
3	Touch-pad	操作画面鼠标
4	Left button	画面选取和确认
5	Right button	返回和取消
6	Power	主机开关机/待机
7	DC 5V	直流5V电源输入
8	Mini HDMI	HDMI1.3数字高清输出
9	Headphone	3.5 mm带控耳机座
10	USB	USB移动存储设备接口
11	TF	Tf卡插入

快速操作

- 连接高清电视
 - ✓ 连接
 - ※将HDMI连接线的一端插在高清电视的HDMI接口，另一端插在产品主机的HDMI接口。
 - ※打开并开启智能投影机和电视，设定电视为HDMI模式输入。
- 投影
 - 请以平坦白色墙面或投影布做为投影背景，当画面不清晰时，请调整本机的投影调整拨杆。
- 充电
 - ✓ 开机状态，充电时投影机输出■符号，轻按主机电源键可查看充电符号状态。
 - ✓ 开机状态，充电时，主界面右下脚可看到充电状态。
- 开机
 - 按住主机电源键(1~2秒)，然后稍等片刻主机安卓系统启动，之后进入主画面。
- 滑鼠和触摸板操作
 - ✓ 滑鼠安裝(只限USB滑鼠)
 - ※將有線滑鼠USB或無線的USB加密器插在機器的USB接口上。
 - ✓ 滑鼠和觸摸板左鍵
 - ※確認或是開啟軟件
 - ※當長按左鍵3秒以上會出現快速功能。
 - ✓ 滑鼠和觸摸板右鍵鍵
 - ※取消或是回到上一頁
- 休眠
 - 短暫按下主機電源鍵，系統會進入休眠模式。在休眠低功耗的模式下，机顶盒关闭信号画面。再次短暂按下主机电源键，机顶盒退出休眠模式，可以进行正常相关操作。
- 关机 and 强制关机
 - 如果出现系统死机，操作不响应的情况，请按住电源键10秒钟以上强制关闭电源，然后重新开机。
- 基本操作
 - ✓ 主画面

图示	功能描述
	点击返回上一界面
	返回主页面
	查看最近使用的应用程序和正在使用的应用程序
	增高输出音量
	降低输出音量
	关机
	网络连接状态图标
	点击打开语音搜索框，根据提示实现语音搜索
	点击进入应用程序行表界面

主画面共有5页，您可以随意将应用程序放置在主画面中。

- ✓ 应用界面

图示	应用名称	功能描述
	应用界面	Wi-Fi连接、显示、语言等各参数的设置
	音乐播放器	音乐播放器
	下载	存放浏览器中下载的文件
	文件管理器	文件存放于管理
	图库	浏览图片
	时钟	显示时间，设置闹钟
	日历	管理日程
	浏览器	网页浏览器

图示	应用名称	功能描述
	Miracast接收	同步接受并显示其它对等设备上的视频、图片等内容
	计算器	数学计算
	FireAir Receiver	共享其它对等设备影音数据

常见问题解答

友情提示：请不要自行维修机器，这会导致保修失效；请不要擅自打开电源适配器外盒，这会引起触电危险。如果本机在使用过程中出现问题，请对照下表解决问题，如果问题不能解决，请与经销商或售后服务部门联系。

问题	解决方法
没有电源	-检查电源适配器是否连接良好，电源线是否连接正确 -按下遥控器的开机电源，重新上电
没有画面	-检查电视是否开启 -重新插拔HDMI线
没有声音或出现噪音	-调整音量 -检查功放器是否连接正确
没有数字音频输出	-检查数字输出是否连接 -检查你的功放器是否设置正确
播放器有时无响应	-有些操作可能不被允许，详情请参考用户使用手册 -可能机器处于死机状态，需拔插电源重新启动
在播放影片时没有声音 在播放影片时没有声音	-可能正在播放的音频译码播放器不支持，可以在播放菜单中切换本机支持的音轨 -检查音量是否设置太小或静音状态 -可能正在播放的音频译码播放器不支持，可以在播放菜单中切换本机支持的音轨 -检查音量是否设置太小或静音状态
无法读取USB闪存驱动器的内容	-UCB设备或储存卡的格式与本机不兼容 -如果遇到其中一个USB不读的情况，请关闭电源，半分钟后重新开机
USB闪存驱动器读取速度很慢	-如果USB闪存驱动器内含较大檔或高分辨率檔，則需要花費較長的時間進行讀取
HDMI输出没有声音	-检查电视机和播放机的HDMI连接是否良好 -检查您的电视系统输入设置是否正确 -音量是否设置太小
电视屏幕出现长时间黑屏	-请关闭本机，等半分钟重新开机 -在HDMI状态下，请检查HDMI线连接是否正確，或者更換HDMI线，將本机輸出設置成720p

Specification

Q Lighth Box/ QPI-1	
Main Function	
Operating System	Android 4. 2. 2
Browser	Browser webpage
Online Video	WEB Browser
Online Music	Connect internet live music
Video	AVI /MKV /TS /M2TS /MPG /MOV /WMV /RM /RMVB/ FLV
Audio	MP3/OGG/WMA/AAC/FLAC
Language	Support Multiple Languages
Picture	JPG, JPEG, BMP, PNG, GIF
Network	WIFI(802. 11g) , Ethernet Network, UPNP
USB Camera、Microphone	USB Camera , MIC , QQ Video call
I/O PORT	
USB Port	2 (USB 2. 0 HOST)
Mini HDMI	1 (Link HD-TV 1080P)
TF Card	1 (MAX 32GB TF CARD)
Audio Port	Ø3. 5mm AV 1 PULL3Lotus Socket
DC Input	Ø3. 5mm 5V
Hardware Standard	
CPU	V20(1GHz Duel Core)
RAM	512 DDR3 RAM
Storage space	4G Nand flash
WIFI	Intel 802. 11. g
Bluetooth	Yes
Dimensions/Weight	110*65*28mm / 170g
Projector	
Projector Type	TI DLP
Projector Resolution	VGA 640x480
Projector Contrast	400:1
Projector size	5~50"
Projector brightness	≥Max50lm
Temp Condition	
Operation Temp	+0° 40℃
Storage Temp	+0° 50℃

用户檔案Customer Information用户档案

產品型號Model Number 产品型号: _____

產品序號Serial Number 产品序号: _____

使用者User使用者: _____

郵編Postal code邮编: _____

地址Address地址: _____

電子郵件E-Mail电子邮件: _____

電話Tel电话: _____

手機Mobile手机: _____

維修記錄卡Service Record 维修记录卡

故障現象Failure phenomeno故障现象: _____

_____ 日期Date日期: _____

故障現象Failure phenomeno故障现象: _____

_____ 日期Date日期: _____

故障現象Failure phenomeno故障现象: _____

_____ 日期Date日期: _____

銷售單位蓋章Store Stamp销售单位盖章	日期Date日期: _____

快奘科技有限公司
Q-Point Technology Comp.

FCC statement

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

- These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF exposure warning

- This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER' S AUTHORITY TO OPERATE THE EQUIPMENT.

Statement

- This device PA02 doesn't support the function to modify the country code, and the channel 12 and 13 are closed in the device PA02.