





Echo was invented by **Michael Schlecht**, a web developer from Alpharetta, GA.

This equipment should be installed and operated with a minimum distance of 10 centimeters between the radiator and your body."

Always looking for the next big thing, Michael was intrigued by the idea of smartphones charging wirelessly. When he dug a little deeper, he discovered a gaping hole in the wireless market: there weren't any good options for wirelessly charging portable batteries (gasp!). Luckily, he came up with Echo, and now we can all go completely cord free.

It all started with **Michael's** render

Submitted to Quirky in Feb. '14

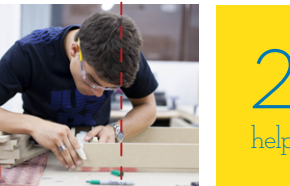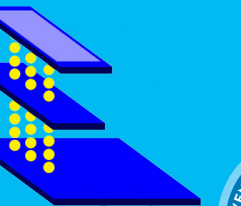

2551 influencers helped bring Michael's idea to life.




Like all Quirky products, Echo was invented and influenced by real people like you.

Ordinary people with extraordinary imaginations submit ideas to Quirky every day, then we collaborate with our online community to make the best of those ideas a reality. When a product is sold, we share a cut of the revenue with all those who had an impact.

## HOW QUIRKY WORKS

- 1 Submit your idea
- 2 Help us decide
- 3 Influence and earn
- 4 We make it real
- 5 The world prospers


Submit your product idea to [quirky.com](http://quirky.com)

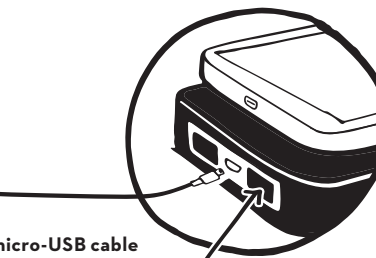

USB to micro-USB cable to charge Echo (cable included)

USB ports to charge non-Qi devices

Note: Charging is stopped and the red LED light will flash if Echo gets too hot. Charging will resume when temperature is normal. Echo automatically powers off after 20 seconds of inactivity.

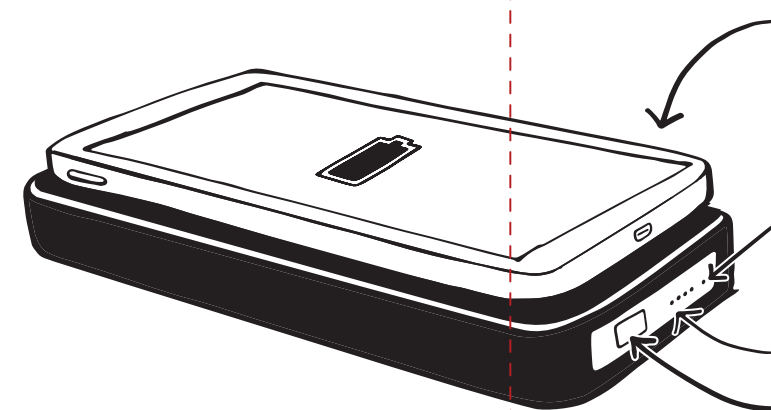

Place your Qi-compatible device on Echo to charge.

1 light indicates wireless charging

4 lights to indicate battery level

Red LED light will turn on if Echo gets too hot!

Power ON for portable charging/ battery level indicator



## IN THE BOX

- Echo wireless charging battery pack
- 2' USB to micro-USB cable
- User guide

## WHAT YOU'LL NEED

Qi-compatible device, or device with Qi-compatible accessory, or device that can be charged via USB.

## FEATURES AND FUNCTIONS

- Battery capacity: DC 3.7V 6000mAh
- Slim design for portability
- Wired and wireless charging capabilities
- 1 micro-USB input for wired charging (comes with USB to micro-USB charging cable)
- 2 USB outputs for charging devices from battery
- Qi receiver for wirelessly charging the battery
- Qi transmitter for wirelessly charging devices from battery

## DIMENSIONS

6.12" L x 3.01" W x 0.66" H (155.45 mm X 76.45 mm x 16.76 mm)

## IMPORTANT SAFETY INFORMATION

- Read all instructions and warnings prior to using device. Failure to comply with instructions and warnings constitutes improper use of device. Save all instructions.
- Quirky, Inc. is not responsible for improper use, which may result in personal injury or product damage.
- Not a toy. Keep away from children.
- CAUTION: RISK OF ELECTRIC SHOCK. Do not expose device to liquid, moisture, humidity, or rain. Do not use the near a bathtub, sink, sauna, pool, or steam room. Do not place objects filled with water, such as a vase, on the device.
- CAUTION: RISK OF FIRE OR EXPLOSION. Do not exceed electrical ratings. Do not expose to excessive heat such as sunshine, open flame or other heat sources. Do not store in high temperature environments. Do not dispose of device in fire, as explosion may occur.
- Do not open, crush, or short terminals. Do not short circuit the metal contacts on side of battery or inside base using tools or other metallic objects.
- Do not attempt to modify, disassemble, or replace any part of device or any part of battery. There are no user-serviceable parts. Refer all servicing to qualified personnel.
- The battery should be operated in open air conditions only.

Do not operate in an unventilated space such as a bag, pocket, or purse. Failure to follow these instructions may cause damage to the power station by overheating.

- Do not block any ventilation openings.
- Be cautious of excessive drops, bumps, abrasions, or other impacts to the battery. If there is any damage to the battery such as dents, punctures, tears, deformities, or corrosion—due to any cause—discontinue use and contact the manufacturer or dispose of it in an appropriate manner at your local battery recycling center.
- Clean only with a dry cloth. Do not clean device while being charged.
- Do not attempt to charge battery using any method, apparatus, or connection other than the supplied USB connector.
- All batteries have gone through a thorough quality assurance inspection. If you find that your battery is excessively hot, deformed, cut, emitting odor, experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use and contact the manufacturer.
- Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery recycling center.
- For battery replacement, please contact manufacturer.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.
- For extended storage, first charge your battery for one hour.
- Store in a cool, dry place.

## COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This device complies with Part 18 of the FCC Rules.

## LIMITED ONE-YEAR WARRANTY

Quirky, Inc. ("Quirky") Original Purchase Product Warranty:

Quirky warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will refund or replace, at its option, any defective product free of charge.

In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase to Quirky for inspection. The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

To request service under this warranty, contact Quirky at 8665QUIRKY or questions@quirky.com and a Quirky representative will provide instruction on how to proceed.

This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with in any way. This warranty does not protect against normal use, wear and tear, or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF

QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

## COPYRIGHT AND TRADEMARK NOTICE

© 2014 Quirky, Inc. All rights reserved. Quirky is a registered trademark of Quirky, Inc. The 'Qi' symbol is a trademark of the Wireless Power Consortium. iPhone is a registered trademark of Apple, Inc. \*Smartphone not included.

## SUPPORT

Need help?

Email questions@quirky.com  
Call 18665QUIRKY



**Quirky** ECHO  
portable battery for USB  
and Qi-compatible devices