

尺寸: 147*312mm 材质: 128g双铜 装订成册

BOIL

Smart Kettle

User Manual



Quirky

TABLE OF CONTENTS

Important Safety Information.....2

Introduction.....4

Overview.....4

Specifications.....5

Controls and Features.....6

Operating Instructions.....7

Auto Shut-off Safety Feature.....10

Install the Quirky App.....11

Using Alexa.....17

Using Google Home.....19

Cleaning.....23

Descaling the Kettle.....23

Troubleshooting.....24

RF Statement.....25

RF Warning Statement.....25

Warranty.....26

Pictures in the manual are for reference only. Please refer to the actual product.

1

IMPORTANT SAFETY INFORMATION

SAVE THESE INSTRUCTIONS

When using your Boil, basic safety precautions should always be followed. Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Quirky Boil is designed only for home use and domestic commercial applications such as small offices, restaurants, and hotels. Neither Quirky nor its affiliates are responsible for damage resulting from improper use or for damages caused by non-compliance with the information, warnings, and instructions provided in this manual. Please keep this manual in a safe place for future reference.

• Before inserting the main plug into a power outlet, ensure that your main supply voltage and current rating matches the power supply details on your WiFi Kettle's model label. Boil's rated voltage is 120V and its fixed frequency is 60 Hz.

• Never immerse the sub-base or the heating base in liquid. Wipe the surfaces clean with a damp cloth or sponge.

• Never place the sub-base of the kettle or the heating base in the dishwasher.

• If repairs are needed, send the appliance to our customer service department, or a qualified service provider, do not attempt to repair the unit yourself.

• Always turn the unit OFF after use; in case of a malfunction; and before cleaning.

• When removing the plug from the wall socket, never pull on the power cord.

• Keep all parts of the kettle out of reach of children at all times.

• Do not attempt to remove any parts of the housing.

• Do not insert metal objects into the interior of the appliance.

• To prevent damage to the power cord, do not let it pass over sharp corners or edges.

• Do not expose the appliance to rain or moisture.

• Do not operate the appliance outdoors or with wet hands.

Please read this manual carefully and retain for future reference.

2

SAVE THESE INSTRUCTIONS

• Keep away from heat or open flame.

• Add only clean, cold water to the kettle.

• Do not overfill the kettle.

• This appliance is designed for heating water only; do not add any other liquids, except decalcifying solution, to the kettle.

• Only use the kettle with the provided heating base.

• Avoid spilling water on the heating base or power cord.

• If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent.

• Do not operate Quirky Boil if the power cord shows signs of damage or if it has been dropped.

• The surface of the heating base will be very hot during use and for a short while after use. Ensure that the base has cooled before touching.

WARNING: Quirky Boil is not intended for use by children. It is not a toy! Do not allow children to play with any part of the appliance. Keep children away from the power cord; they can pull the unit down and be burned by hot water or become entangled in the power cord. Keep the kettle, the heated base, and the cord out of the reach of children at all times.

WARNING: This appliance operates at very high temperatures. There could be danger of scalding from escaping water or steam. Do not touch any part of the kettle except the stay-cool handle when the appliance is in use and ensure that the lid is properly closed.

WARNING: Position the lid so that steam is directed away from the handle.

WARNING: Do not remove the lid while the water is boiling.

WARNING: Ensure that Quirky Boil is switched off before removing the kettle from the base.

WARNING: There is potential injury from misuse of this product.

Please read this manual carefully and retain for future reference.


3

INTRODUCTION

Thank you for purchasing the Quirky Boil Smart Kettle! Ever wish you could put the kettle on before you get home? Now you from your car or the train, from the supermarket as you check-out, or from your bed on a lazy Sunday morning!

The best thing to hit your kitchen since hot coco and Irish Breakfast Tea is Boil, the WiFi smart kettle. You can control it with the sound of your voice or a touch of your phone.

OVERVIEW



4

SPECIFICATIONS


RATED VOLTAGE	120V
POWER	1500W
HEATING SPEED	4-8 MINUTES
HEATING METHOD	UNDERPAN HEATING
HEATING TYPE	THERMAL
KETTLE MATERIAL	GLASS
BASE ROTATION	360°
PROTECTION	AUTO SHUT-OFF
CAPACITY	71 CUPS / 17 LITERS
FCC ID	ZAANZBOIL

Pictures in the manual are for reference only. Please refer to the actual product.

5

CONTROLS AND FEATURES

The control panel consists of an LED display, programmable timer and temperature control keys, as well as a power on/off button.



First Use Cleaning Instructions

Ensure the Boil is clean and all packaging has been removed from inside and outside the product. Before using the Boil for the first time, clean it by allowing the kettle to run through several boiling cycles.

1. Fill the kettle with cold, clean water to the fill line and allow it to heat to boiling.

2. When the boiling stops and the kettle is ready to pour, dump out the water.

3. Refill again and repeat the boil/dump process 2-3 times.

What Type of Water Should You Use?

We recommend the use of filtered water for the Boil kettle.

Using filtered water not only gives you the best taste, it prevents sediment from building up in your kettle and calcifying the kettle.

6

OPERATING INSTRUCTIONS

1. Place the cordless base on a firm and level surface.

2. Pour the desired amount of clean water into the kettle.


3. Add water to the kettle. Water levels can be measured using the level marks on the side of the glass kettle.

4. Close the lid, and ensure it clicks into place.

5. Position the kettle properly on the base. If not properly positioned, the display will show "EO." When properly placed, the display will show "OF."

DO NOT TOUCH ANY PART OF THE KETTLE EXCEPT THE HANDLE.


ALWAYS PAY ATTENTION TO MIN / MAX WATER LEVELS TO ENSURE THE LID IS PROPERLY AND FIRMLY CLOSED.



7

6. Insert the plug into a wall outlet. The Boil will "buzz" to indicate it is connected to a power source.

7. Press the On/Off button once to start Boil. The LED indicator light will turn on, indicating that Boil is working. The display will show "On."



8. The Boil will continue to work until all the water reaches boiling point, and then it will shut off automatically.

9. To stop Boil before the water is fully boiled, press the On/Off button to turn it off. The red LED indicator light will turn off.

8

Keeping Water Warm

The Boil is programmable to keep your water warm.


1. While the Boil is working, press the "Prog" button.

2. The red indicator light will turn green, and the Boil will still be working.

3. The display will change to Thermostat mode to show you current water temperature.

4. Press the "Temp +" and "Temp -" buttons to adjust the temperature you want.

5. Once the temperature has been set, wait 5 seconds to have Boil set the desired temperature. To change temperature, repeat steps 1-5 to set a new desired temperature.



6. Boil will heat water until it reaches your desired temperature. Once this temperature is reached, Boil will continue heating for 15 seconds, and then keep warm to maintain the temperature.

WARNING: DO NOT LEAVE THE KETTLE UNATTENDED WHILE BOILING WATER AS YOU MAY NEED TO INTERVENE MANUALLY FOR SAFETY.

9

Pouring Boiling Water

Once water is boiled, you may pour it into another container.

NOTE: When pouring boiling water, make sure you are only holding the kettle by the stay-cool handle.

Ensure that water is leaving the kettle from the spout to better control the flow of water.

Replace the kettle on the base when not in use, and unplug the cable from the power source.

AUTO SHUT-OFF SAFETY FEATURE

The Boil is equipped with a safety auto shut-off feature to protect the appliance from damage in case of improper use.

If the Boil is activated accidentally without first being filled with water, or if all the water in the Boil has evaporated during boiling, the auto shut-off will engage and disable the heating element.

In the event that the auto shut-off is engaged, remove the power plug from the wall outlet immediately.


Wait 3-5 minutes until the kettle is sufficiently cool.

Then proceed to refill the kettle and continue use.

10

INSTALL THE QUIRKY APP

Please scan the QR Code, or search for "Quirky" in the App Store or Google Play.




Quirky

Available on the App Store

GET IT ON Google Play


Works with:



Registration and Login

1. Run the Quirky App from your smart phone.

2. Register or login. The App will take you to the home page.

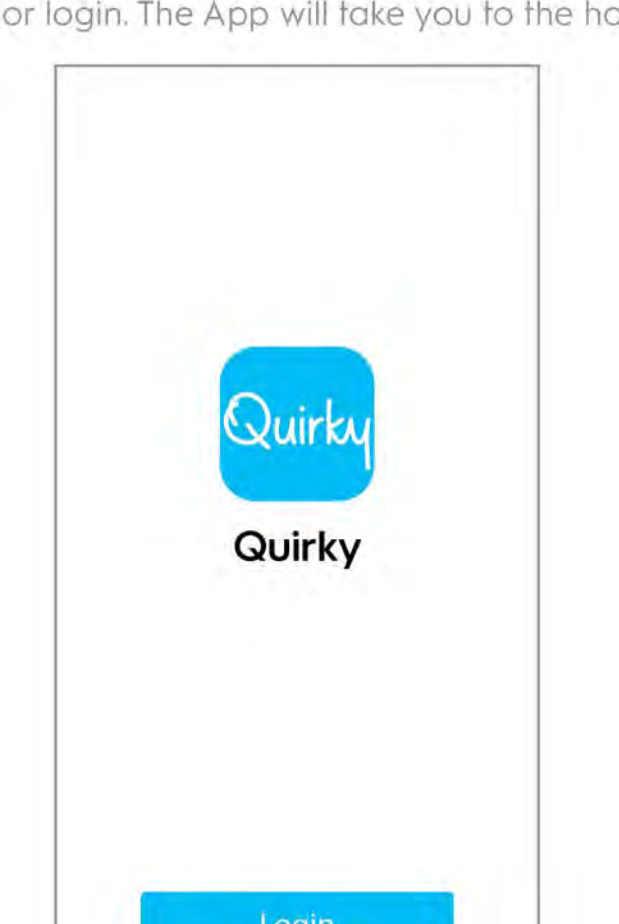

11

Device Preparation

Before moving forward, please ensure your Boil and your device are prepared for pairing and setup.

• Ensure Boil has been connected to a power source.


• Ensure your smart phone is able to connect to a WiFi network and has internet access.

• Download and open the App on your smart phone.

Pairing


1. If this is the first time connecting a Quirky smart home device, you can add your first device by pressing the "Add Device" button on the home page.

If devices are connected to your Quirky App, and you want to add a new device, press the "+" icon on the top right to connect a new device.

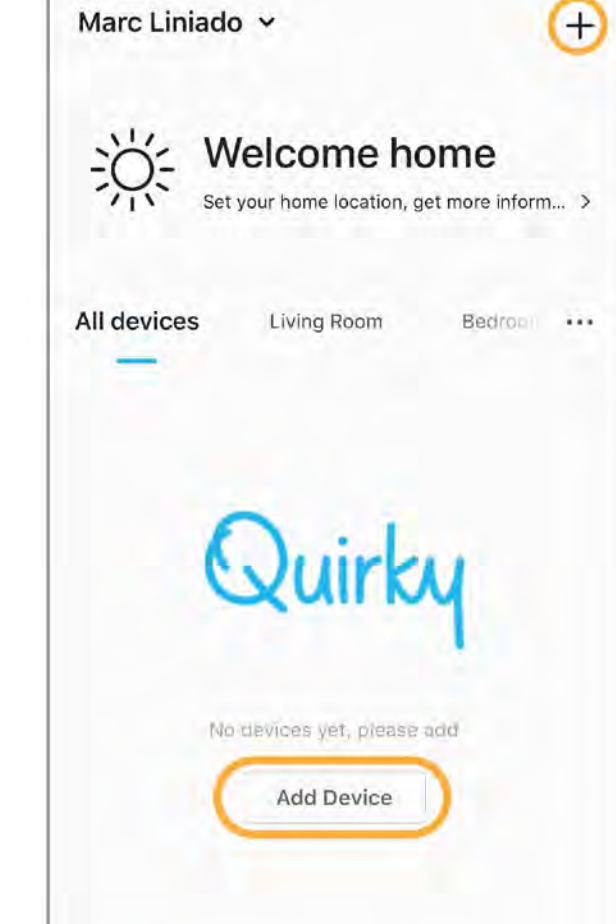

12


2. Select the device you want to connect from the list.

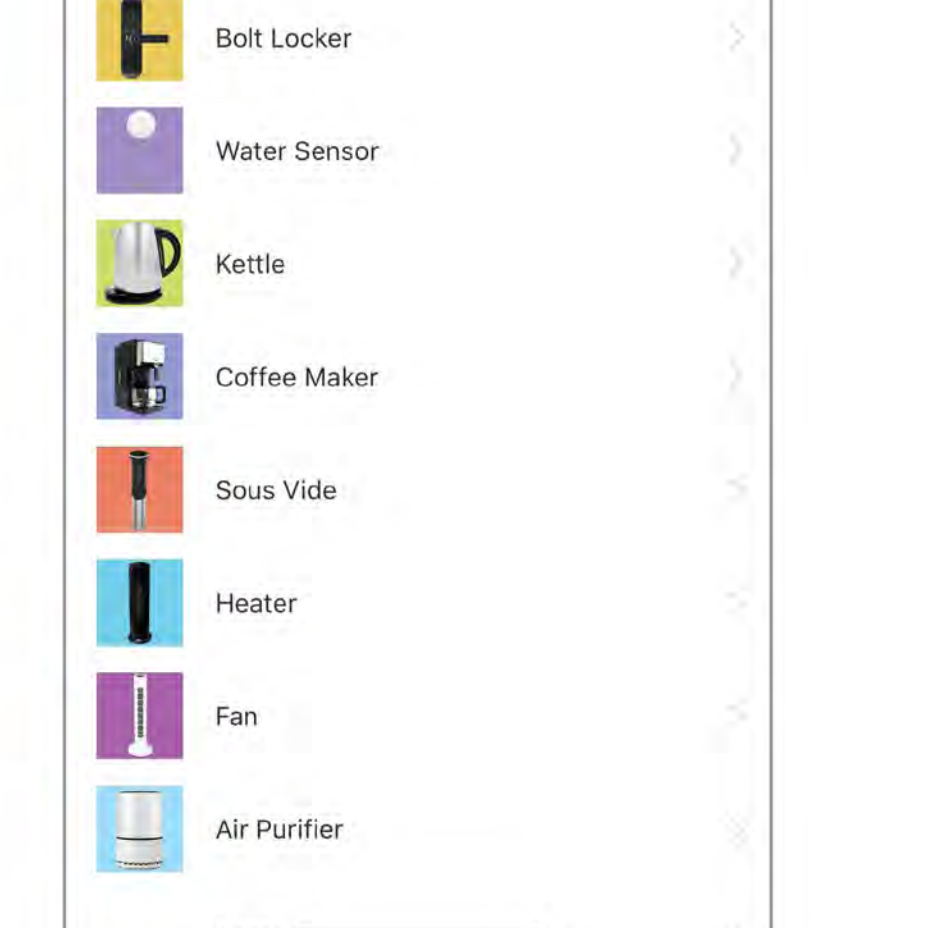

13

3. Follow the steps as prompted by the App to finish connection. If you get stuck somewhere, start again from the beginning.


According to the requirements of ETL software standard, you need manually enable WiFi function for every time when it is plugged in.



14

4. The App will show you a list of nearby WiFi networks. Select your home network, enter your password, and connect to it through the App.

If you do not see your WiFi Network on the list, press "Change Network."

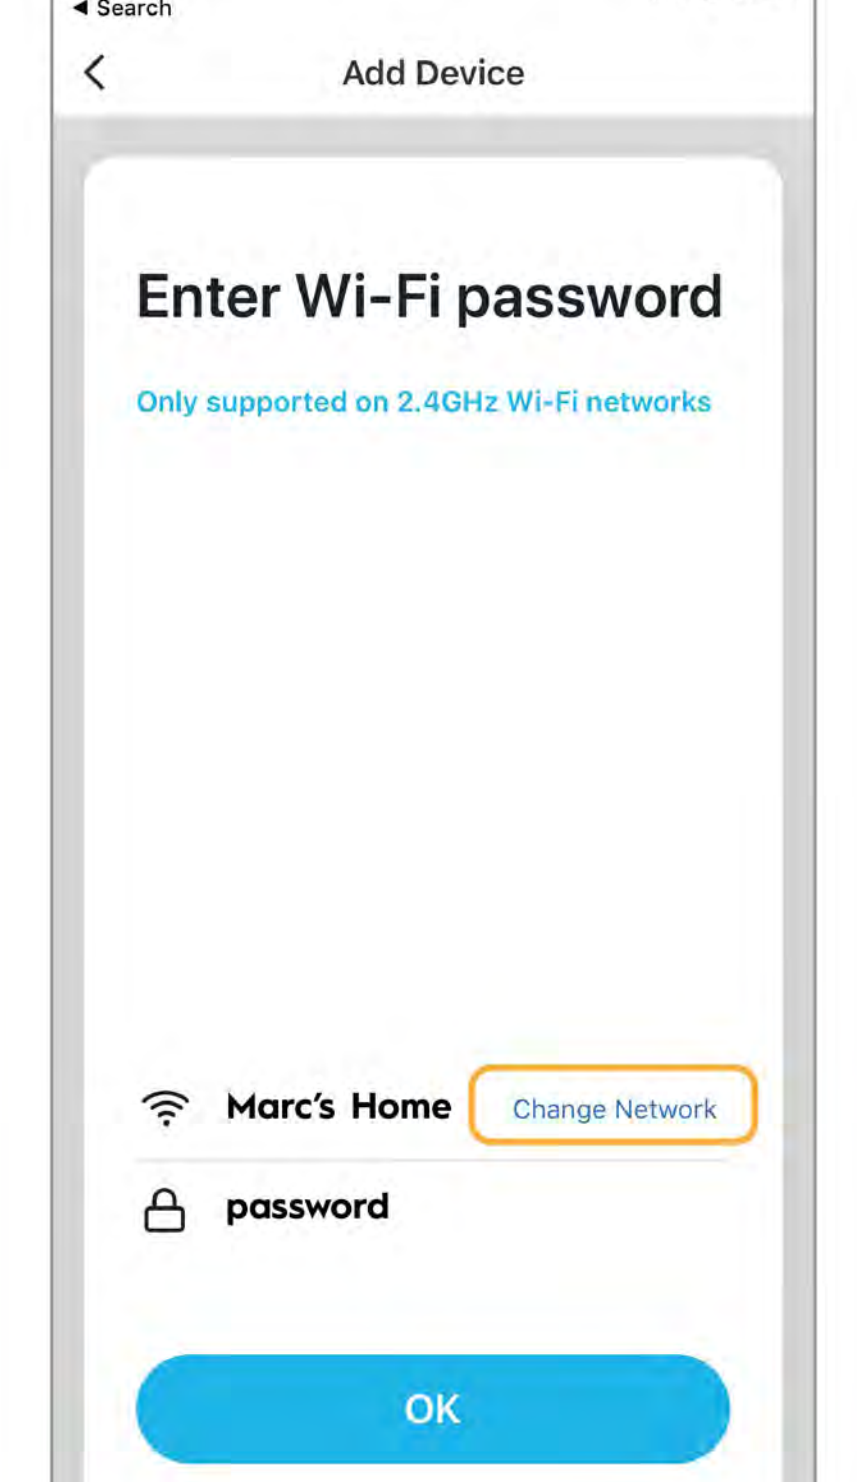

15

5. Wait for your device to finish connecting.

Connecting

5%


Make sure your router, mobile phone, and device are all close as possible.

Connecting

100%

Make sure your router, mobile phone, and device are all close as possible.

6. Once your device is connected, it is ready to use.

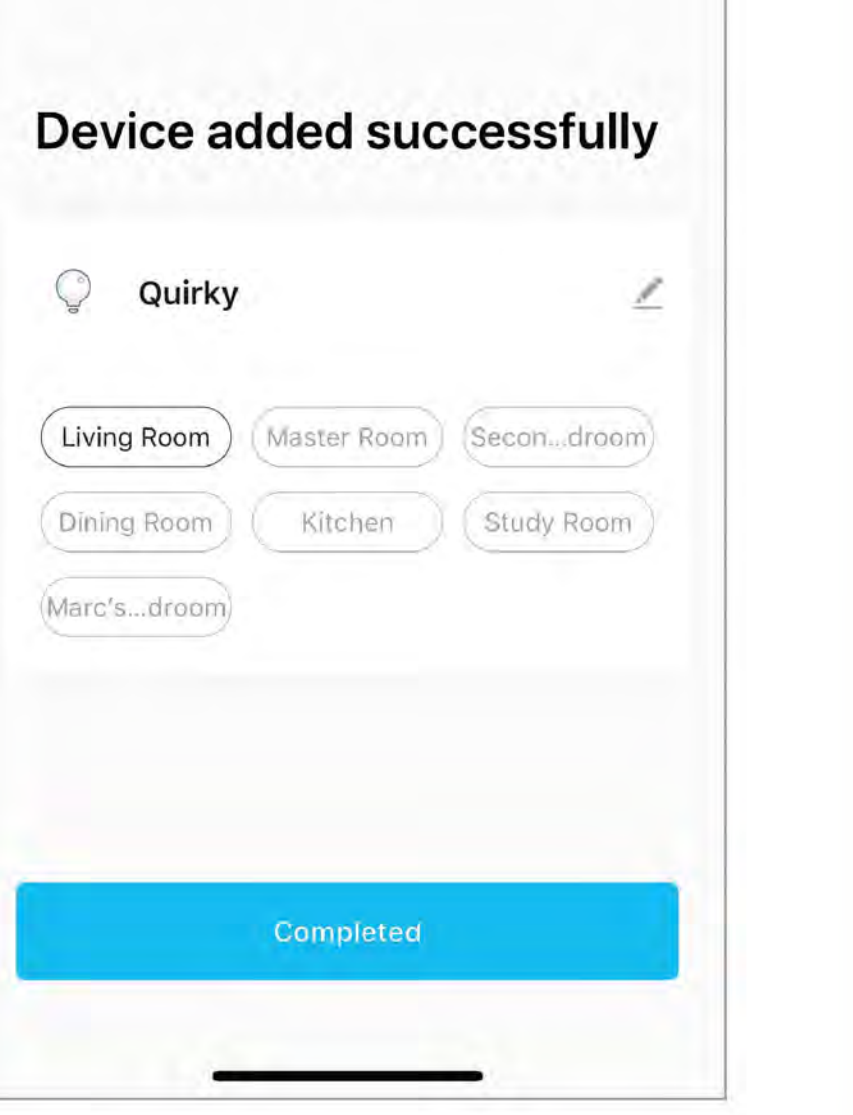


16


USING ALEXA

Please make sure that your Alexa app is connected to Amazon Echo and both work together successfully under your WiFi home network.

1. Log in your Alexa App, tap top left corner, and tap "Skills".

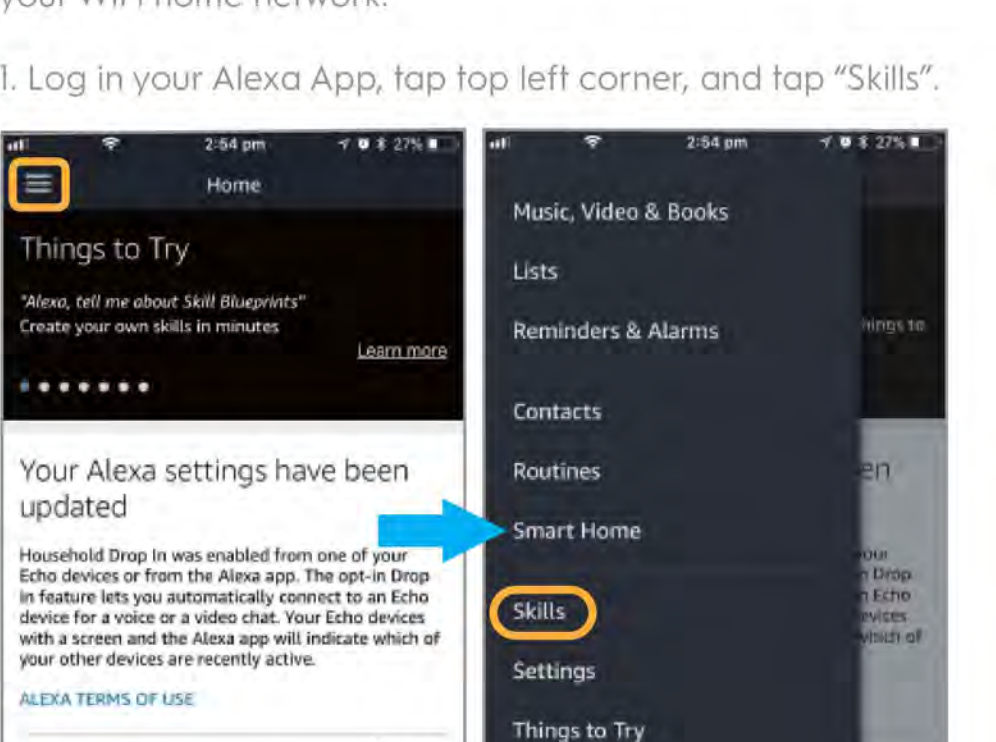

2. Find the Quirky App in the search bar and tap "Enable."

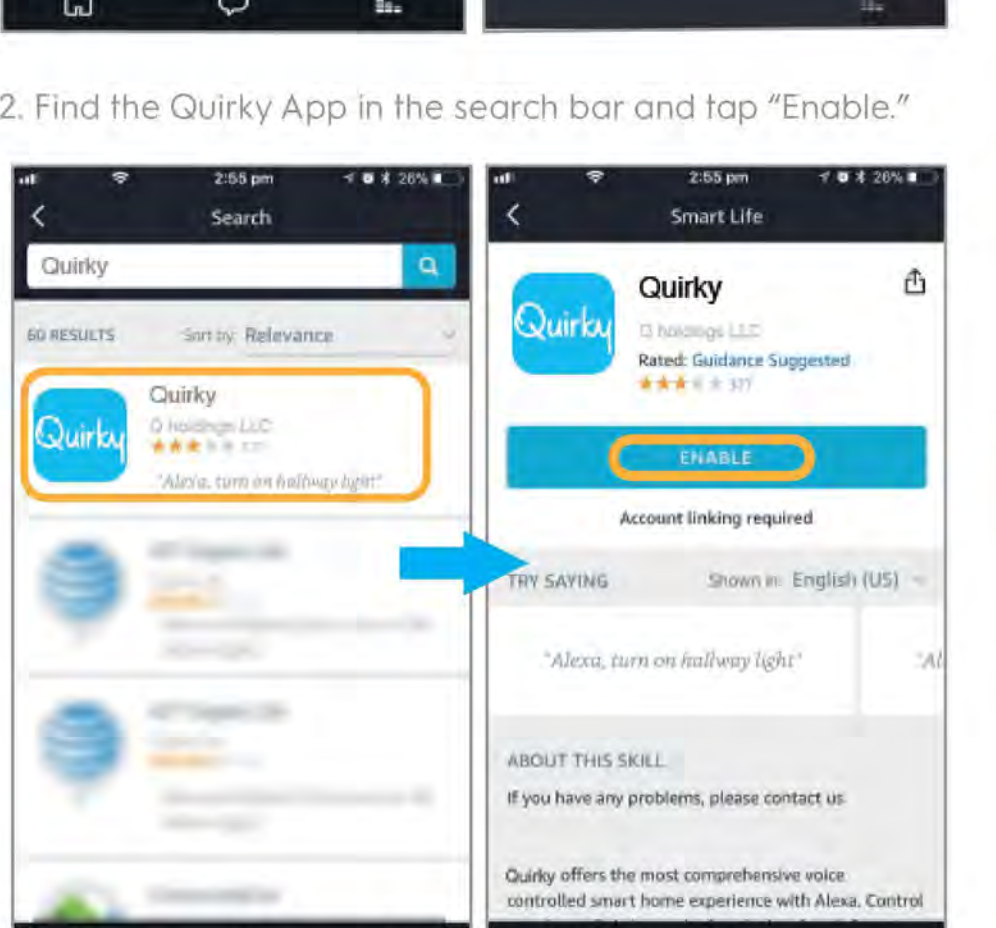


17


3. Enter the account and password of your Quirky App that you created during registration or login.

4. Tap "Link Now," then tap "Authorize" on the next page to connect Alexa to Quirky.

5. Once connected, the following page will appear. Tap "Done" on the top left corner to complete connection.

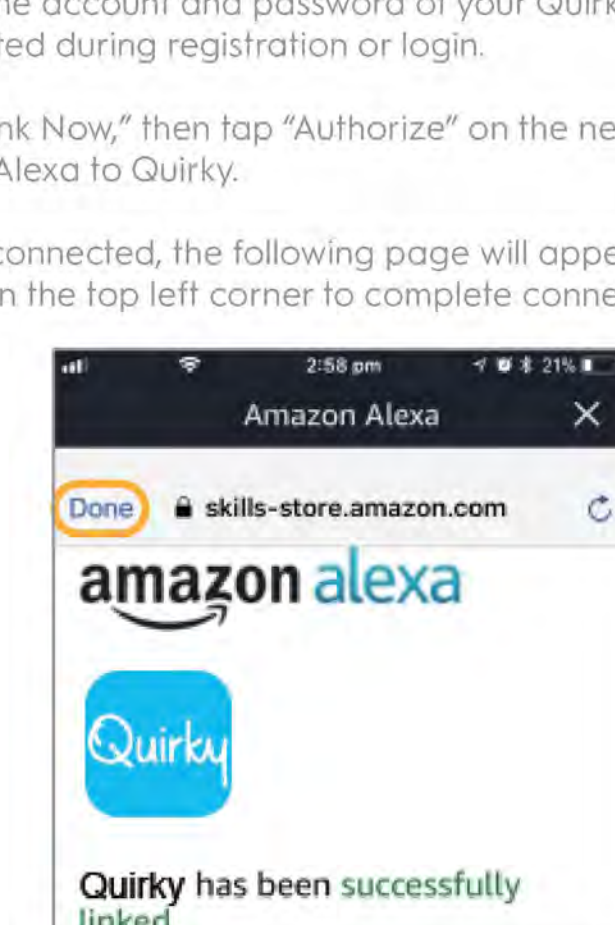

6. Tap "Discover Devices" on the next page.

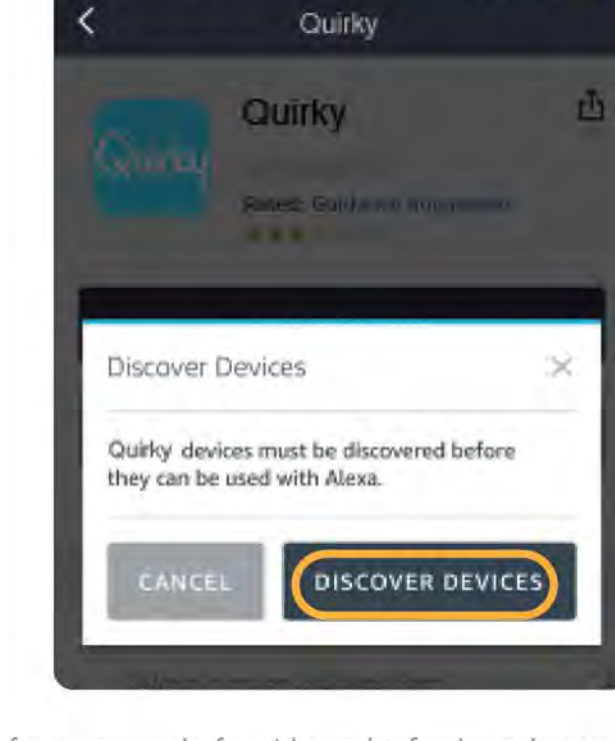

7. Wait a few seconds for Alexa to find and connect to your device through the Quirky App. You should see your device paired in your list of devices when this is complete.

8. You can now control your device with the Alexa App.

18

USING GOOGLE HOME

PREPARATION

• Download the Google Home app on your smart phone.


• Register your Google Account.

• Pair Boil with Quirky App and name it with a simple and easily recognizable name.

• Finish setting up Google Home.


NOTE: This device currently only supports US accounts.

1. Open your Google Home App, select Account on the bottom right hand corner.

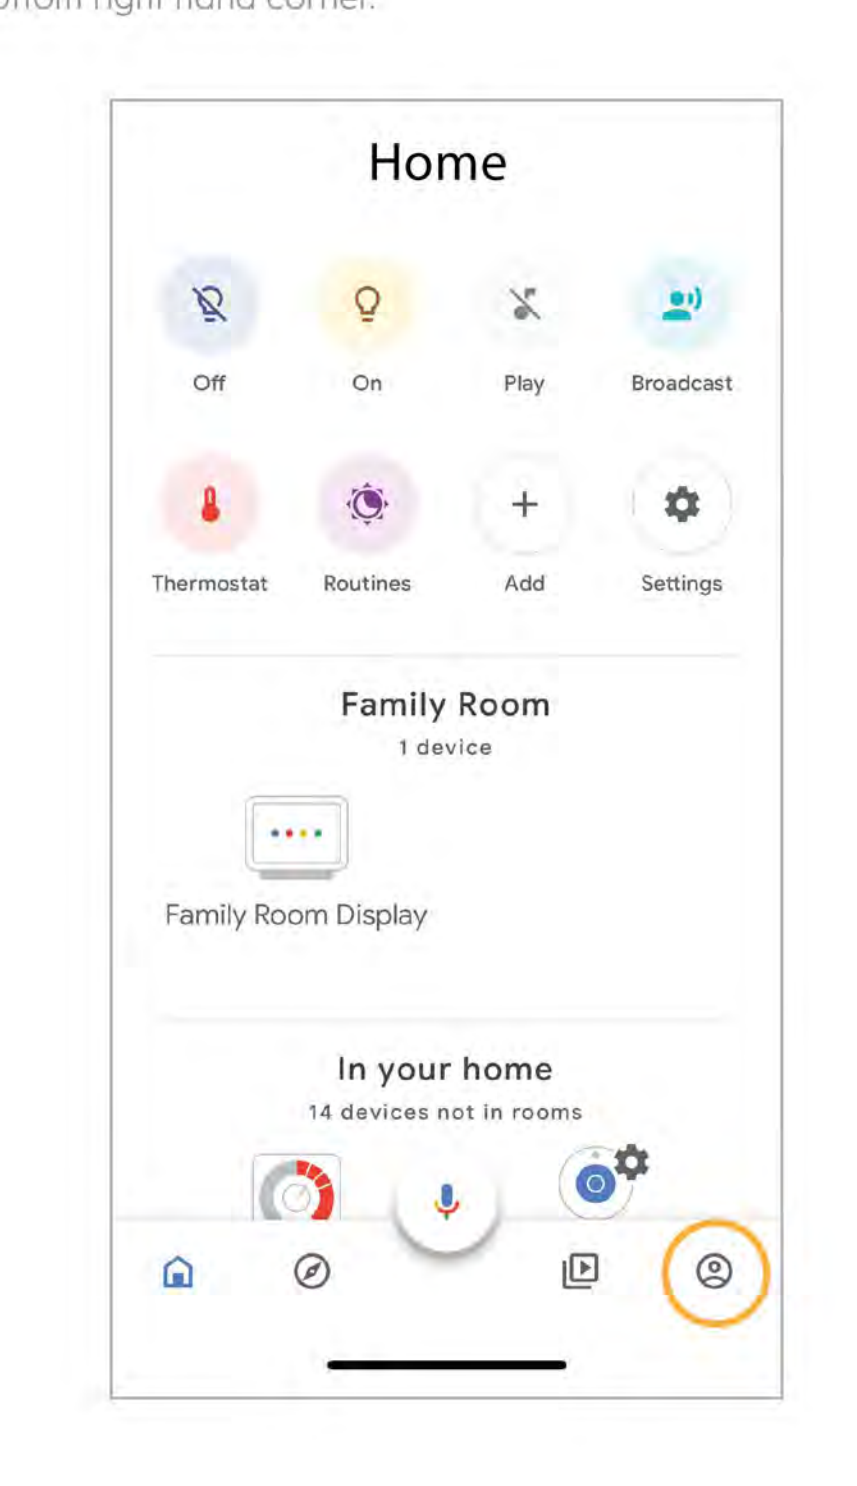


19


2. Tap "Settings."

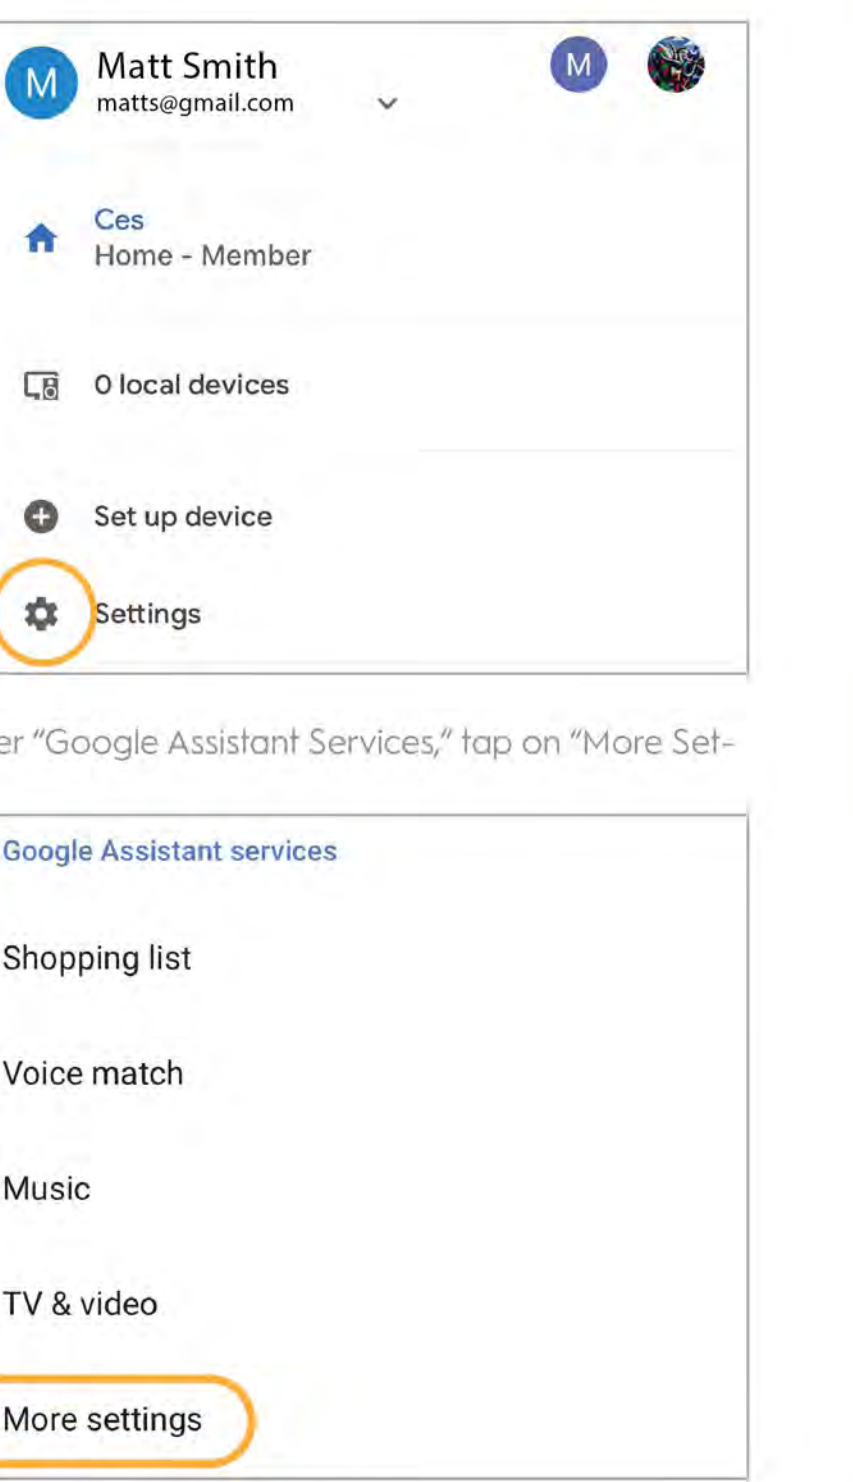

3. Under "Google Assistant Services," tap on "More Settings."

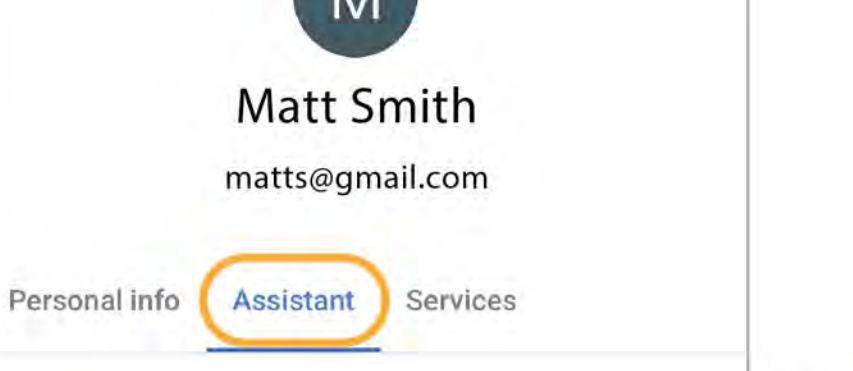


4. At the top, tap "Assistant."




20

5. Tap "Home Control."

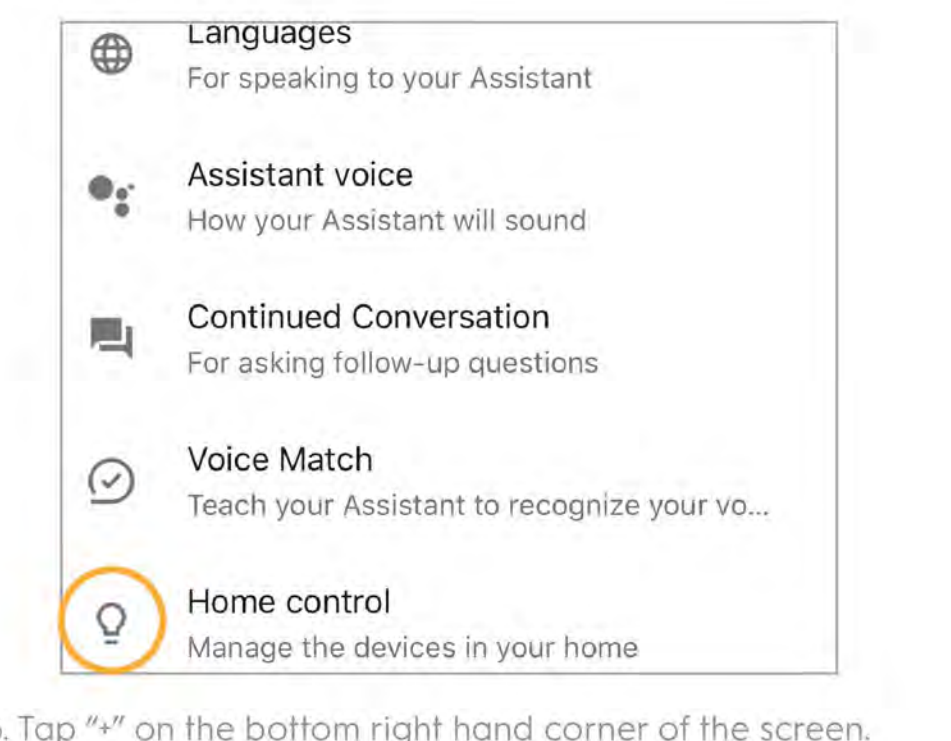


6. Tap "+" on the bottom right hand corner of the screen.

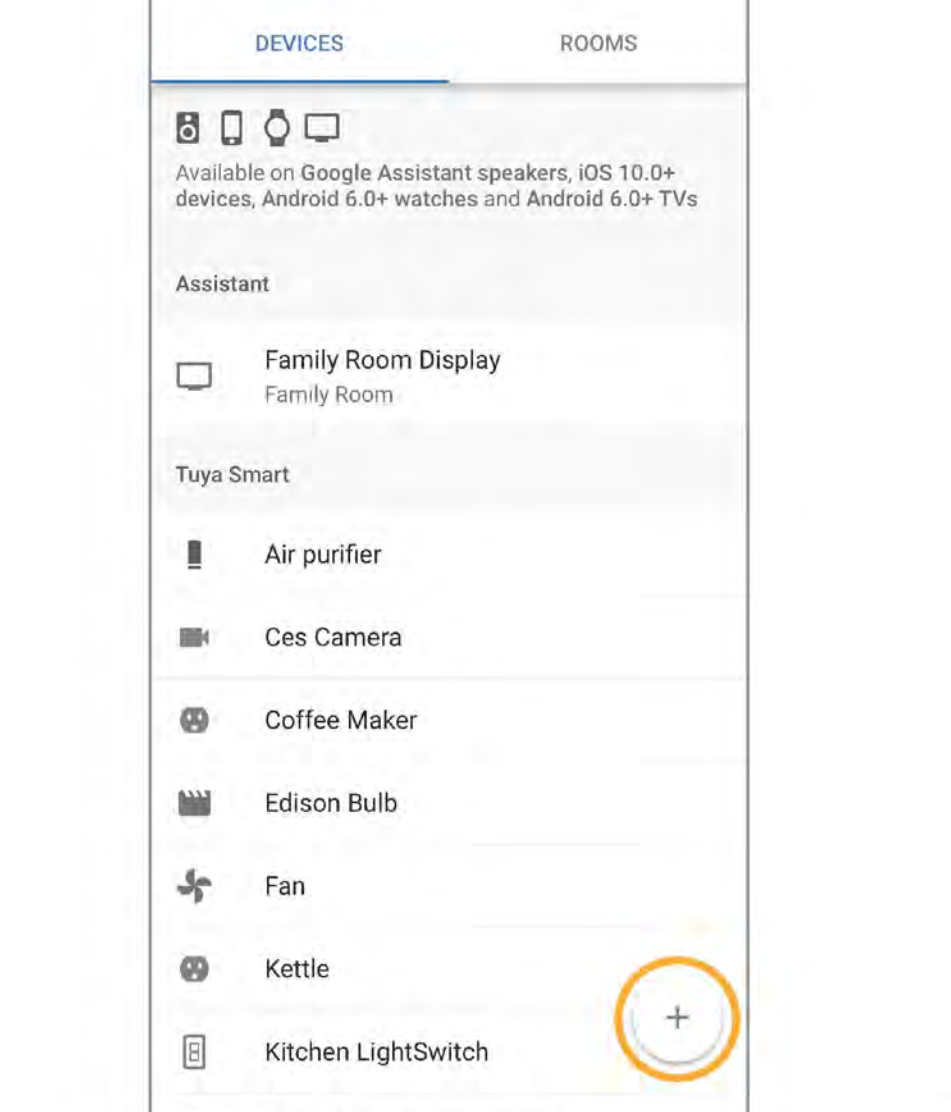


21

7. Find and add the Quirky App from the search bar.

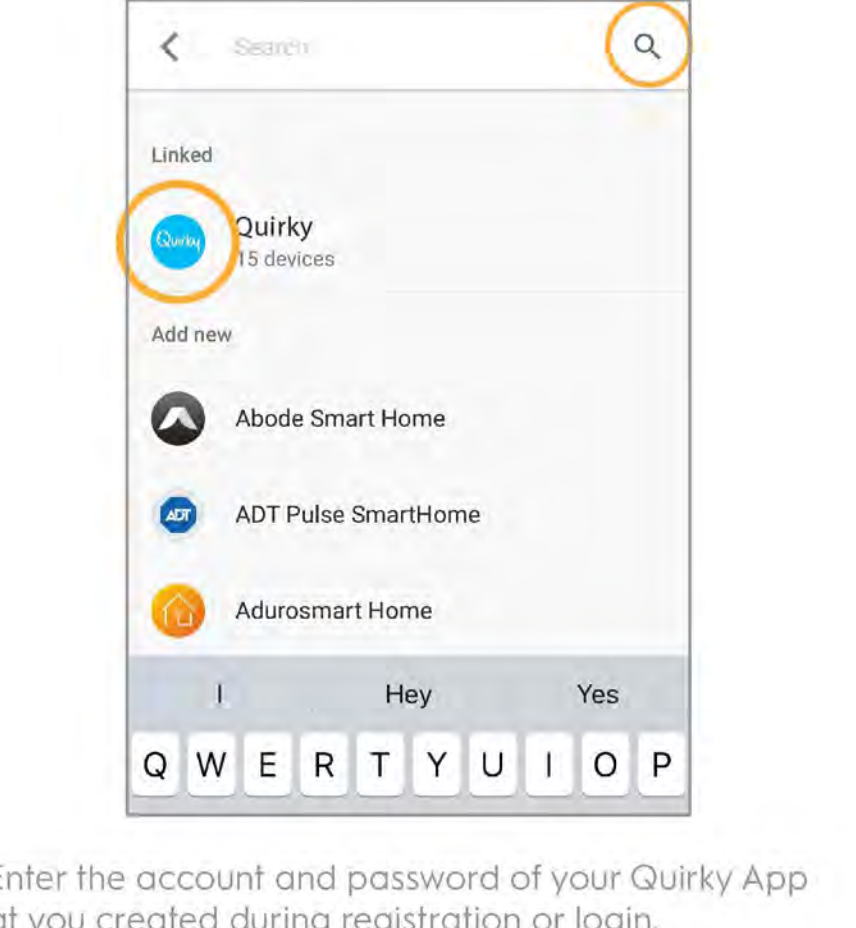

8. Enter the account and password of your Quirky App that you created during registration or login.

9. Tap "Link Now," then tap "Authorize" on the next page to connect Google Home to Quirky.

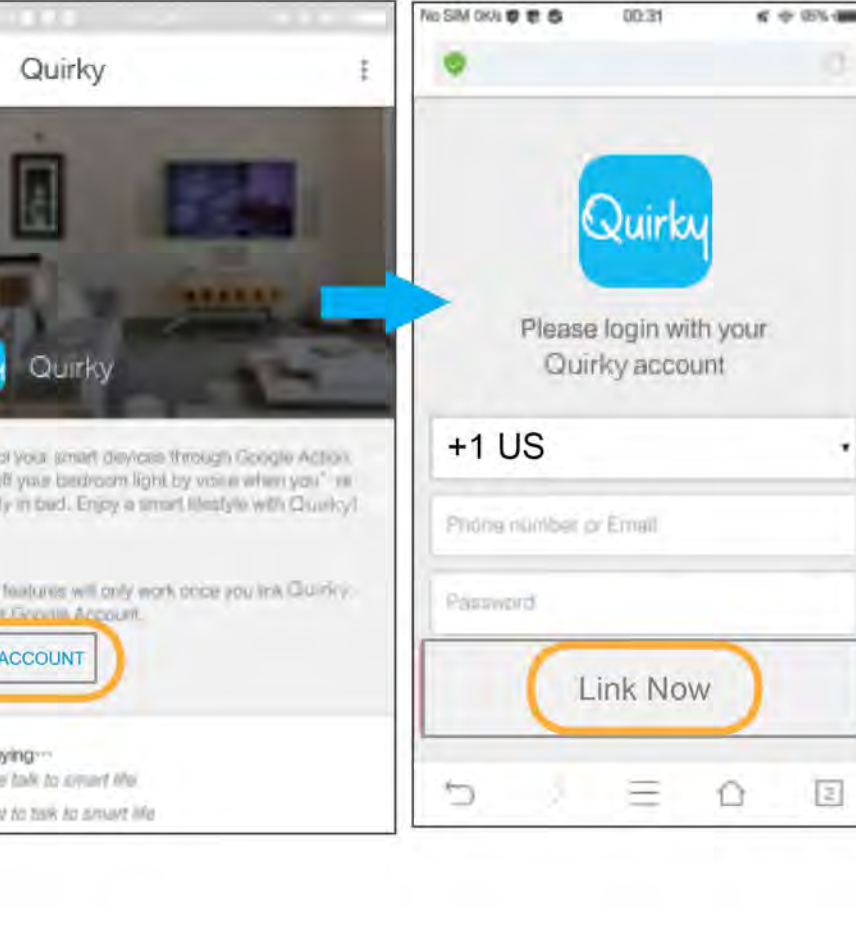

22

CLEANING

1. Only clean the Boil when the power source has been disconnected.

2. Do not use abrasive cleaning tools or harsh cleaning solutions.

3. Do not immerse the heating base or the kettle's sub base in any liquids.

4. Do not place any part of the appliance in the dishwasher.

5. To clean the exterior, use a slightly damp, lint-free cloth or sponge.

6. Ensure the Boil has fully dried before plugging into a power source.

DESCALING THE KETTLE

If you have hard water, it is recommended you decalcify your Boil kettle once every three months to remove build-up.

NOTE: If you are using Boil, and it switches off before the water is fully boiled, this is an indicator that your kettle needs to be decalcified.

1. Pour any decalcifying agent into the kettle as you would pour water. You may also use white vinegar.

2. Leave the kettle for 1 hour or following cleaning agent instructions.

3. Pour out the liquid and wipe clean with a damp cloth.

4. Refill with clean, filtered water.

5. Boil the water, and empty out its contents.

6. After using a cleaning agent, it is recommended you allow the Boil to go through several boiling cycles with new, filtered water. Rinse the kettle with clean water after each boil cycle.

23

TROUBLESHOOTING

Please find some answers to some frequently asked questions about your Boil. If these do not address any issues you may be having, please contact Quirky customer service. Contact information is located at the end of the Warranty Section of this manual.

Q1: The Boil won't turn on.
A1: Ensure your Boil is connected to a working power source.

Q2: The Boil turns off before water is fully boiled.
A2: You may need to decalcify your kettle if you are using hard water. Please refer to instructions in the "Descaling the Kettle" section.

24

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the antenna and the receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio / TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

RF WARNING STATEMENT

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 787 inches / 20 cm between the radiator and your body.

25

WARRANTY

This product is covered by a 90-day limited warranty. For details, please contact customer service at: support@quirky.com

26

27