



Holiday Party Smart

Quickstart Guide

English (3 – 9)

Guía de inicio rápido

Español (10 – 17)

Appendix

English (18)

Quickstart Guide (English)

Introduction

Make sure all items listed in the Box Contents are included in the box.

Box Contents

Holiday Party Smart

Flat Surface Stand

Remote Control

Light Limiting Ring

Quickstart Guide

Safety & Warranty Manual

Important: Download the Holiday Party Smart app from the App Store.

Support

For the latest information about this product (documentation, technical specifications, system requirements, compatibility information, etc.) and product registration, visit ionaudio.com.

For additional product support, visit ionaudio.com/support.

Safety Instructions

- Not recommended for set-up or installation by children. As with all electrical products, exercise caution during handling and use to reduce the risk of electric shock. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not secure the wiring of the product with staples or nails, and do not place the wiring on sharp hooks or nails.
- Do not place or immerse in water or other liquids. Not for use in heavy rain.
- The light is very bright. Do not look directly into the dome light.
- Do not sit, stand, or apply pressure on the dome light.
- Place the power cord away from driveways or walkways to prevent tripping and damage to the power cord.
- It is safe to operate the unit in snow and rain.
- If using this product in wet environments, we strongly recommend using Ground Fault Circuit Interrupter (GFCI) protection on the circuit(s) or outlet(s).
- Remove Holiday Party Smart from the lawn before mowing or weedwhacking.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Contact ION Audio to return the product to a service center for examination and repair.
- Do not close doors or windows on the power cord as this may damage the wire insulation.
- Do not shake.
- Keep the light and power cord away from heaters or other heat sources.
- This is a special purpose using product, used for Multi-color Indoor/Outdoor Projected Light, and it is not for replacing or complementing natural light with artificial light, and this product is not subject to regulation of (EU) No 1194/2012.



Correct Disposal of This Product: This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Quick Setup

1. For optimal coverage, place the light at 15 ft. from the distance you are trying to illuminate. This will provide coverage for an area 80 ft. (24.4 m) wide by 50 ft. (15.2 m) high.
2. Grasp the stake to insert Holiday Party Smart into the ground. Alternatively, if using Holiday Party Smart on a flat surface, unscrew the thumbscrew to remove the stake, and attach the stand in its place.
3. Connect the power cord into a standard wall socket or extension cord rated for outdoor use. Holiday Party Smart will automatically turn on when plugged in. Use the remote control or the Holiday Party Smart app on your smartphone to turn the unit on and off, or to set an automatic timer. Unplug when not in use.
4. Turn the thumbscrew to loosen, angle the fixture either up or down, and tighten the thumbscrew at the desired projection angle/area. If the lights are spilling onto a neighboring house or structure, try placing the light closer to the object you want to illuminate.

Note: The darker the area the light is being used in, the brighter the projection. Try to stay away from areas with street lights and other bright lights.

Installing the Holiday Party Smart App

IMPORTANT: To ensure the best possible experience with the app, use the most current Android OS or iOS on your device.

Note: Ensure that your device has internet access via your service provider or wireless connection. You can also download the app on your computer, but remember to connect and sync your device to transfer the app.

Follow these steps to download the free app on your device:


1. Open the Apple App Store or Google Play on your device.
2. Search for the Holiday Party Smart app.
3. Follow the on-screen instructions to download and install the app.
4. Once downloaded, the Holiday Party Smart app will appear on your device's home screen.

Before launching the app, make sure your Holiday Party Smart is plugged in and your device's Bluetooth has been turned on. When the app is launched, it will automatically find any Holiday Party Smart units within range. Tap the name to begin controlling that unit. If you have multiple Holiday Party Smart units, each name will be listed on the app home page.

The app's controls mirror those on the remote control, allowing you to start/stop the motor, set the light timer, select individual colors, and power the unit on/off. You can also select the speed of the light effects.

If you are using multiple Holiday Party Smart units, you can select **ALL** at the top of the app to control all devices at once.

If you would like to rename your Holiday Party Smart units, tap the Edit button at the top of the app and enter a new name.

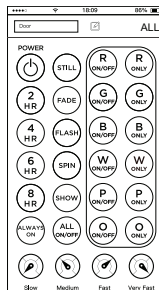


Features

1. **Remote Control Sensor:** Aim the remote control here to adjust the options.
2. **Thumbscrew:** Loosen and tighten this at the angle you want the light to be projected.

Note: Attach the included **Light Limiting Ring** to reduce the overall spread of the lights.

3. **Stake:** Place this into the ground to secure Holiday Party Smart.
4. **Flat Surface Stand:** Attach this by unscrewing the thumbscrew, remove the stake, and replace the stake with the stand.
5. **Dome:** This projects the different colored lights.
6. **Light Limiting Ring:** Align the groove on the ring with the sensor and snap in place using some force. This will limit the overall coverage of the lights up to 30%, useful for preventing light from spilling onto a neighbor's house.

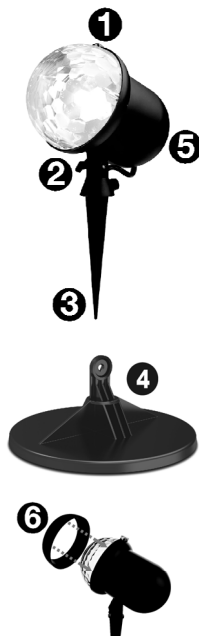


Remote Control

Use the remote control to start/stop the motor, set the light timer, select individual colors, and power the unit on/off. Point the remote control at the front sensor on the dome light and press the button of the option you would like to select. See the diagram for button descriptions.

Note: Before using the remote control for the first time, pull out the tab attached to the battery compartment. To change the remote control battery, follow the diagram located on the back of the remote control. Use a 3V DC CR2025 lithium button cell battery for replacement.

- **Power On/Off:** Puts the unit to sleep (all lights and motor are off).
- **Timer:** Selects how long the lights will stay on (**2, 4, 6, or 8 hours**; or, **Always On**). The lights will also turn back on at the same time each day (24-hour timer).
- **Still:** See the [Light Modes](#) section for Mode details.
- **Fades:** See the [Light Modes](#) section for Mode details.
- **Flash:** See the [Light Modes](#) section for Mode details.
- **Spin:** See the [Light Modes](#) section for Mode details.
- **Show:** See the [Light Modes](#) section for Mode details.
- **All On/Off:** Switches all colors on or off.
- **R On/Off:** Switches the red color on or off.
- **G On/Off:** Switches the green color on or off.
- **B On/Off:** Switches the blue color on or off.
- **W On/Off:** Switches the white color on or off.
- **P On/Off:** Switches the purple color on or off.
- **O On/Off:** Switches the orange color on or off.
- **R Only:** Switches only the red color on.
- **G Only:** Switches only the green color on.
- **B Only:** Switches only the blue color on.
- **W Only:** Switches only the white color on.
- **P Only:** Switches only the purple color on.
- **O Only:** Switches only the orange color on.

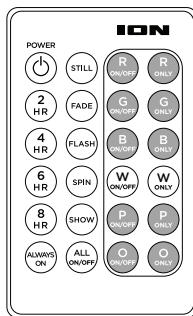

Light Modes

Select from one of the light modes using the remote control or the Holiday Party Smart app on your smartphone. Individual color buttons can be de-selected to have only the colors you want displayed without interrupting the mode.

Still: When Holiday Party Smart is first turned on, it will default to **Still**. In this mode, all 6 colors are on, and the lights are static (no motion). At any time, a color can be selected to toggle that color on or off. Pressing **All Off** will turn all colors off. Then, select which colors you wish to illuminate.

Fades: Press this button to create fading effects at various speeds. Press this button repeatedly to cycle through the following different speeds:

- **Slow Fade:** The colors fade in a sequence slowly from one color to the next. At any time, individual colors can be toggled on or off.
- **Medium Fade:** The colors fade in a sequence slowly from one color to the next with a transition time of 2-3 seconds. At any time, individual colors can be toggled on or off.
- **Fast Fade:** The colors fade in a sequence quickly from one color to the next with a transition time of 1-2 seconds. At any time, individual colors can be toggled on or off.
- **Very Fast Fade:** The colors fade in a sequence quickly from one color to the next with a transition time of 0.5-1 second. At any time, individual colors can be toggled on or off.

Flash: Press this button to create flash effects at various speeds. Press this button repeatedly to cycle through the following different speeds:

- **Slow Flash:** The lights will blink on and off for 3 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Medium Flash:** The lights will blink on and off for 1.5 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Fast Flash:** The lights will blink on and off for 0.5 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Very Fast Flash:** The lights will blink on and off for 0.1 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.

Spin (Motion): When this button is pressed, the motor will cycle through different speeds: **Slow, Medium, Fast, Very Fast, and Off**.

Show Mode (Random): This mode will cycle through the various modes described above at various speeds.

Guía de inicio rápido (Español)

Introducción

Asegúrese de que todos los artículos indicados en Contenido de la caja estén incluidos en ella.

Contenido de la caja

Holiday Party Smart

Soporte para superficies planas

Control remoto

Anillo limitador de luz

Guía de inicio rápido

Manual sobre la seguridad y garantía

Importante: Baje de la tienda de aplicaciones la Holiday Party Smart APP.

Soporte

Para obtener la información más reciente acerca de este producto (documentación, especificaciones técnicas, requisitos de sistema, información de compatibilidad, etc.) y registrarlo, visite ionaudio.com.

Para obtener soporte adicional del producto, visite ionaudio.com/support.

Instrucciones de seguridad

- No se recomienda que sea instalada por niños. Al igual que con todos los productos eléctricos, tenga cuidado al manipularla y utilizarla para reducir el riesgo de descarga eléctrica. Si el cable de corriente se daña, debe ser reemplazado por el fabricante, su agente de servicio o persona calificada similar a fin de evitar riesgos.
- No sujete el cableado del producto con grapas o clavos y no lo coloque sobre ganchos filosos o clavos.
- No lo coloque ni sumerja en agua u otros líquidos. No lo use bajo la lluvia intensa.
- La luz es muy brillante No mire directamente a la luz del domo.
- No se siente, pare o aplique presión sobre la luz del domo.
- Aleje el cable de corriente de veredas y accesos vehiculares para evitar los tropiezos y los daños al cable de corriente.
- Es seguro operar la unidad bajo la nieve y lluvia.
- Si utiliza este producto en ambientes húmedos, le recomendamos enfáticamente contar con la protección de un disyuntor diferencial (GFCI) en el/los circuito(s) o toma(s) de corriente.
- Quite la Holiday Party Smart del pasto antes de cortarlo o podarlo.
- Nunca opere este producto si tiene un cable o enchufe dañado, si no está funcionando correctamente o si se ha caído o dañado, o si se lo ha dejado caer en el agua. Contáctese con ION Audio para retornar el producto un centro de servicio con fines de examinación y reparación.
- No cierre las puertas o ventanas si los atraviesa el cable de corriente ya que esto puede dañar el aislamiento del cable.
- No lo sacuda.
- Mantenga la luz y el cable de corriente alejados de calefactores u otras fuentes de calor.



Disposición final correcta de este producto: Esta marca indica que ese producto no debe desecharse junto con otros desperdicios domésticos en toda la Unión Europea. Para evitar posibles daños al medio ambiente o a la salud humana debidos a la disposición final sin control de los residuos, recíclalo responsablemente a fin de promover la reutilización sustentable de los recursos materiales. Para devolver su producto usado, use los sistemas de devolución o recolección o póngase en contacto con el comercio minorista donde adquirió dicho producto. El mismo puede recibir este producto para un reciclado ambientalmente seguro.

Instalación rápida

1. Para una cobertura óptima, coloque la luz a 15 pies de la distancia que intentar iluminar. Esto brindará un área de cobertura de 24,4 m (80 pies) de ancho por 15,2 m (50 pies) de alto.
2. Sujete la estaca para insertar la Holiday Party Smart en la tierra. Como alternativa, si utiliza el Holiday Party Smart en una superficie plana, afloje el tornillo de mariposa para quitar la estaca y sujete el soporte en su lugar.
3. Conecte el cable de corriente a una toma de corriente estándar de pared o a una extensión de cable apta para exteriores. Holiday Party Smart automáticamente se encenderá cuando se conecte. Use el control remoto o la aplicación en su celular del Holiday Party Smart para encender o apagar la unidad o puede hacerlo por medio del temporizador automático. Desenchúfela cuando no esté en uso.
4. Gire el tornillo de mariposa para aflojar el accesorio de iluminación, inclínelo para arriba o por abajo y ajuste el tornillo de mariposa según el ángulo/área de proyección deseada. Si las luces se están proyectando sobre una casa o estructura vecina, intente acercar la luz al objeto que desea iluminar.

Nota: Cuanto más oscura el área sobre la que se utiliza la luz, más brillante será la proyección. Intente evitar áreas con alumbrado público u otras luces brillantes.

Instalación de la aplicación Holiday Party Smart

IMPORTANTE: Para asegurarse la mejor experiencia posible con la aplicación, utilice el Android OS o IOS más actualizado en su dispositivo.

Nota: Asegúrese de que su dispositivo tenga acceso a internet a través de su operador o conexión inalámbrica. Puede también descargar la aplicación gratuita a su computadora, pero recuerde conectar y sincronizar su dispositivo para transferir la aplicación.

Siga los pasos indicados a continuación para descargar la aplicación a su dispositivo:


1. En su dispositivo, vaya a la tienda de aplicaciones respectiva de Apple o Google Play.
2. Busque la aplicación gratuita Holiday Party Smart.
3. Siga las instrucciones que aparecen en la pantalla para descargar e instalar la aplicación Party Rocker.
4. Una vez descargada, la aplicación Holiday Party Smart aparecerá en la pantalla de inicio de su dispositivo.

Antes de iniciar la aplicación, asegúrese de que su Holiday Party Smart esté enchufado y el Bluetooth de su dispositivo esté encendido. Cuando se inicia la aplicación, automáticamente encontrará cualquier unidad Holiday Party Smart al alcance. Seleccione el nombre para comenzar a controlar esa unidad. Si usted tiene varias unidades Smart Holiday Party, cada nombre aparecerá en la aplicación en la página de inicio.

Los controles de la aplicación reflejan los del control remoto, lo que te permite iniciar / detener el motor, configurar el temporizador de luz, seleccionar colores individuales, y encendido / apagado de la unidad. También puede seleccionar la velocidad de los efectos de luz.

Si está utilizando varias unidades Holiday Party Smart, puede seleccionar ALL en la parte superior de la aplicación para controlar todos los dispositivos a la vez.

Si desea cambiar el nombre de sus unidades Holiday Party Smart, toque Edit botón en la parte superior de la aplicación e ingrese un nuevo nombre.

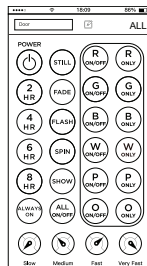


Características

1. **Sensor control remoto:** Apunte el control remoto hacia aquí ajustar las opciones.
2. **Tornillo de mariposa:** Aflójele y ajústelo según el ángulo en el que desea proyectar la luz.

Nota: Coloque el anillo limitador de luz incluido para reducir el ángulo de dispersión de las luces.

3. **Estaca:** Colóquela en el suelo para sujetar la Holiday Party Smart.
4. **Soporte para superficies planas:** Sujételo aflojando el tornillo mariposa, quite la estaca y reemplácela con el soporte.
5. **Domo:** Este domo proyecta las luces de diferentes colores.
6. **Anillo limitador de luz:** Alinee la muesca del anillo con el sensor y encájelo en su lugar aplicando un poco de fuerza. Este anillo limitará el área abarcada por las luces hasta un 30%, lo cual resulta de utilidad para evitar que las luces lleguen a casas vecinas.

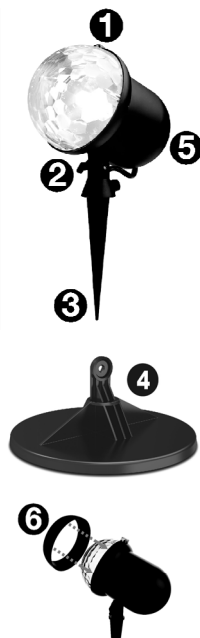


Instrucciones del control remoto

Utilice el control remoto para encender/apagar el motor, Ajuste el temporizador de la luz, seleccionar los colores individuales y encender/apagar la unidad. Apunte el control remoto al sensor delantero del domo de luces y pulse el botón de la opción que desea seleccionar. Consulte las descripciones de los botones en el diagrama.

Nota: Antes de utilizar el control remoto por primera vez, extraiga la lengüeta fijada al compartimiento de las pilas. Para cambiar la batería del control remoto, siga el diagrama ubicado en el reverso del mismo. Utilice una pila de celda tipo botón de litio CR2025 de 3V CC como reemplazo.

- **Power On/Off:** coloca la unidad en modo de ahorro de energía (todas las luces y el motor se apagan).
- **Timer:** Selecciona el tiempo que la luz permanecerá encendida (2, 4, 6, u 8 horas o siempre). Las luces también volverán a encenderse cada día a la misma hora (temporizador de 24 horas).
- **Estático:** Consulte los detalles de cada modo en la sección **Modos de luz**.
- **Desvanecimiento:** Consulte los detalles de cada modo en la sección **Modos de luz**.
- **Parpadeo:** Consulte los detalles de cada modo en la sección **Modos de luz**.
- **Giro:** Consulte los detalles de cada modo en la sección **Modos de luz**.
- **Show:** Consulte los detalles de cada modo en la sección **Modos de luz**.
- **All On/Off:** Enciende y apaga los colores.
- **R On/Off:** Enciende y apaga el color rojo.
- **G On/Off:** Enciende y apaga el color verde.
- **B On/Off:** Enciende y apaga el color azul.
- **W On/Off:** Enciende y apaga el color blanco.
- **P On/Off:** Enciende y apaga el color púrpura.
- **O On/Off:** Enciende y apaga el color naranja.
- **R Only:** Enciende solo el color rojo.
- **G Only:** Enciende solo el color verde.
- **B Only:** Enciende solo el color azul.
- **W Only:** Enciende solo el color blanco.
- **P Only:** Enciende solo el color púrpura.
- **O Only:** Enciende solo el color naranja.

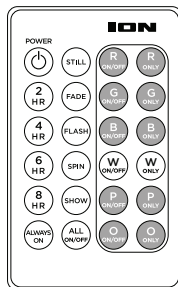

Modos de luz

Seleccione uno de los modos de luz utilizando el control remoto o la aplicación Holiday Party Smart en su teléfono. Los botones de color individuales se pueden des-seleccionar para dejar solamente aquellos colores que desea que se muestren sin interrumpir el modo.

Estático: Cuando el Holiday Party Smart se enciende por primera vez, entrará por defecto al modo **Estático**. En este modo, los 6 colores se encienden y las luces permanecen estáticas (no se mueven). En cualquier momento se puede seleccionar un color para encenderlo o apagarlo. Al pulsar "All Off" (todo apagado) se apagan todos los colores. Luego, seleccione los colores que desea encender.

Desvanecimiento: Pues este botón para crear efectos de desvanecimiento a diversas velocidades. Pulse este botón varias veces para alternar entre las siguientes velocidades:

- **Desvanecimiento lento:** Los colores se desvanecen en una secuencia lenta de un color al siguiente. En cualquier momento se pueden encender o apagar los colores individuales.
- **Desvanecimiento medio:** Los colores se desvanecen en una secuencia lenta de un color al siguiente con un tiempo de transición de 2-3 segundos. En cualquier momento se pueden encender o apagar los colores individuales.
- **Desvanecimiento rápido:** Los colores se desvanecen en una secuencia rápida de un color al siguiente con un tiempo de transición de 1-2 segundos. En cualquier momento se pueden encender o apagar los colores individuales.
- **Desvanecimiento muy rápido:** Los colores se desvanecen en una secuencia rápida de un color al siguiente con un tiempo de transición de 0,5-1 segundos. En cualquier momento se pueden encender o apagar los colores individuales.

Parpadeo: Pues este botón para crear efectos de parpadeo a diversas velocidades. Pulse este botón varias veces para alternar entre las siguientes velocidades:

- **Parpadeo lento:** Las luces parpadearán durante 3 segundos y luego cambiarán a una nueva combinación de colores abruptamente. En cualquier momento se pueden encender o apagar los colores individuales.
- **Parpadeo medio:** Las luces parpadearán durante 1,5 segundos y luego cambiarán a una nueva combinación de colores abruptamente. En cualquier momento se pueden encender o apagar los colores individuales.
- **Parpadeo rápido:** Las luces parpadearán durante 0,5 segundos y luego cambiarán a una nueva combinación de colores abruptamente. En cualquier momento se pueden encender o apagar los colores individuales.
- **Parpadeo muy rápido:** Las luces parpadearán durante 0,1 segundos y luego cambiarán a una nueva combinación de colores abruptamente. En cualquier momento se pueden encender o apagar los colores individuales.

Giro (movimiento): Pulse este botón varias veces para alternar el motor entre las siguientes velocidades: **lento, medio, rápido, muy rápido, y apagado.**

Modo show (aleatorio): Este modo alternará entre los diversos modos descriptos anteriormente a diversas velocidades.

Appendix (English)

Technical Specification

Dimensions (Depth x Width x Height)	4.9" x 7.7" x 11.9" 124 x 195 x 301 mm
Weight	1.76 lbs. / 0.8 kg
Power	100-240V~50/60Hz 8W 350mA
Remote Control Battery	3V DC CR2025 lithium button cell battery
Remote Control Range	32 feet / 10 m
Operating Temperature Range	-4°F – 113°F (-20°C – 45°C)
Water Resistance Class	IPX4
LEDs	(6) 1-watt LEDs (1 red, 1 green, 1 white, 1 blue, 1 orange, 1 purple)
LED Coverage Area	Up to 4000 sq. ft. from 15 ft. distance (80 x 50 ft.) Up to 372 sq. m from 4.6 m distance (24.4 x 15.2 m)

Specifications are subject to change without notice.

Trademarks & Licenses

ION Audio is a trademark of ION Audio, LLC, registered in the U.S. and other countries. App Store is a trademark of Apple Inc., registered in the U.S. and other countries. Android and Google Play are registered trademarks of Google Inc. The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by ION Audio is under license. All other product names, company names, trademarks, or trade names are those of their respective owners.

ionaudio.com