

Users Manual

GSM Mobile Tablet

Model name: PMID703GK

Trand name: Polaroid

FCC ID: 2ABD2PMID703GK

Power key: Press and hold this key to turn on/off the mobile phone; in standby state, press this key to turn on/off the screen

Menu key: Press this key to open the action list, so that you can execute the action in current interface or menu.

Home key: Press this key to return to the home page from any application or interface.

Back key: Press this key to return to previous interface, or close the dialog box, menu, notification panel or the screen keypad.

Side key: Press this key to adjust volume



Installation method and precautions of SIM card

By setting PIN (personal identification number) code of the SIM card, you can protect your SIM card from illegal operation.

Installing SIM card

This is a dual SIM mobile phone with two SIM slots. Please turn off the mobile phone first, take out the battery, and insert the SIM card into the slot as shown in the picture below; then, place the battery into the battery jar and install the battery cover.



Precautions of SIM card

By setting PIN (personal identification number) code of the SIM card, you can protect your SIM card from illegal operation.

If the PIN code is enabled, you need to enter the valid PIN code when you turn on the mobile phone.

If you input wrong code for three times continuously, your SIM card will be locked and you need to input PUK code.

△Note: Your network service provider will set a standard PIN code (4-8 digits) for your SIM card. Please change it with your private password as soon as you get the phone.

Connecting to network

When the SIM card is decrypted, the mobile phone will search registered network or available local network automatically. Once connected, the logo of the network operator appears in the top of the screen, the mobile phone is in standby state, and you can make or answer calls.

Please contact your network operator if the SIM card has a failure.



Precautions of SIM card:

- Put the SIM card out of children's reach.
- Please use, insert and remove the SIM card carefully because the SIM card and its contacts are prone to be scratched or damaged by bending.
- Do not expose the SIM card to electrostatic, dusty or moist environment.

Operation and installation methods of SD card

SD card is a removable mobile memory card inside the mobile phone and used for extending the storage space of the mobile phone.

Battery and charging methods

1. Connect the charger to provided USB cable.
2. Connect the charger plug to the power outlet.
3. Connect the USB cable to the mobile phone; this icon  indicates the charging status.
4. The battery is fully charged when the status icon changes to ; please disconnect the charger from the power outlet.
5. Disconnect the charger from the mobile phone.

⚠Note: If the battery isn't used for a long time or the battery is used up, the mobile phone may be not turned on normally while charging. It is normal. Please charge for a while before turning on the mobile phone.


The battery can be charged repeatedly; however, it is consumable product, please change a new battery if the standby duration reduces significantly.

The data service consumes more power and will reduce the standby duration.

The charging time changes according to temperature and battery usage.

The mobile phone will show prompt if the battery is too low. The mobile phone will power off automatically if battery level drops too low.


Unlocking mode

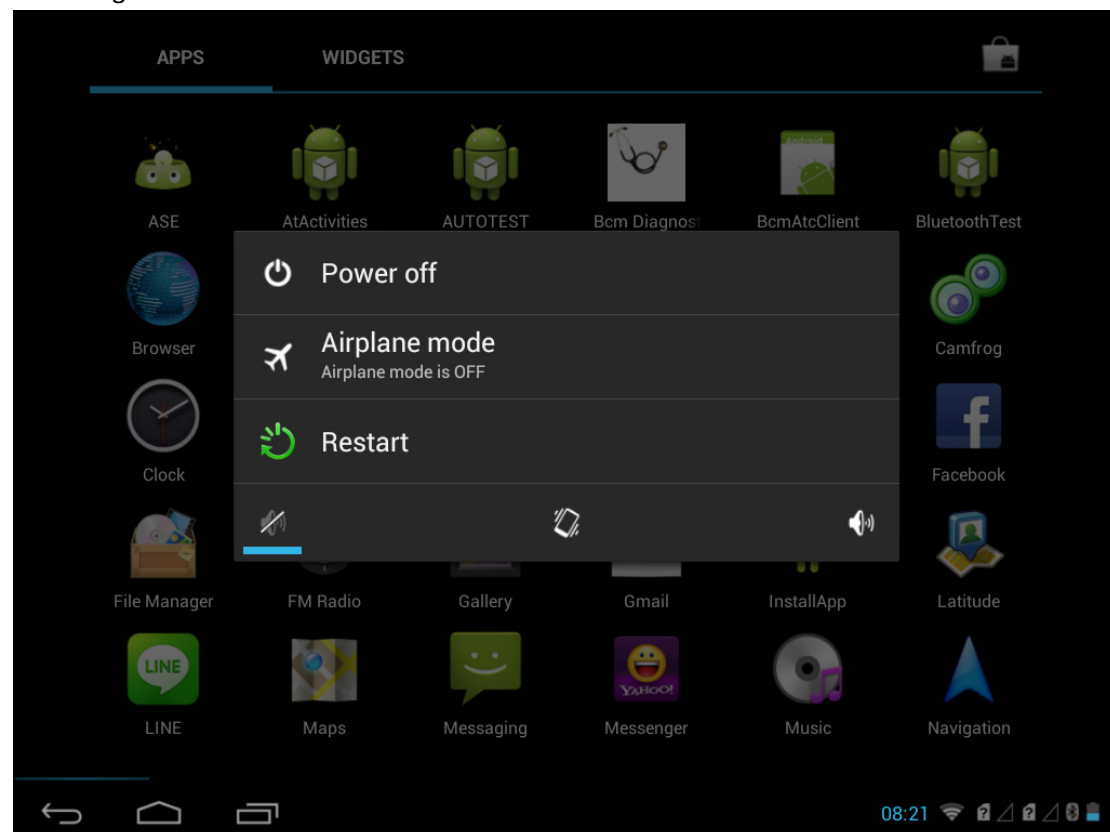


Mobile phone options list

In standby state, you can press the Power key to lock and turn off the screen, and press it again to turn on the screen. Press and hold the Power key to open the mobile phone option list.

Unlocking interface

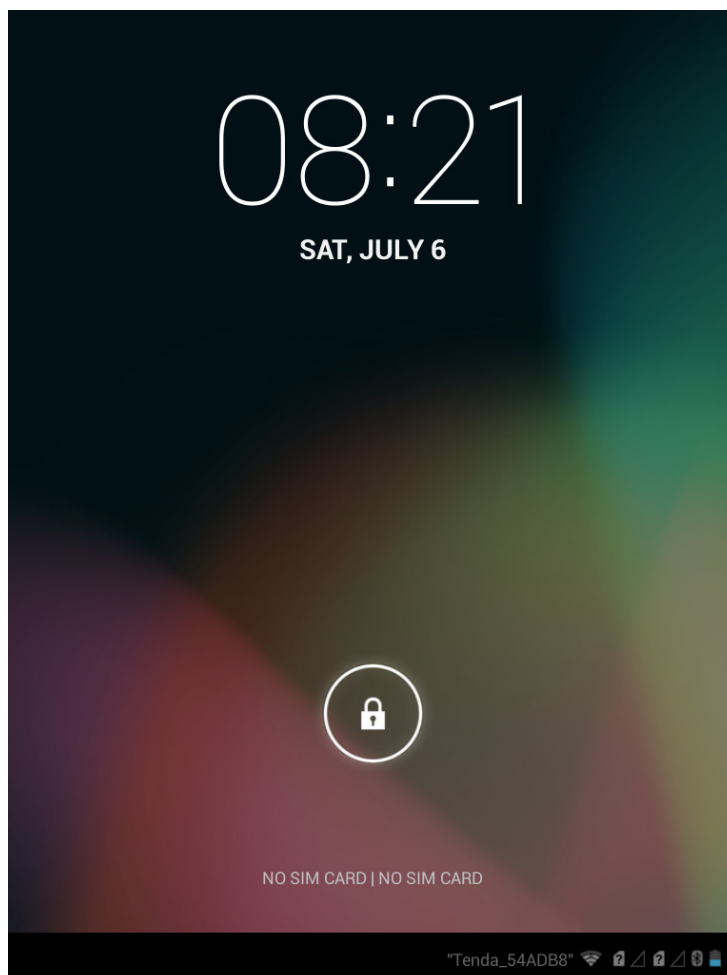

In locked screen, tap the  icon in the bottom of the screen, slide to any direction unlock the screen, or drag the whole screen to right to access Camera and take pictures.

Main menu




Main menu page

Slide to left/right on the screen to switch the main menu page, and tap the Menu key to select


Manage applications or Settings

Drag and drop an icon to desktop to create a shortcut.

View notifications

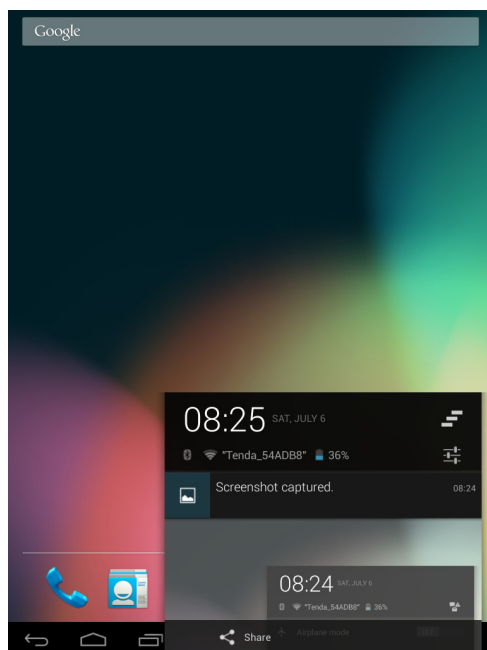

notifications interface of Status bar

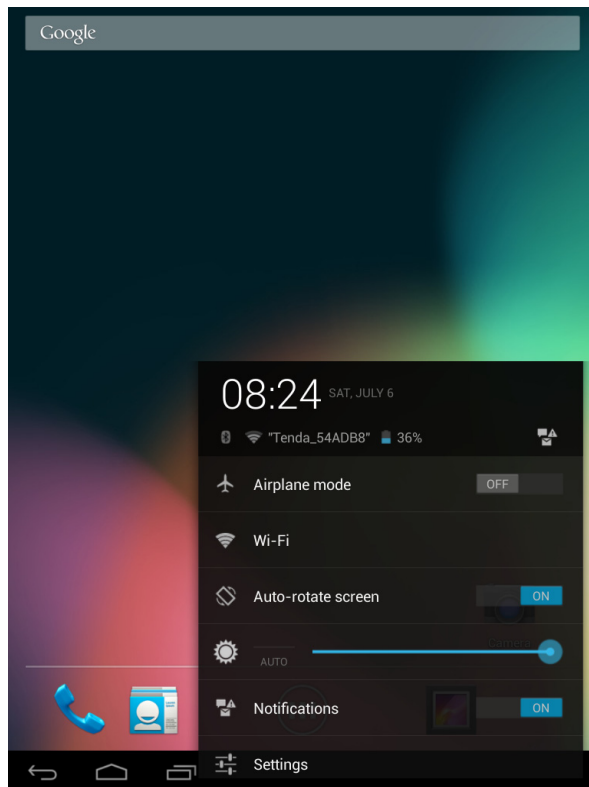


quick settings interface of Status bar

Pull down the status bar, you can view the notifications interface directly, in this interface, you can view notifications of the mobile phone, or pull up in bottom right corner of the screen to display quick settings interface, in this interface, you can turn on/off WLAN, Flight mode and customize profiles, etc.

Manage applications


In Manage applications interface, you can manage the running applications to improve the running speed of the mobile phone. You can view the information of downloaded applications, applications installed on SD card, running applications and all applications, restrict permissions or uninstall third party applications.

Contacts

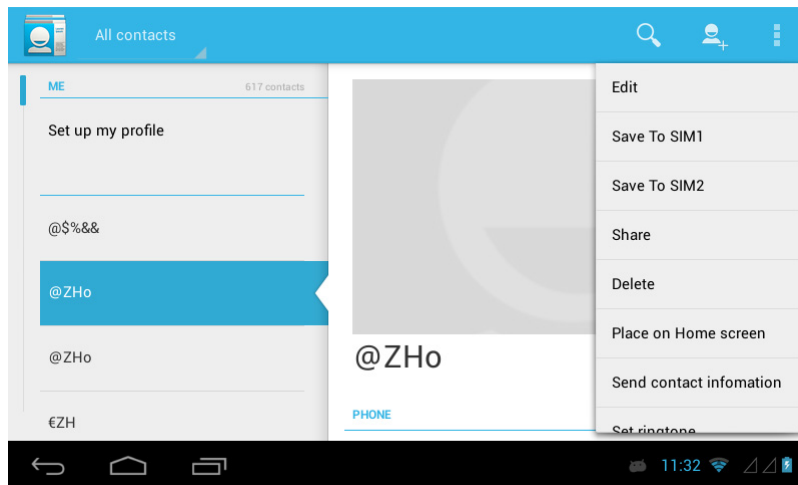

You can search contacts through phone number, email account or English name. Press the Menu key to select Contacts to displayed, Import/Export, Accounts, Batch Delete, Send messages or Share visible contacts.

Smart dialing

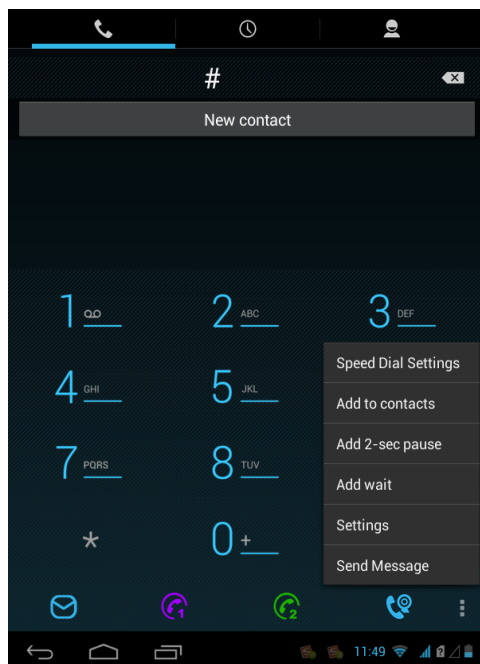


In dial plate interface, the mobile phone will fuzzy match with local contact info and show in the result while you are typing. In settings, you can set up call, Quick responses and others.

During a call, you can access the dial plate or contacts through shortcuts.

After typing the number with keypad, press MENU and select Speed dial.

During the call, the backlight turns off when the phone is close to your ear for saving power and preventing misoperation

Messaging & browser

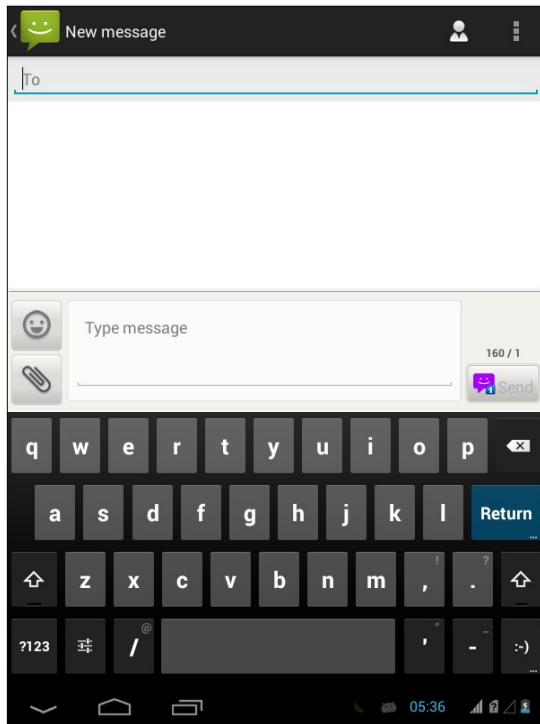

Messaging interface

Support pinyin, and third party input method software.

Tap **Switch** to switch among Chinese, English and stroke. If the language of spelling correction is set to English, tap the word in the input box while typing to get suggested results for choosing.

Bluetooth (Optional)


Tap "Settings" > Select "Wireless connections/Bluetooth" > Tap "On" to switch on the Bluetooth function. The device will automatically search for available Bluetooth device. Select the Bluetooth device and start data transmission

Wireless networks

Prior to starting an Internet-application, activate Wi-Fi connection and set up Wi-Fi network.

Touch the icon "Applications"> "Settings" > "Wireless connections". Select Wi-Fi item and set the switch to On position. The device will automatically start searching for available networks and will display them on the right panel. Select any network from the list and press "Connect". If the network you selected is protected by WEP-protocol, type the security key, then press "Connect" button. When the connection is successfully created, "Connected to" (Network name) message will appear on the screen.⁴ It supports the hotspot mode


Browser

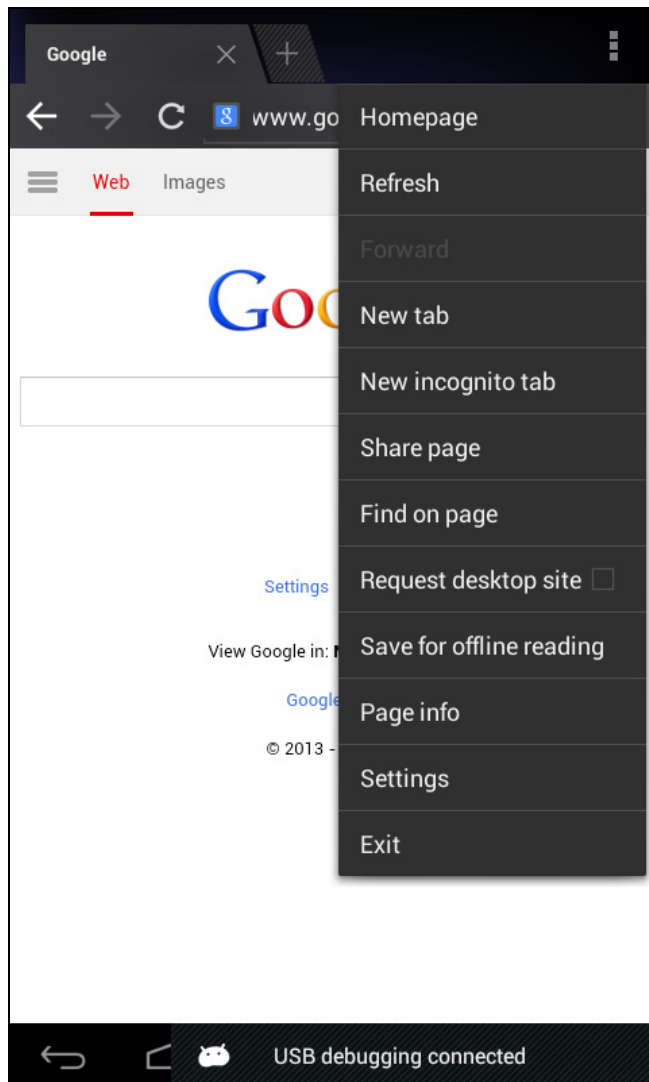

There default homepage interface will be show when you open the app first time,you can also change the default homepage to your favorite webpage site in the settings page. With this app,you can visit all of the internet webpages,download resource form the web server or watch video online.

Music


Music interface

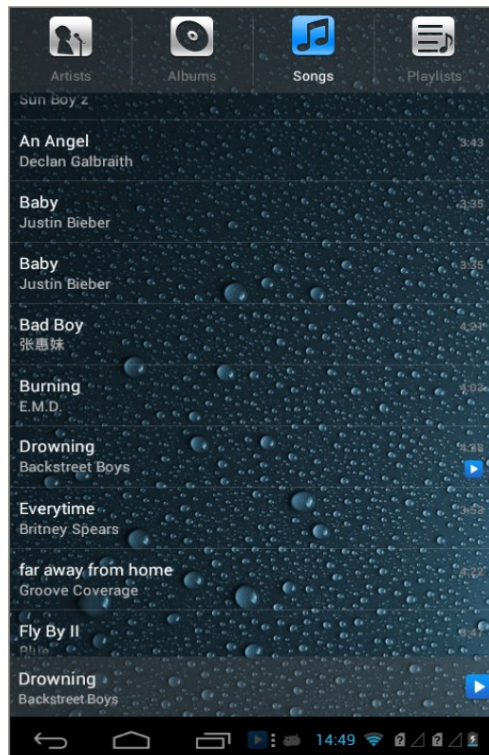

Support MP3, aac, ogg, midi and other formats; drag the progress bar while playing to move to any segment of the music, and tap Play button to pause or play. Tap and hold artist, album or music name to perform operations such as play, add to playing list, send to ring tone, delete, and search; select search to search music and play


Camera

Camera function

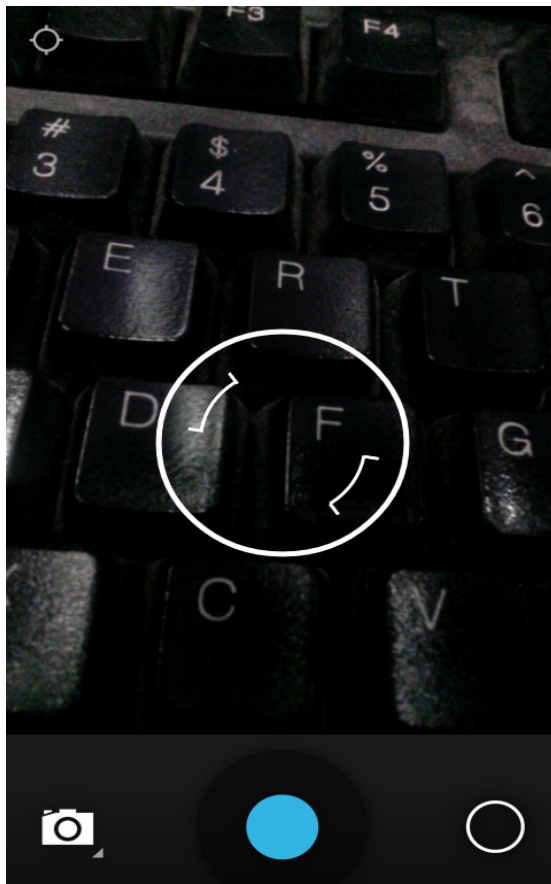


Tap on the screen to focus and follow the focus automatically, making the capture of moving object more convenient. You can set smile shutter, best capture, continuous shooting, common mode, automatic scene detection and other modes. The camera integrates various creative styles; you can tap to preview different effects.


Dual-camera

Support front camera; tap  to switch to front camera and take self photo shoot.

Video recorder




Support video recording, tap  to switch to video recorder.

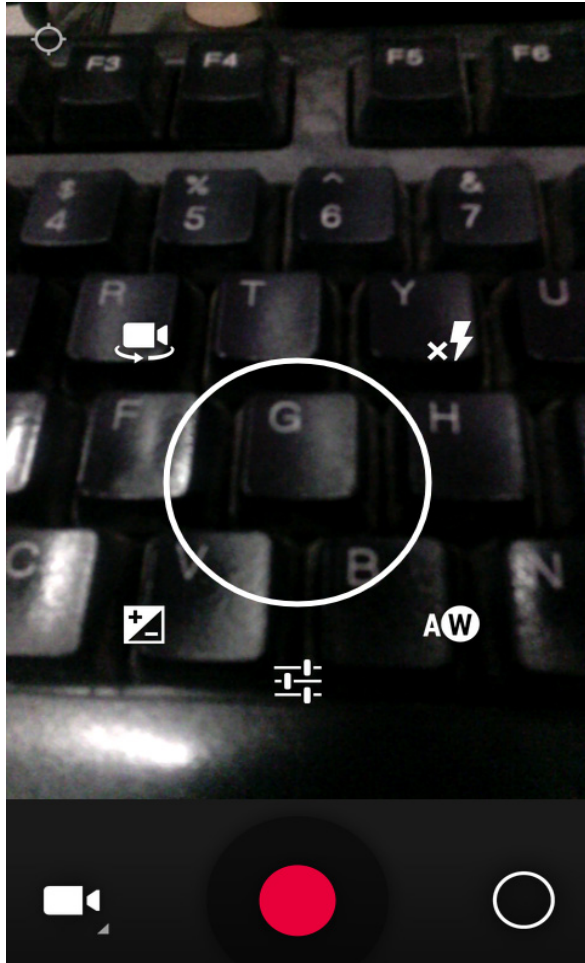

Sound recorder

You can record the sound, and send through MMS or Bluetooth directly, or set as ring tone.

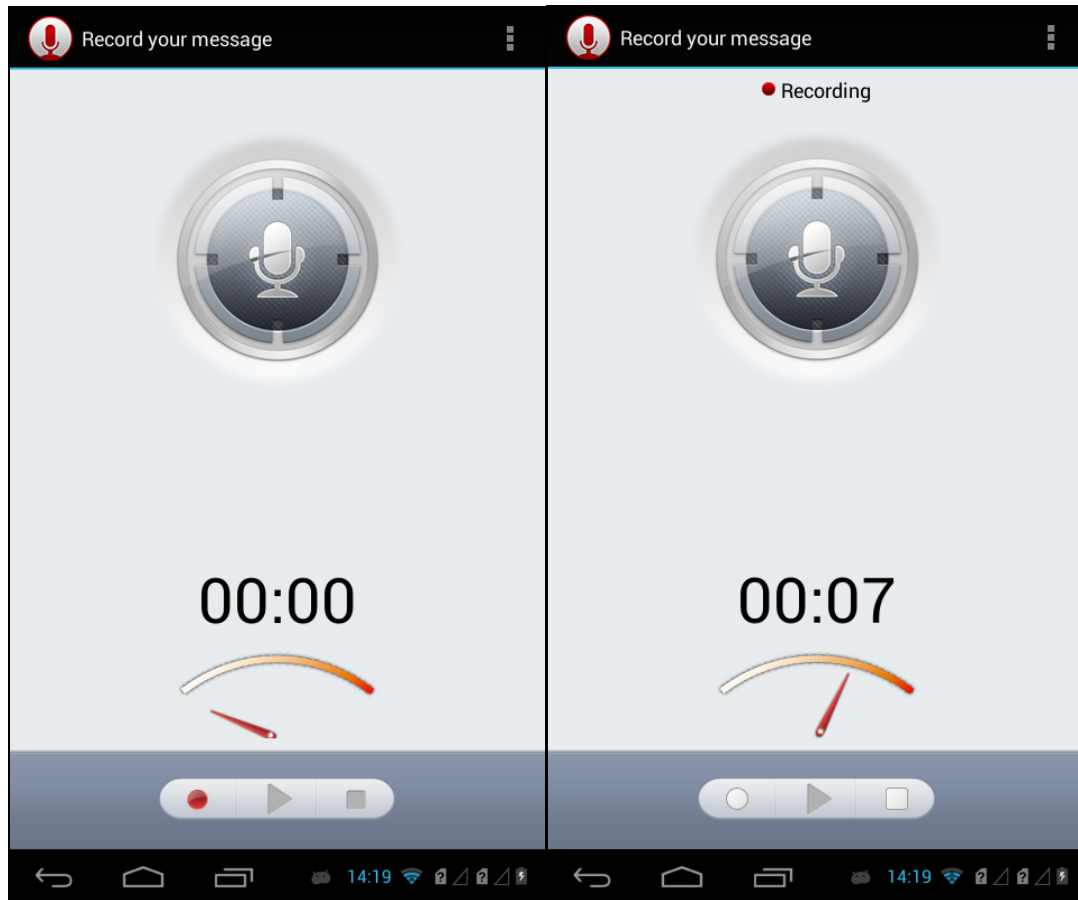

FM radio


Insert the headset and listen to FM radio, which supports loud speaker.



Gallery


You can view the pictures and videos recorded by the camera in Gallery and or pictures and videos on SD card.

In gallery, you can perform operations to multimedia files such as share, edit and set as wallpaper, or contact icon.

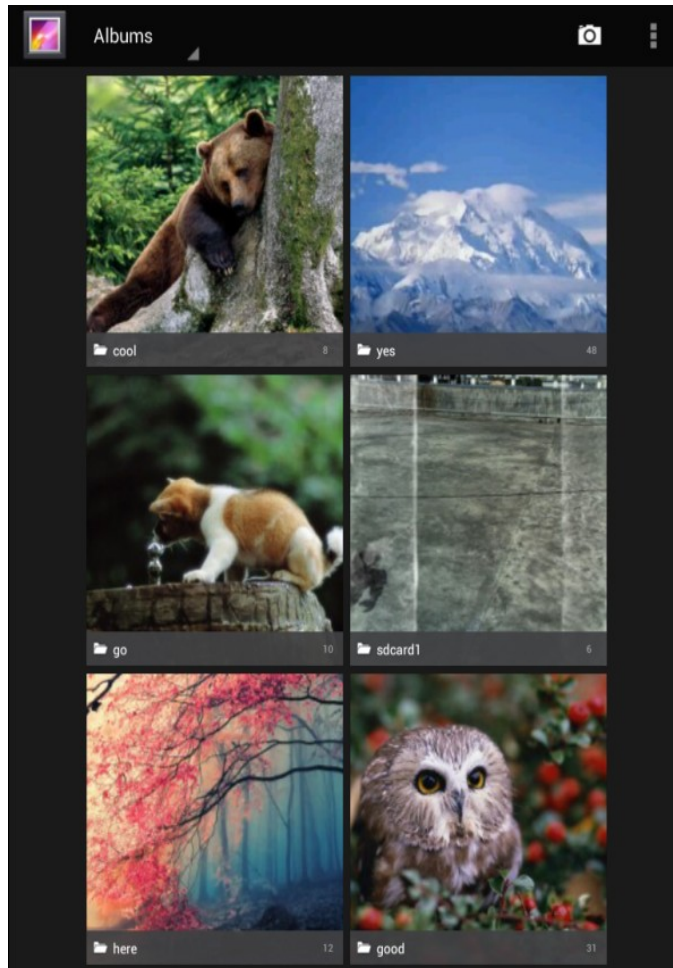

E-mail


Support Gmail and E-mail; you can create an account and read e-mails at any time and anywhere with this function, you can merge the e-mails of different e-mail boxes to the same interface.

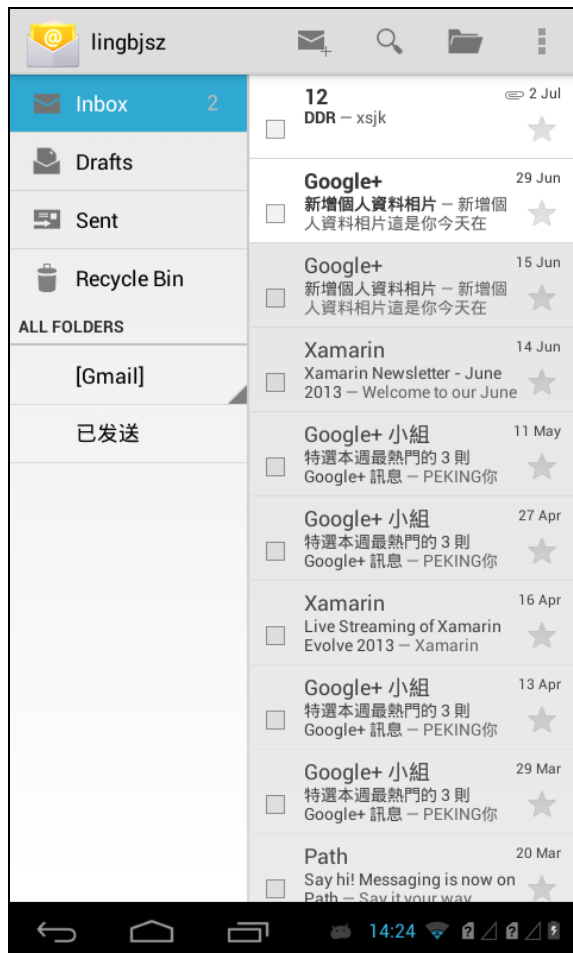

File Manager



In File Manager interface, tap the Menu key to select New folder, Cut, and view the files stored on SD card directly.

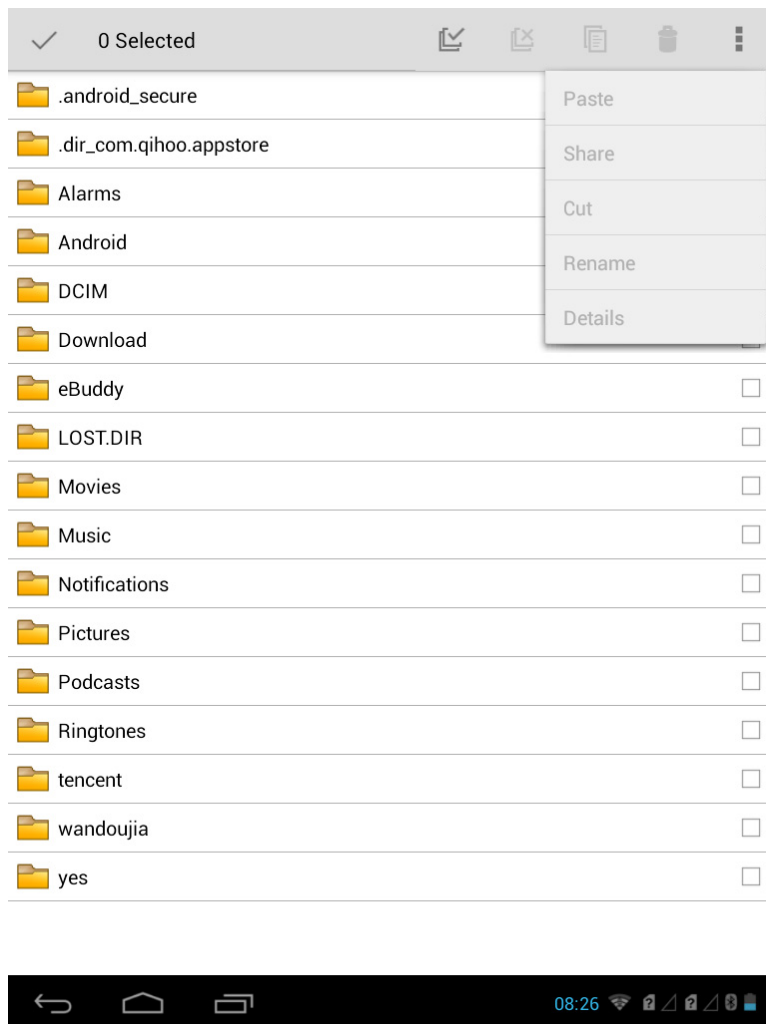


Tap and hold a file or folder and select Copy, Cut, Delete, Rename and other options.

Software store


This mobile phone is designed with built-in “play store”, which provides popular software and other sources; you can find wanted software through search or rank list. Experience the desktop shortcut of play store, get the recommended info quickly, and experience free download through WIFI or web client.

Settings

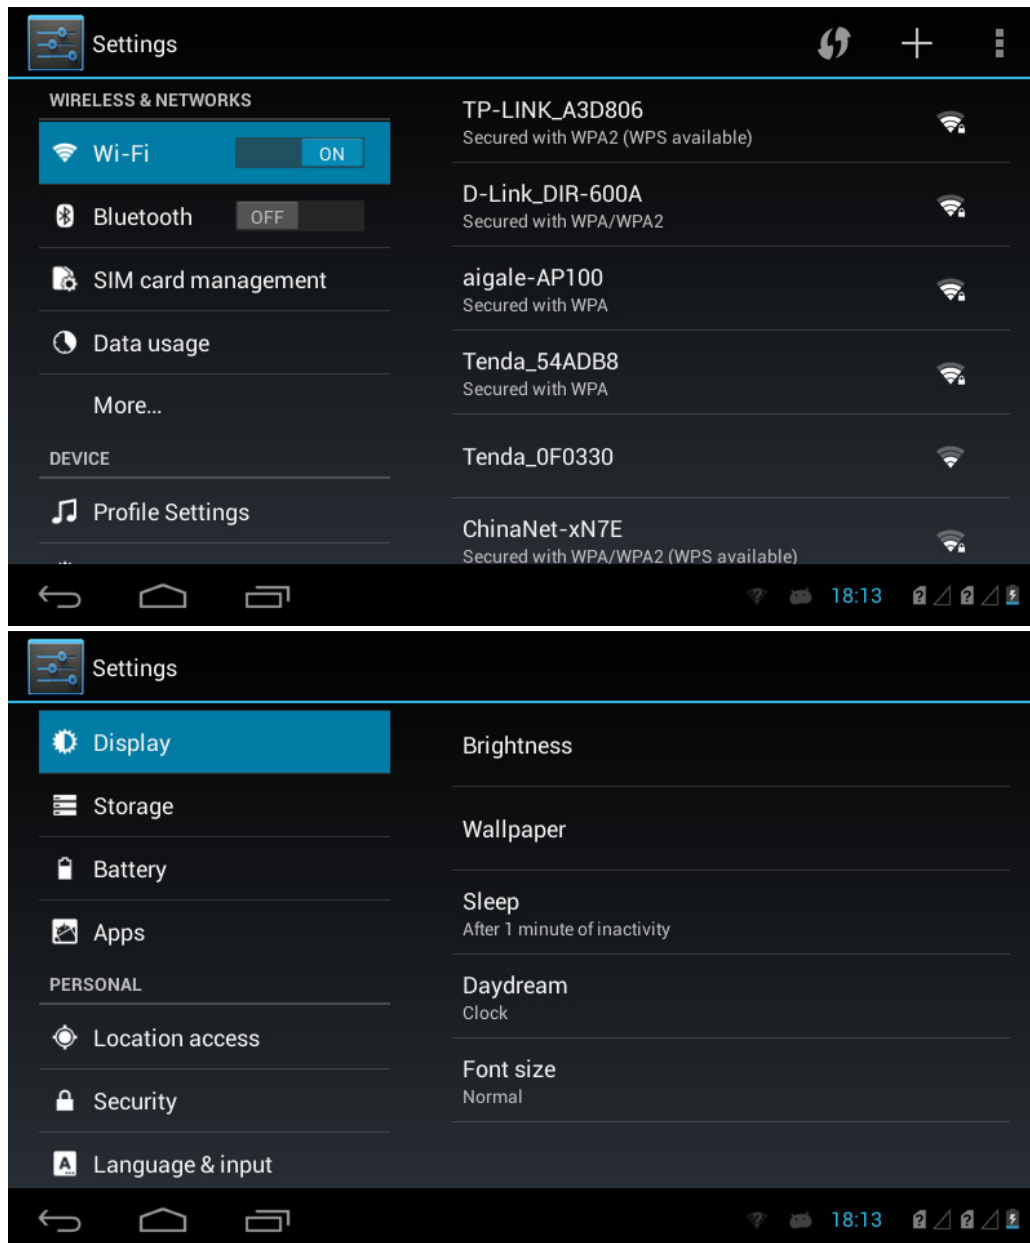


Security function

You can set up screen security, encryption, SIM lock, etc.

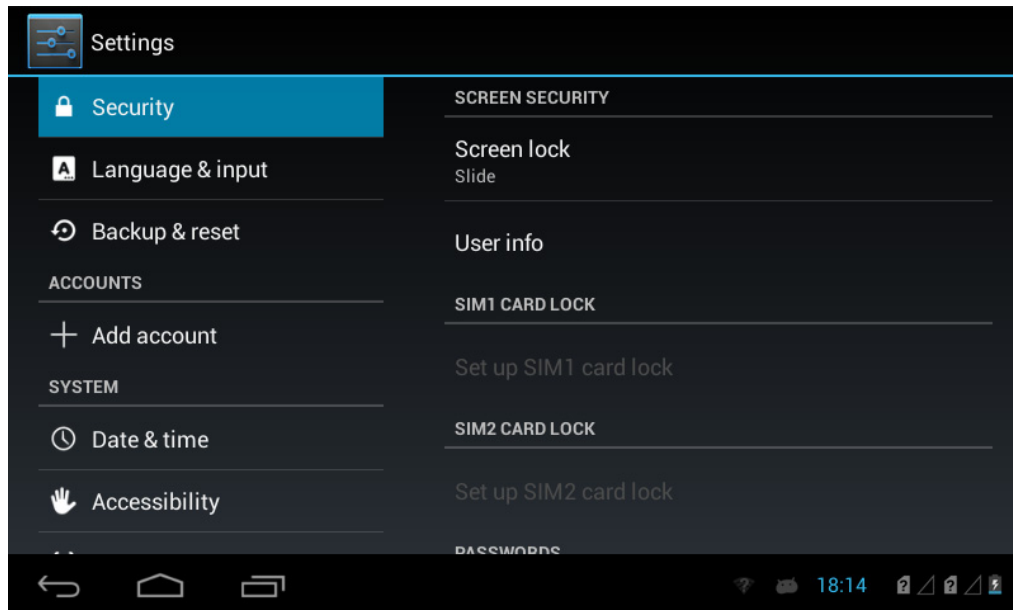

Backup and reset


In this interface: you can back up the application data, WLAN password and other settings to Google server; and reset all data stored on the mobile phone.

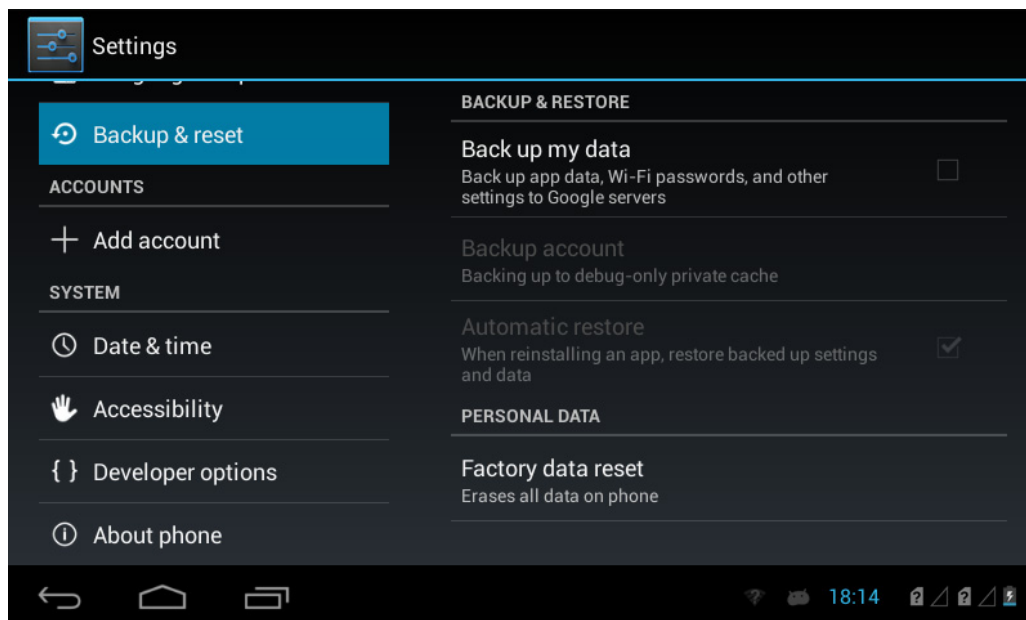

Drop-up menu bar

Drop up USB connection in menu bar; as the mobile phone can be set as flash drive, the files on SD card can be copied to PC or from PC to mobile

phone.

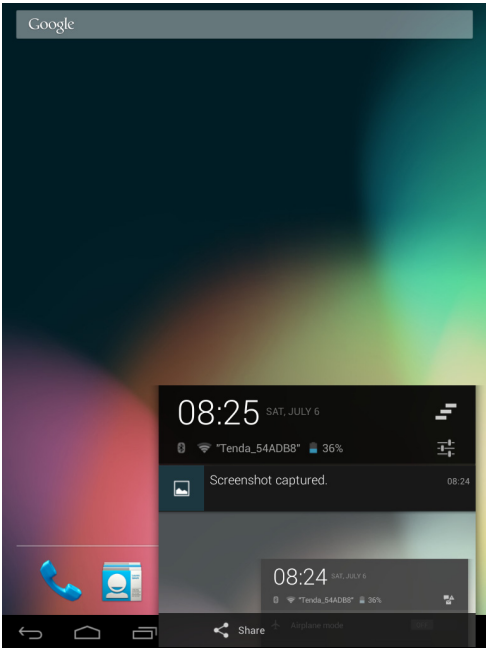

Electromagnetic Radiation Specific Absorption Rate (SAR)

The maximum value of the electromagnetic radiation specific absorption rate (SAR) is 0.687W/kg, which is in compliance with GB 21288-2007 requirements.

Troubleshooting

Please refer to the following list of problems and solutions if there is any abnormality when you use the mobile phone. Please contact the distributor or service provider if it still doesn't work.

Problem	Reason	Solution
Can't access Internet normally when using browser	The network operator doesn't provide this service or you hasn't applied this service	Please contact and consult your network operator for information of how to apply and use this service
	The setting is not correct	Please refer to specific introductions of the browser
SIM card error	SIM card is damaged	Please contact your network operator
	The SIM card isn't installed properly.	Check the SIM card
	The metal surface of the SIM card is dirty	Clean it with clean cloth
Poor receiving	The mobile phone is used in bad signal receiving area, for example, near tall building or in basement,	Please make or answer a call in places with strong signal

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as host device and operating in the 2.4 GHz (2412 – 2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.