

For Online Upload Only


Size: 210 x 148 mm (H x W)

This drawing contains proprietary information and trade secrets of The Furrion Company, Inc. Unauthorized use or copying is prohibited.

1.0	1-Nov-18	New	Lucas Sun	XX
REV.	DATE:	MODIFICATIONS:	NAME	ECN NO.
Furrion Property Holding Ltd.				
DATE:	12-Mar-19	DRAWN BY: Lucas Sun	APPROVED BY: Luc	REVISION: 1.0
NAME: IM for LIT Go			PART NO. IM-FAV00047	

FURRION LIT

Portable Bluetooth® Speaker

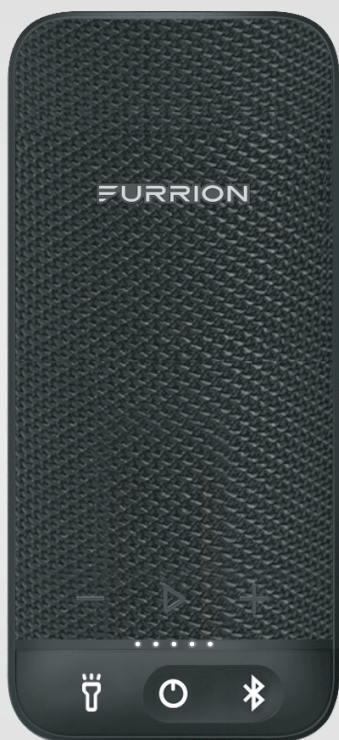

Instruction Manual
Manuel d'instructions
Manual de instrucciones

*Product picture is for reference only.

La photo du produit est pour référence uniquement.

La imagen del producto es solo de referencia.

Model/ Modèle/ Modelo: FBSM05NSU-BL
FBSM05NSU-PS

Welcome

English

Thank you for purchasing the Furrion Bluetooth® Speaker. Before operating your new device, please read these instructions carefully. This instruction manual contains information for safe use, installation and maintenance of the device.

Please keep this instruction manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this device. The manufacturer does not accept responsibility for any damages due to not observing these instructions.

If you have any questions regarding our products, please contact us at **support@furrion.com**

Contents

Welcome	2
Contents	3
Important Safety Instructions	4
FCC Statement	4
Important Battery Precautions	5
IC Statement	5
Care of the Environment	5
For all products with wireless operation	5
Introduction	8
What's in the Box	8
Functional Overview	9
Get Started	10
Charging Your Speaker	10
Operation	11
Turning On/Off your Speaker	11
Pairing your Speaker to a Mobile Device	11
Playing Audio	12
Using as a Speaker Phone	12
Using Google Now® and Siri® Service	12
Using Flashlight	12
Using SOS	12
Care and Maintenance	13
Troubleshooting	14
Specifications	15

Important Safety Instructions



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves or other devices (including amplifiers) that produce heat.
6. Only use attachments/accessories specified by the manufacturer.
7. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as if objects have fallen into the device, or the device does not operate normally, or has been dropped.

FCC Statement

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

Important Safety Instructions

Important Battery Precautions

This device contains a non-removable Lithium-Ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RADIATION EXPOSURE STATEMENT

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Care of the Environment

- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- Never dispose of your product with other household waste. Please familiarize yourself with the local rules on the separate collection of electrical and electronic products and batteries.
- The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.
- Your product contains batteries which cannot be disposed of with normal household waste.

For all products with wireless operation

FURRION hereby declares that this equipment is in compliance with the essential requirement and other relevant provision of Directive 2014/53/EU and RoHS 2011/65/EU Directive. The declaration of conformity may be consulted in the support section of our Website, accessible from www.furrion.com.

Consignes importantes sur la sécurité



ATTENTION
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR



ATTENTION : POUR RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE PAS ENLEVER LE COUVERCLE (OU LA PARTIE ARRIÈRE). AUCUNE PIÈCE SE TROUVANT À L'INTÉRIEUR NE PEUT ÊTRE RÉPARÉE PAR L'UTILISATEUR. POUR LES RÉPARATIONS, VEUILLEZ VOUS ADRESSER À UN TECHNICIEN QUALIFIÉ.



Ce symbole de l'« éclair » indique la présence d'un matériau non isolé dans l'appareil, qui pourrait causer un choc électrique. Pour la sécurité de tous, veuillez ne pas enlever le couvercle du boîtier du produit.



Le symbole de « point d'exclamation » devrait attirer votre attention sur des fonctionnalités qui exigent la lecture attentive des documents joints afin de prévenir les problèmes d'utilisation ou d'entretien.

1. Bien lire ces consignes.
2. Conserver ces consignes.
3. Respecter tous les avertissements.
4. Suivre toutes les consignes.
5. Ne pas installer à proximité d'une source de chaleur telle qu'un radiateur, une plaque de cuisson, un poêle ou un autre appareil (incluant les amplificateurs) qui génère de la chaleur.
6. Utiliser uniquement les fixations/ accessoires identifiés par le fabricant.
7. Confiez tous travaux de réparation à du personnel de réparation qualifié. Des travaux de réparation sont nécessaires lorsque l'appareil a été endommagé de quelque manière que ce soit ; par

exemple si des objets sont tombés dans l'appareil, si l'appareil ne fonctionne pas normalement, ou si l'appareil est tombé.

Déclaration – FCC

AVERTISSEMENT : Tout changement ou modification qui n'a pas été expressément approuvé par la partie responsable de la conformité pourrait révoquer l'autorisation d'utiliser l'appareil.

AVIS : Cet appareil a fait l'objet d'essais qui ont permis de conclure qu'il est conforme aux restrictions définies pour les appareils numériques de Catégorie B, conformément à la Partie 15 des règles de la FCC. Ces restrictions ont pour objet d'assurer une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. Cet appareil génère, utilise et peut dégager de l'énergie radioélectrique. S'il n'est pas installé et utilisé conformément aux consignes, il pourrait causer des interférences nuisibles aux communications radio. Cependant, rien ne garantit que des interférences ne se produiront pas dans une installation particulière.

Si cet appareil cause des interférences nuisibles à la réception radio ou télé, ce qui peut être déterminé en allumant et en éteignant l'appareil, l'utilisateur peut tenter de résoudre le problème de l'une des façons suivantes :

- Changer l'orientation ou l'emplacement de l'antenne de réception.
- Éloigner l'appareil du récepteur.
- Brancher l'appareil dans une prise de courant qui se trouve sur un autre circuit que celui auquel est branché le récepteur.
- Demander conseil à un technicien radio/ télé qualifié.

Consignes importantes sur la sécurité

Précautions importantes : Batterie

Cet appareil contient une batterie non-amovible au lithium-ion. La batterie doit être recyclée ou éliminée correctement. Contactez les autorités locales de gestion des déchets pour savoir où recycler ou éliminer la batterie.

Énoncé – Industrie Canada

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS :

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre

antenne ou un autre émetteur.

Care of the Environment

- Votre produit a été conçu et fabriqué avec des matériaux et des composants de grande qualité qui peuvent être recyclés et réutilisés.
- Ne jamais jeter votre produit avec les autres déchets ménagers. Veuillez prendre connaissance des règles en vigueur dans votre région sur la collecte sélective des produits électriques et électroniques et des batteries.
- La bonne façon d'éliminer ces produits permet d'éviter des effets potentiellement négatifs sur l'environnement et la santé humaine.
- Votre produit contient des batteries qui ne doivent pas être jetées avec les autres déchets ménagers.

Tous les produits, y compris ceux qui fonctionnent sans fil

FURRION déclare que cet équipement est conforme aux exigences essentielles et autres dispositions pertinentes de la directive 2014/53/EU concernant les équipements hertziens et les équipements terminaux de télécommunications un cadre pour la fixation d'exigences en matière d'écoconception applicables aux produits liés à l'énergie, et à la directive 2011/65/UE relative à la limitation de l'utilisation de certaines substances dangereuses dans les équipements électriques et électroniques. Vous pouvez consulter la déclaration de conformité à la section Support de notre site Web, à l'adresse www.furriion.com.

Introduction

What's in the Box


Make sure you have all the following items included in the packaging. If any item is damaged or missing contact the place of purchase.

- Bluetooth speaker
- USB charging cable
- Lanyard with hook
- Printed materials

Note: The contents included may be different based on the kit you purchased. Please take the actual product as standard.

Introduction

Functional Overview

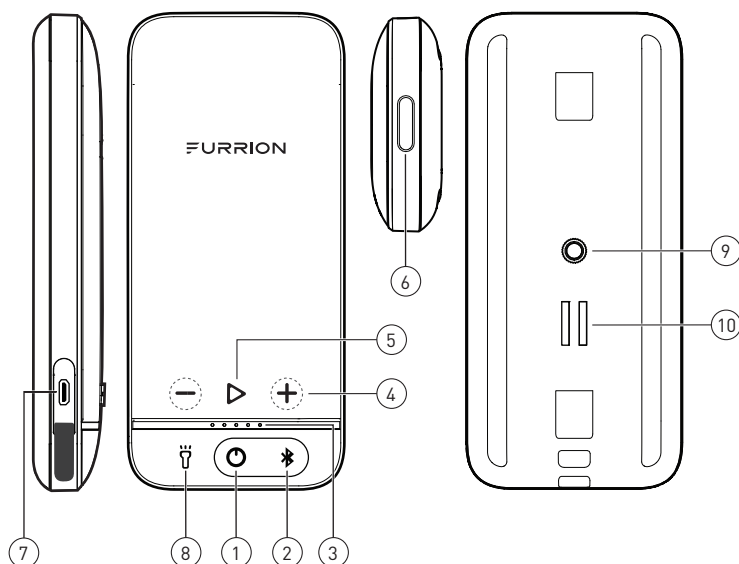


- ① (Hold) turn on/off the speaker.
Check the battery level.
- ② Enter Bluetooth pairing mode.
(Hold) clear Bluetooth pairing information.
- ③ **Battery level indicators**
Show the charging progress.
Show the battery level.
- ④ **+ / -**
Adjust volume.
(Hold) skip to the next / previous track.
- ⑤ Start (resume) / pause playback.
Accept an incoming call or reject an ongoing call made through Bluetooth connection.
(Hold) enable the Google Now or Siri service.


- ⑥ **Flashlight**
- ⑦ **USB charging socket**
Charge your speaker through the supplied USB charging cable.
- ⑧ Turn on/off the flashlight.
(Hold) enable/disable SOS mode.
- ⑨ **Strap mount hole**
Attach to a Furrion strap mount (model No.: FBS012NSM; to be purchased separately).
- ⑩ **Charging pins**
Attach to a Furrion charging base (model No.: FBS012NCP; to be purchased separately).

Get Started

Charging Your Speaker

English

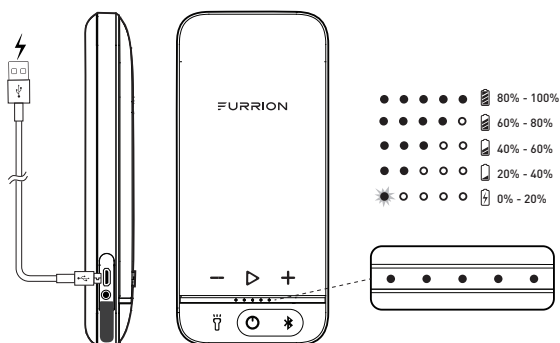

Before using the speaker, you must charge the device for a minimum of 3 hours using the Micro USB Charging Port or a Furrion charging base (to be purchased separately). You may check the power level by pressing the  button before operating your speaker each time. The power indicator will be illuminated in white for 3 seconds to show the current power level and then disappear.

- 5 Light: 80%-100%
- 4 Light: 60%-80%
- 3 Light: 40%-60%
- 2 Light: 20%-40%
- 1 Light: 0-20%

It is recommended you fully charge the battery before using for the first time. The speaker can be charged in two ways:


- If a genuine Furrion charging base is installed, place the speaker into the charging base to charge.
- Lift to open the rubber cap at the end of the speaker. Connect one end of the USB charging cable to the Micro USB Port on the speaker and the other end to a 5V DC outlet.

NOTE:

- The speaker will be fully charged in approximately 3 hours.


Operation

Turning On/Off your Speaker

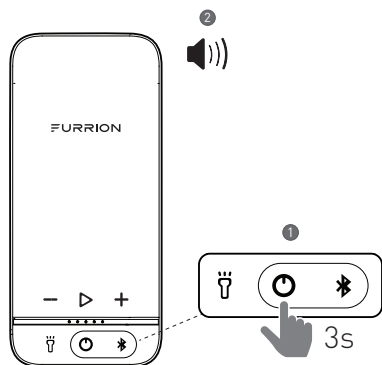


Turning On:

When the speaker is off

- Hold  for 3 seconds.
You will hear a sound prompt.
The LED will flash white for a second and then disappear.

Turning Off:

When the speaker is on

- Hold  for 3 seconds.
You will hear a sound prompt.


Note:




- The speaker turns off after 15 minutes of inactivity.



Pairing your Speaker to a Mobile Device

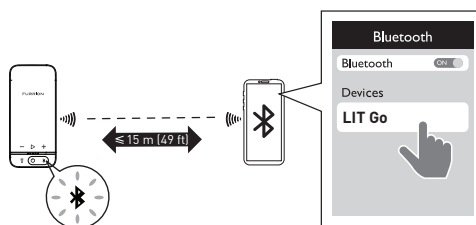Prior to using the speaker for the first time, you must pair it with a mobile device. The following steps describe the pairing instructions for a typical mobile device. Refer to your device's user manual for details if necessary.

Pairing your device with Bluetooth



1. Place the speaker to the Bluetooth enabled device no more than 49 feet (15 meters) apart.
 2. Make sure the speaker is on.
The speaker enters pairing mode automatically after power-on.
 3. Activate your mobile device's Bluetooth function by referring to your mobile device's user guide for details. Find the device named **LIT Go** in your mobile Bluetooth device's list and select to connect.
NOTE: The  button will flash white during the searching process. If connected successfully, the  button will be illuminated in white for 3 seconds and then disappear.
- Hold  for 3 seconds to cancel the pairing mode.

NOTE: The speaker will automatically remember the last paired device. Press both the  and  buttons for 5 seconds to clear the memory.

Operation


Playing Audio

Make sure at least one mobile device has been connected to the speaker before playing audio.

1. Turn on your speaker. The speaker will be connected to the mobile devices automatically if it has been previously paired.
2. Use the controls on your mobile device to control the audio playback or use the buttons on the speaker to pause audio, navigate tracks and control volume.
 - Press ▶ to pause/resume playback.
 - Press + / - to increase/decrease volume.
 - Hold + / - for 3 seconds to skip to the next/previous track.

Using as a Speaker Phone

When the speaker is paired to a device and a call is received, the incoming call tone will sound. If there is audio playing when a call is answered, the audio will pause and only the call will be audible. When the call is ended, audio playback will resume.

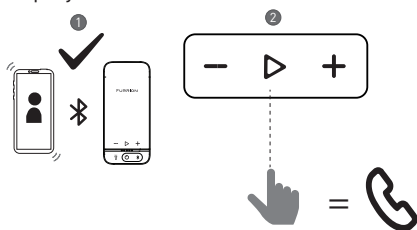

Answering a call:

- To answer an incoming call, press ▶ on the speaker.

Reject a call:

- To reject an incoming call, hold ▶ on the speaker for 3 seconds.

Ending a call:

- To end an active call, press ▶ on the speaker.

Mute a call:

- During a call, press both the + and - buttons to mute the call, and press again to resume.

Using Google Now® and Siri® Service

- Hold ▶ for 3 seconds to enable/disable Google Now®/Siri®.

Using Flashlight

Your speaker can be used as a flashlight.

- Press 🔦 to turn on/off the flashlight.

Using SOS

- Hold 🔦 for 5 seconds to turn on SOS mode. The flashlight will be turned on and flash every 2 seconds and the devices connected will end automatically.
- In SOS mode, hold ▶ for 3 seconds to turn on/off the buzzer.
- In SOS mode, hold 🔦 for 5 seconds to quit SOS mode. The speaker will return to Bluetooth mode and reconnect to the last connected device automatically.

Care and Maintenance

- Do not use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to high temperatures.
- Do not attempt to disassemble the speaker, as it does not contain serviceable components inside.
- If you do not use the speaker for long periods, be sure to store it in a dry place, free from extreme temperature, humidity and dust.
- Only use the Furrion supplied charger when charging the speaker.
- Only charge the speaker's built-in battery in accordance with the instructions in this user guide.
- Avoid charging the speaker in extreme high or low temperatures.

Troubleshooting

English

Issue	Solution
No power	Recharge your speaker.
No sound	Adjust volume on the connected device or on the speaker.
	Make sure that your Bluetooth device is within the effective operational range (within 15m/49 feet).
No response from the speaker	Check the battery level, and recharge the speaker when necessary.
	Restart the speaker.
Poor audio quality after connection with a Bluetooth enabled device.	The Bluetooth reception is poor. Move the device closer to this product or remove any obstacles between them.
Cannot connect with the device	The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
	This product is already connected with another Bluetooth enabled device. Disconnect that device and try again.
The paired device connects and disconnects constantly	Bluetooth reception is poor. Move the device closer to this product or remove any obstacles between them.
	For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

Specifications

Technical Specifications	
Dimension (L/M/S)	170 x 77 x 26.5 mm
Speaker Driver	2", 5W, Mono
Rated Power	5W x2 RMS
Signal to Noise Ratio	≥ 75dBA
System Total Harmonic Distortion	3%
Bluetooth Version	4.1
Support	AVRCP 1.4, A2DP V1.2, HFP V1.6
Bluetooth Maximum Communication Range	15m (49 feet)
Operation Temperature Range	-10°C to 50°C
Battery Capacity	3.7v/1000mAh
Torch Light Effect	Focus
Torch Light Standard	>20 Lumens
Waterproof	IPX 7
Playtime	Up to 8 hours playtime (playtime can vary depending on volume level and audio content)
Bluetooth Transmitter Frequency Range	2.4GHz (2.402-2.480GHz)
Bluetooth Transmitter Power	-2dBm

Furriion Innovation Center & Institute of Technology

● 52567 Independence Ct., Elkhart, IN 46514, USA ● Toll free:1-888-354-5792

● Email: support@furriion.com

©2007-2017 Furriion Ltd. Furriion, the Furriion logo and Furriion LIT™ are trademarks licensed for use by Furriion Ltd. and registered in the U.S. and other countries. The Bluetooth word mark and logo are registered trademarks of Bluetooth SIG, Inc. Google Now is a trademark of Google, Inc. registered in the U.S. and other countries. Siri is a trademark of Apple, Inc. registered in the U.S. and other countries.

©2007-2017 Furriion Ltd. Furriion, le logo Furriion et Furriion LIT™ sont des marques déposées par Furriion Ltd. et enregistrées aux Etats-Unis et ailleurs. La marque verbale et les logos Bluetooth sont des marques de commerce déposées et détenues par Bluetooth SIG, Inc. Google Now est une marque de commerce appartenant à Google, Inc. et enregistrée aux Etats-Unis et ailleurs. Siri est une marque de commerce appartenant à Apple et enregistrée aux Etats-Unis et ailleurs.

©2007-2017 Furriion Ltd. Furriion, el logotipo de Furriion y Furriion LIT™ son marcas comerciales con licencia de uso de Furriion Ltd. y están registradas en los Estados Unidos y en otros países. La palabra Bluetooth y sus logotipos son marcas comerciales registradas de propiedad de Bluetooth SIG, Inc. Google Now son marcas comerciales de Google, Inc. registradas en los Estados Unidos y en otros países. Siri son marcas comerciales de Apple Inc. registradas en los Estados Unidos y en otros países.

©2007-2017 Furriion Ltd. Furriion, das Furriion-Logo und Furriion LIT™ sind für die Verwendung durch Furriion Ltd. lizenzierte Warenzeichen in den Vereinigten Staaten und anderen Ländern. Der Name Bluetooth und die Logos sind eingetragene Marken der Bluetooth SIG, Inc. Siri ist ein in den Vereinigten Staaten und anderen Ländern eingetragenes Warenzeichen von Apple, Inc.

©2007-2017 Furriion Ltd. Furriion, o logótipo da Furriion e Furriion LIT™ são marcas comerciais licenciadas para utilização pela Furriion Ltd. e registadas nos E.U.A. e noutros países. O logótipo e a marca da palavra Bluetooth são marcas registadas da Bluetooth SIG, Inc. Google Now é uma marca da Google, Inc., registada nos E.U.A. e noutros países. Siri é uma marca comercial da Apple, Inc., registada nos E.U.A. e noutros países.

©2007-2017 Furriion Ltd. Furriion, il logo Furriion e Furriion LIT™ sono marchi concessi su licenza per l'uso da Furriion Ltd e sono registrati negli Stati Uniti e in altri paesi. La parola Bluetooth e il logo sono marchi registrati di proprietà di Bluetooth SIG, Inc. Google Now è un marchio di Google, Inc. registrato negli Stati Uniti e in altri paesi. Siri è un marchio di Apple, Inc. registrato negli Stati Uniti e in altri paesi.

FURRIION.COM