




ERTS-5000_EUT Internal

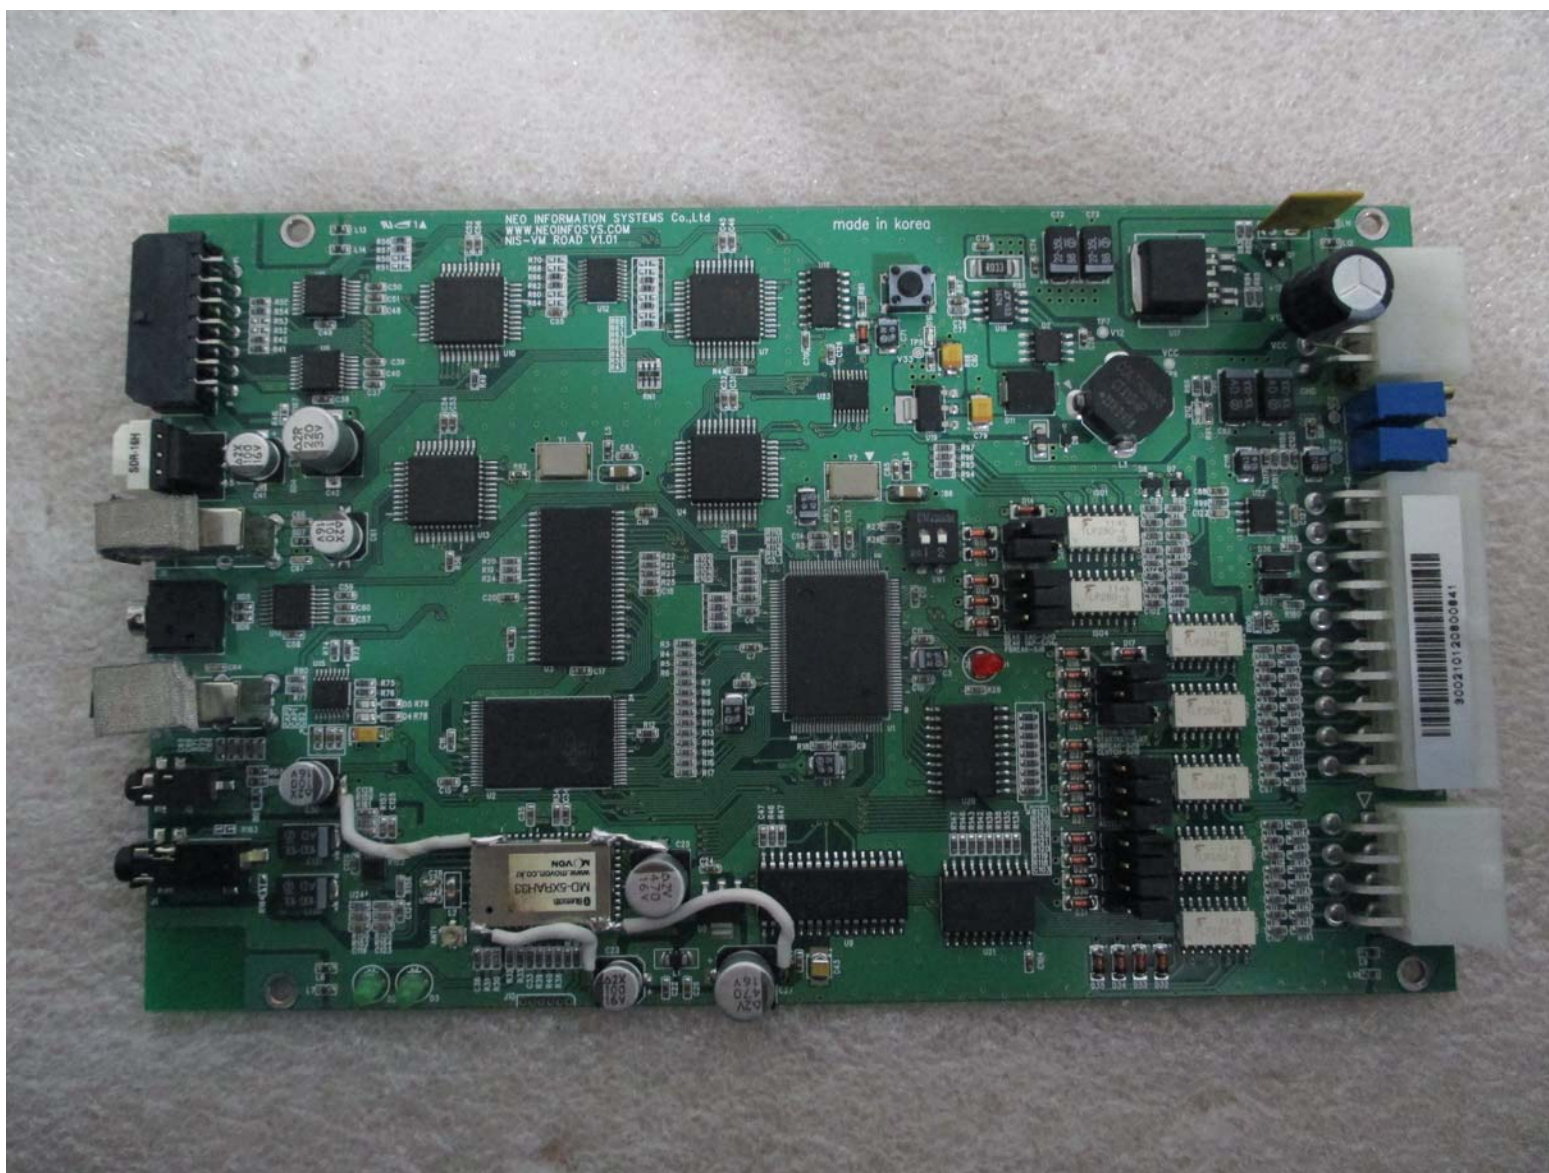


ERTS-5000_Main Board Front

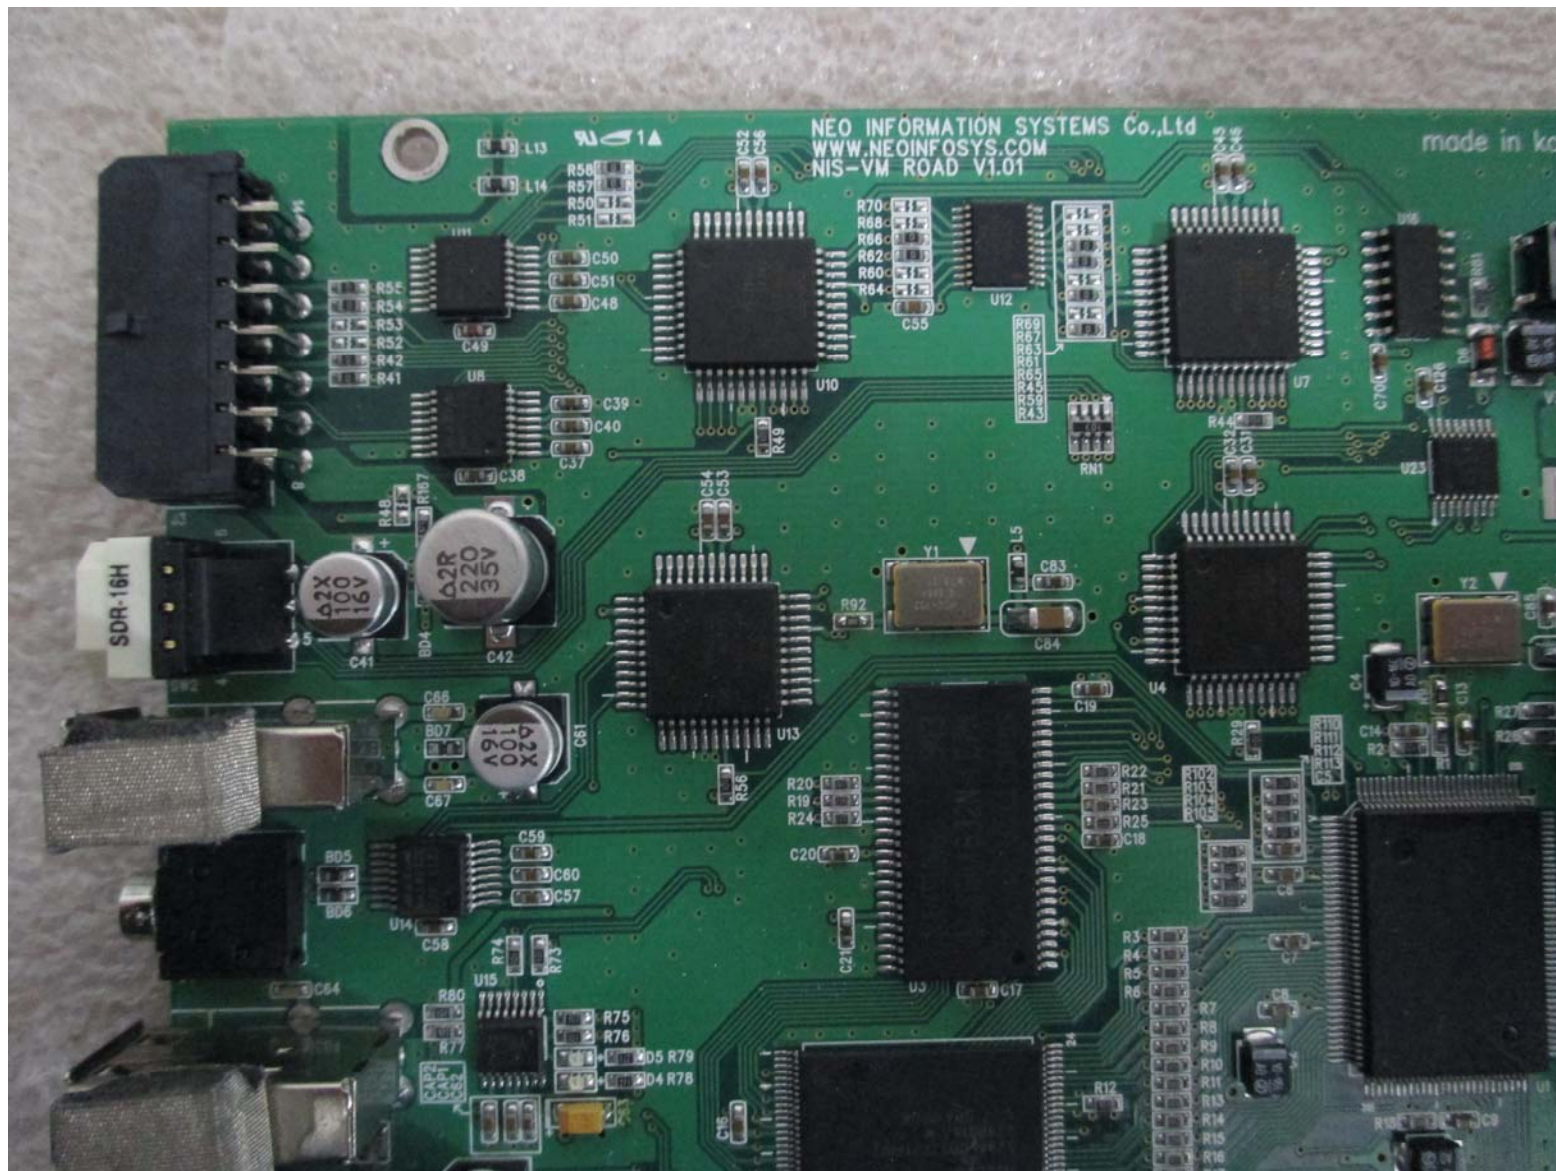


ERTS-5000_Main Board Front-1

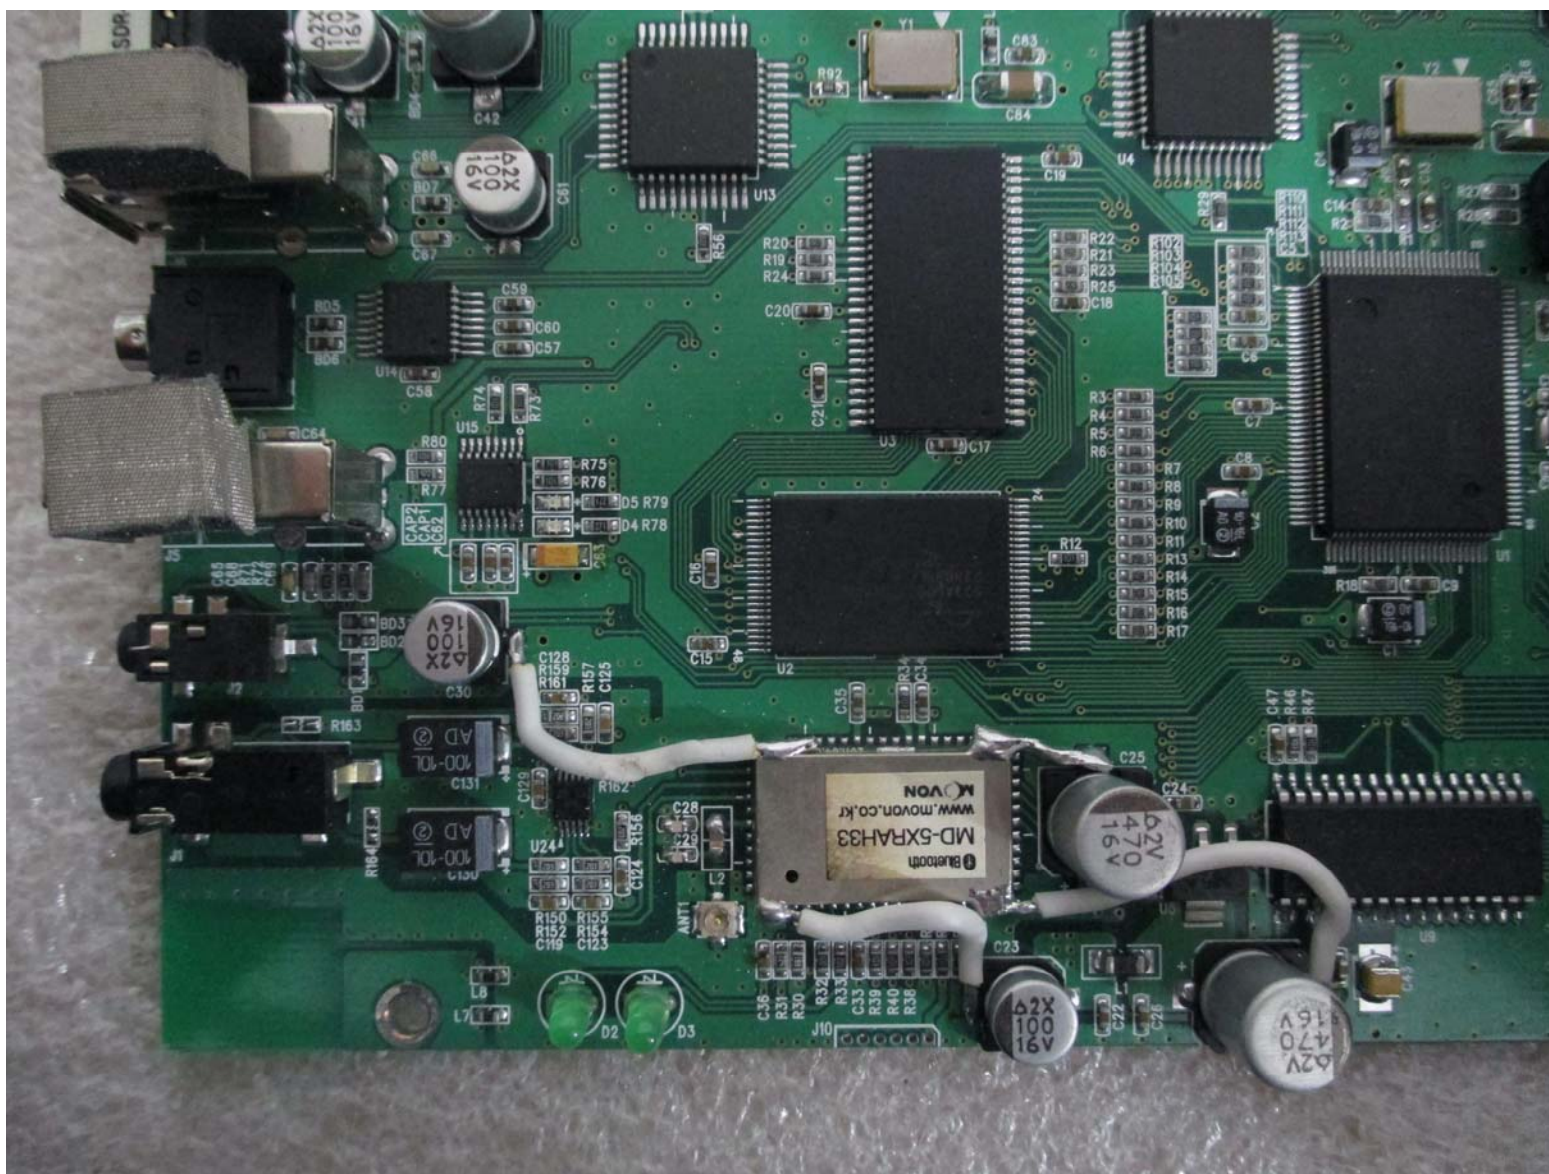


ERTS-5000_Main Board Front-2

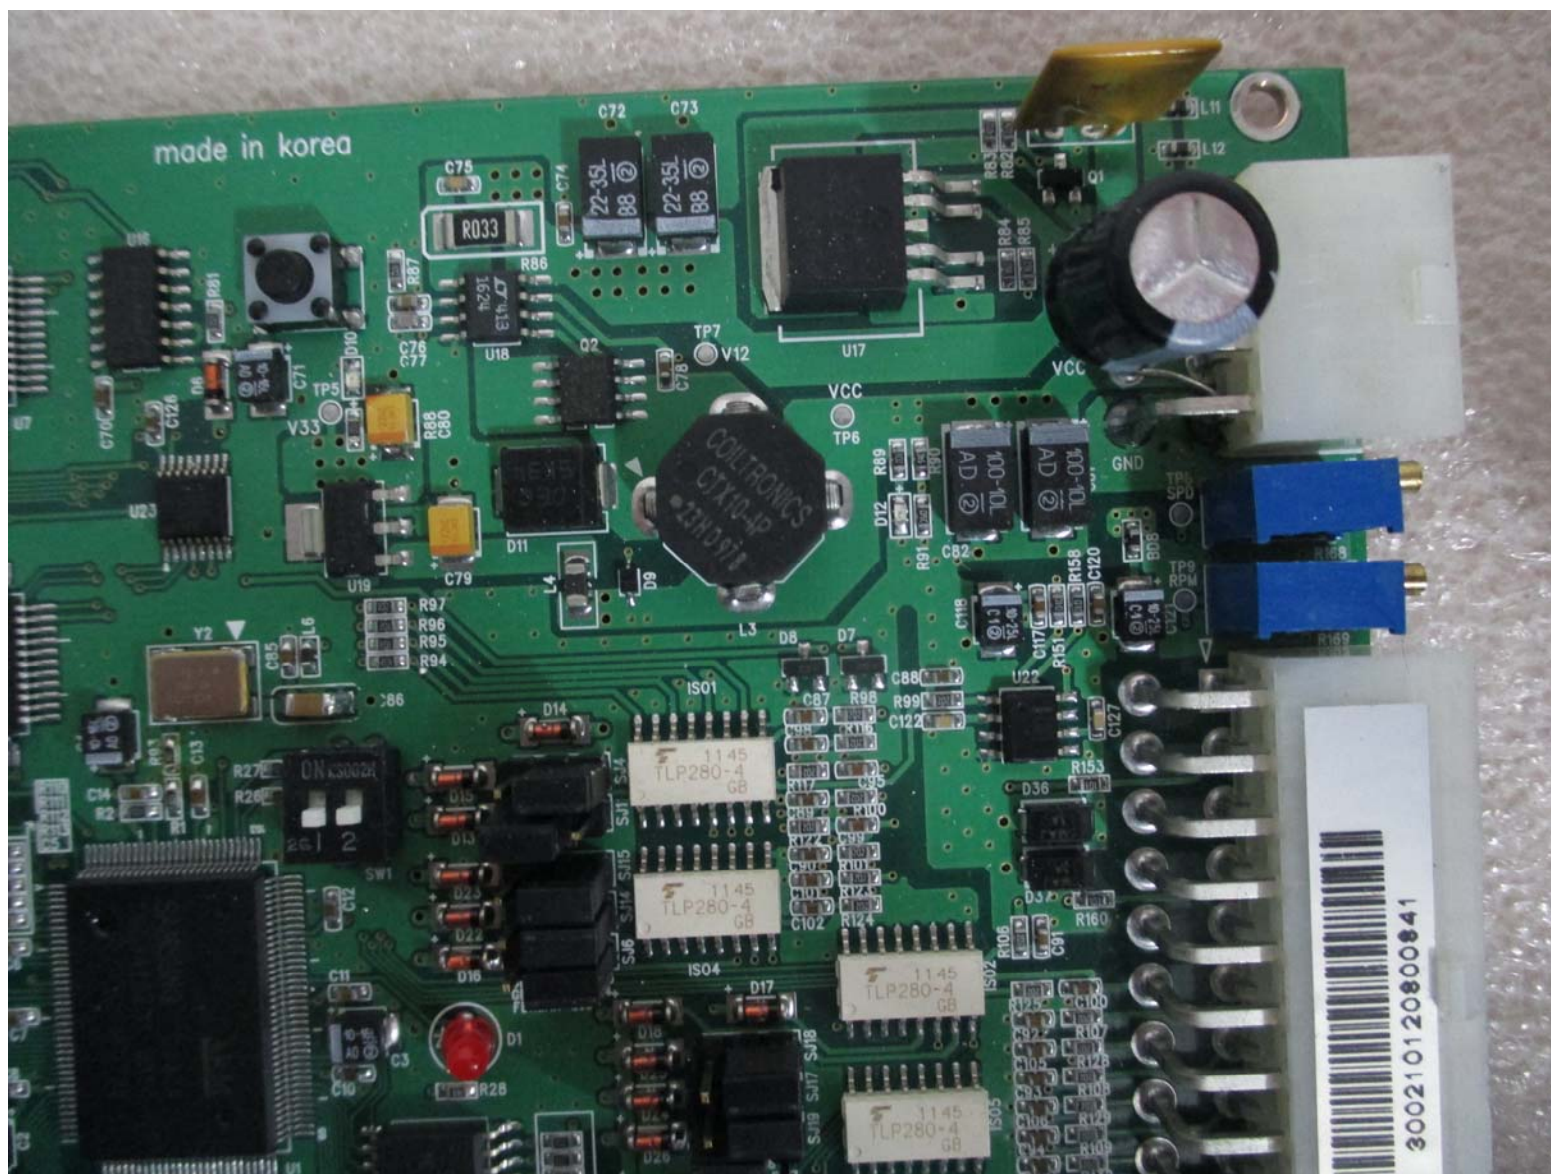


ERTS-5000_Main Board Front-3

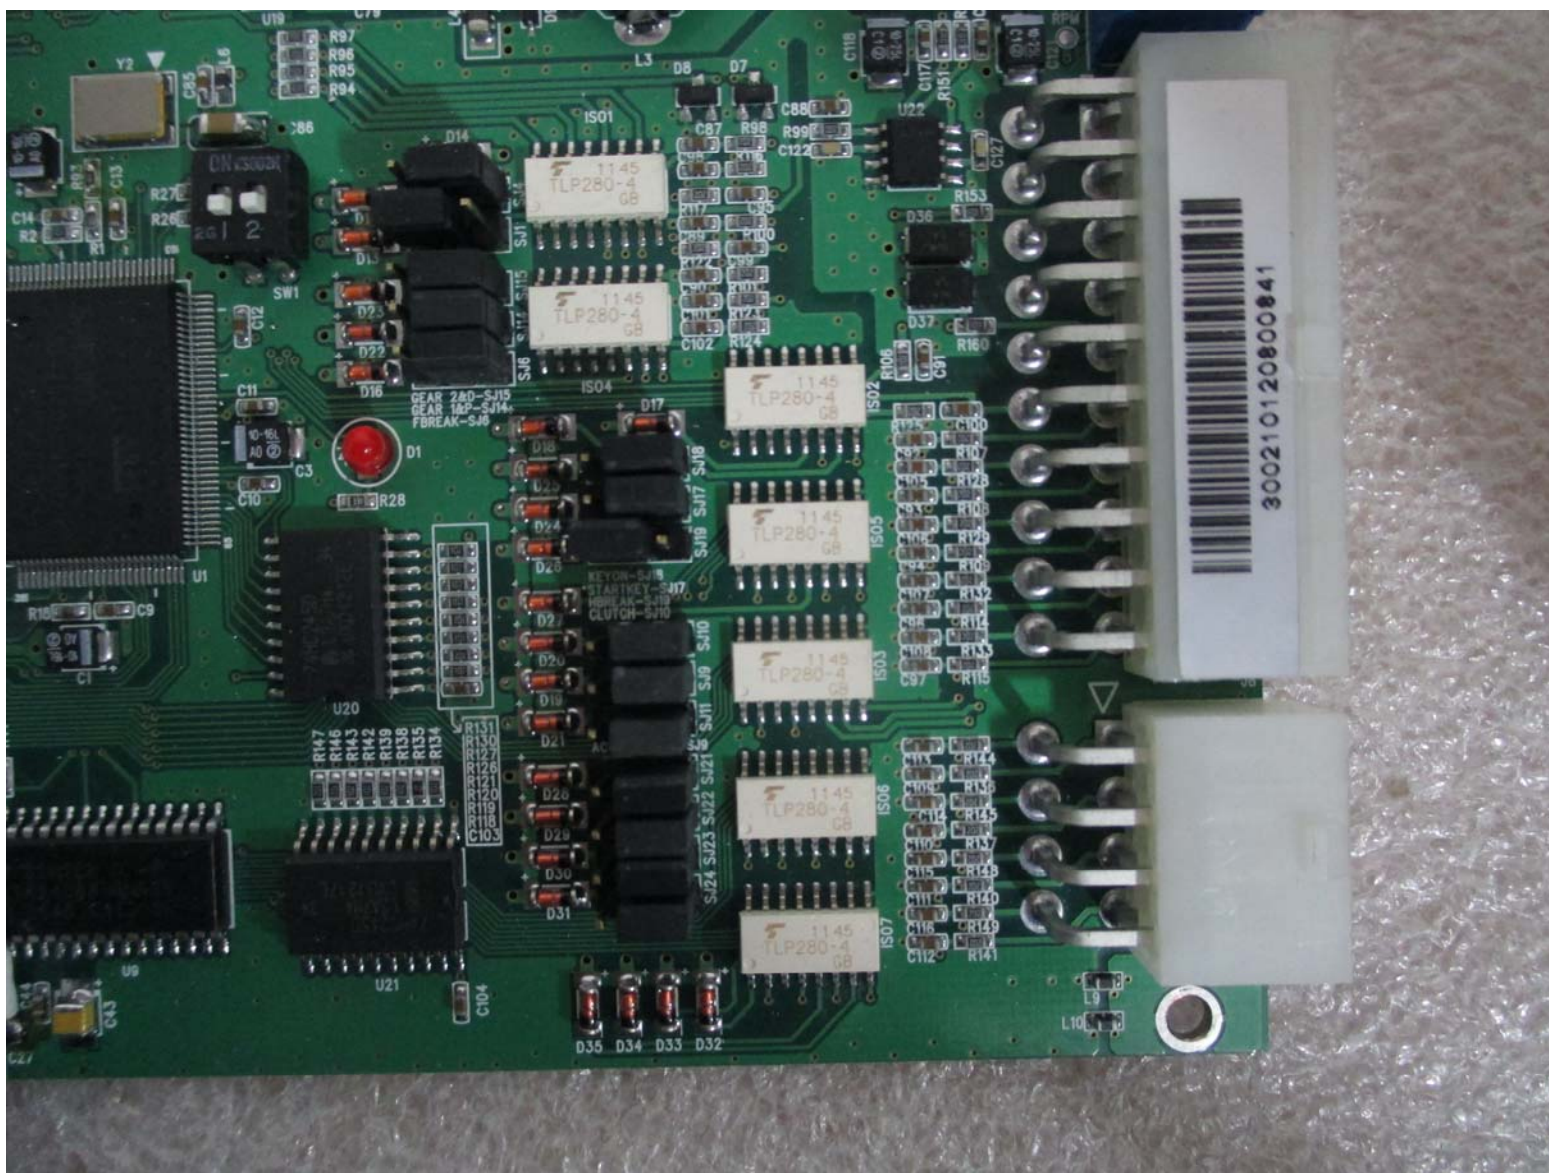


ERTS-5000_Main Board Front-4

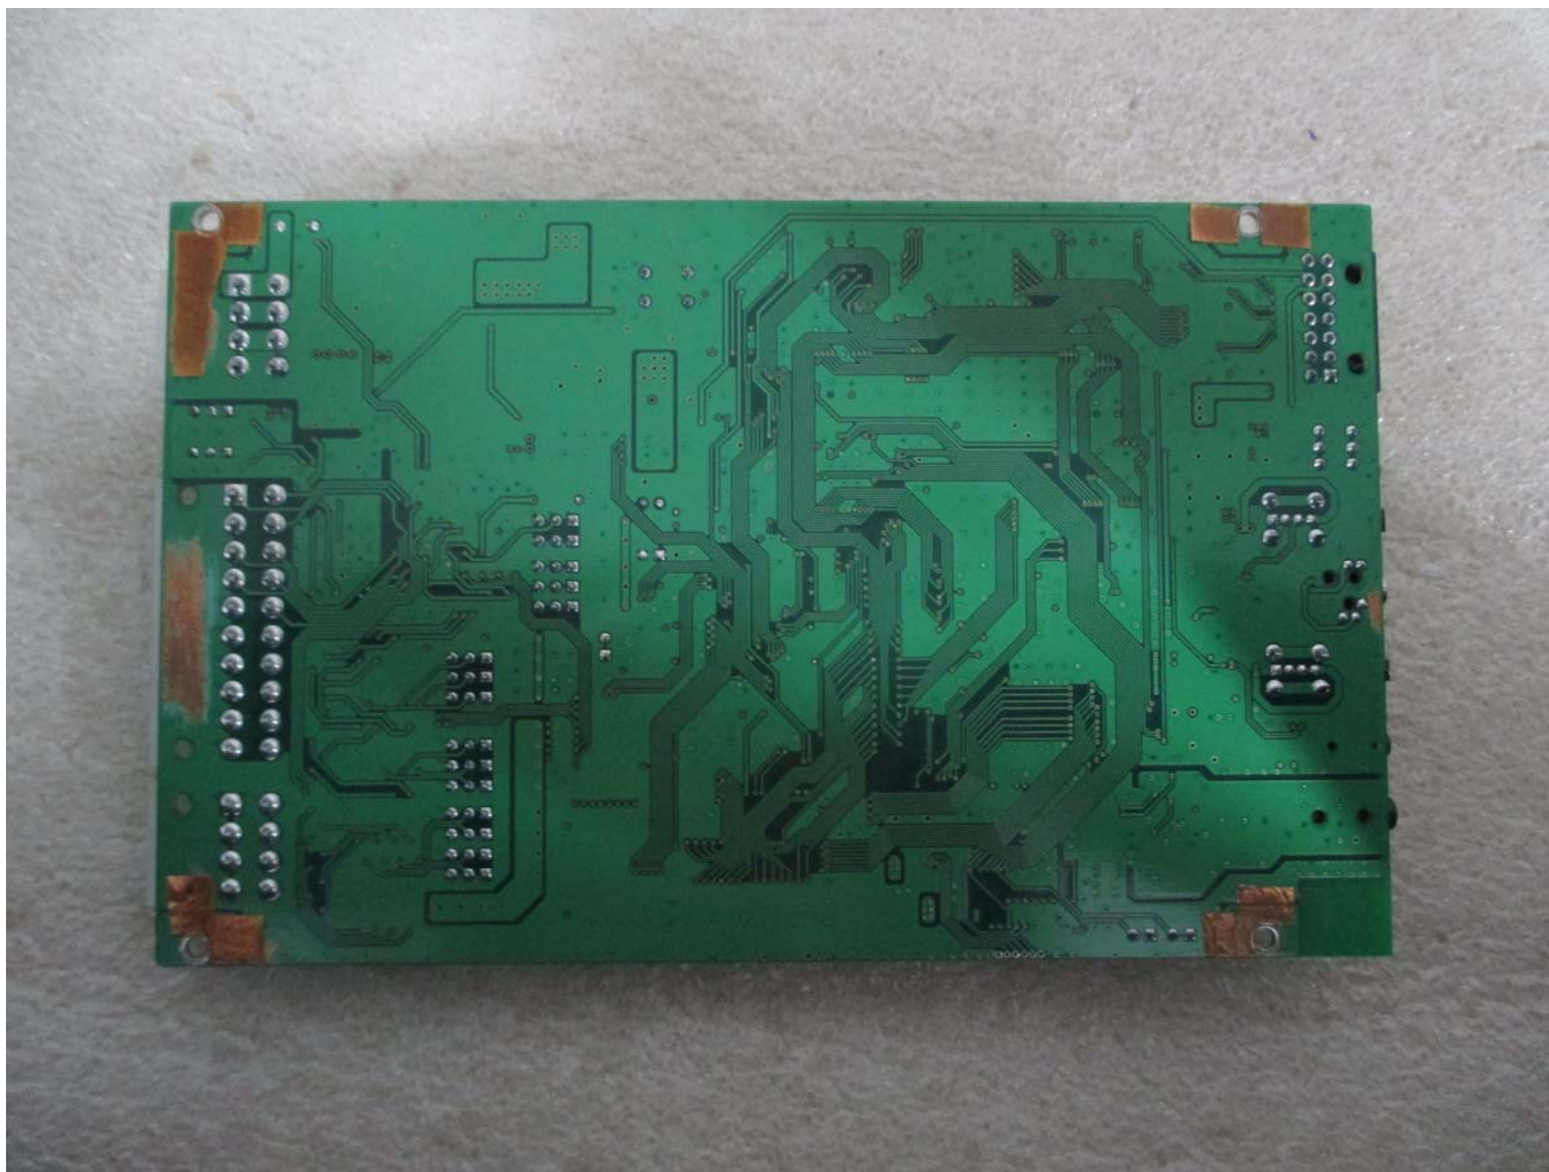


ERTS-5000_Main Board Rear

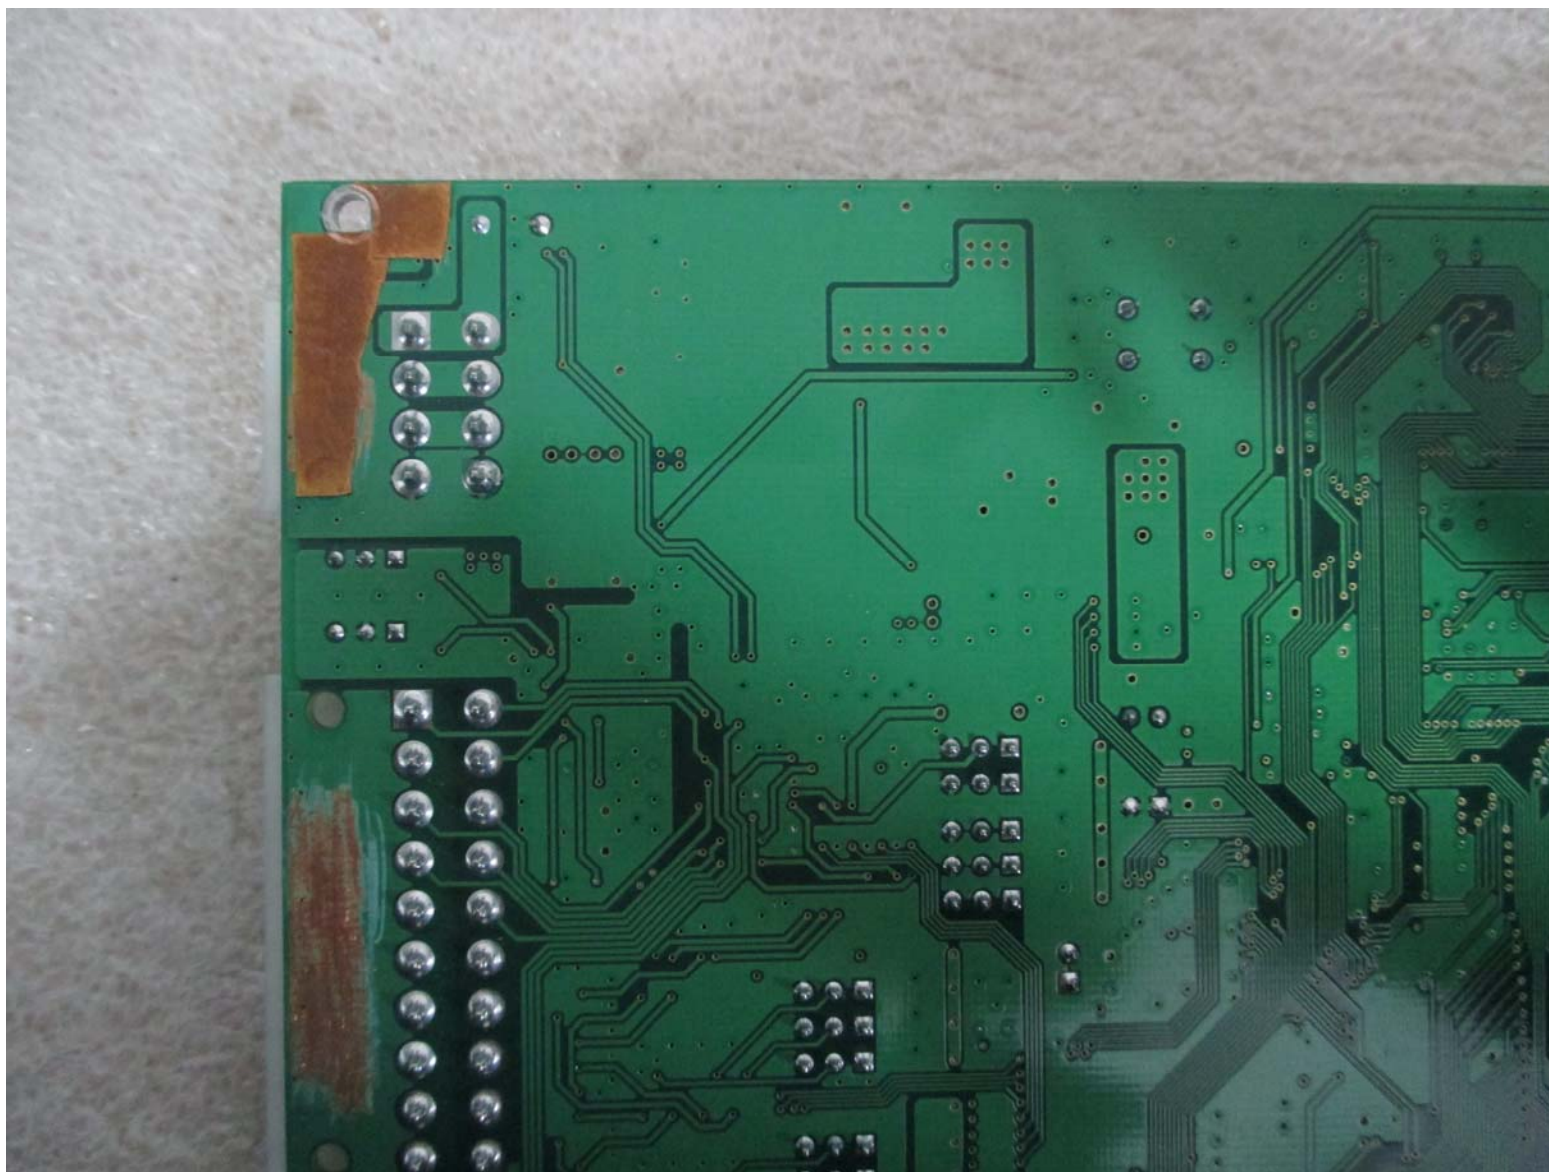


ERTS-5000_Main Board Rear-1

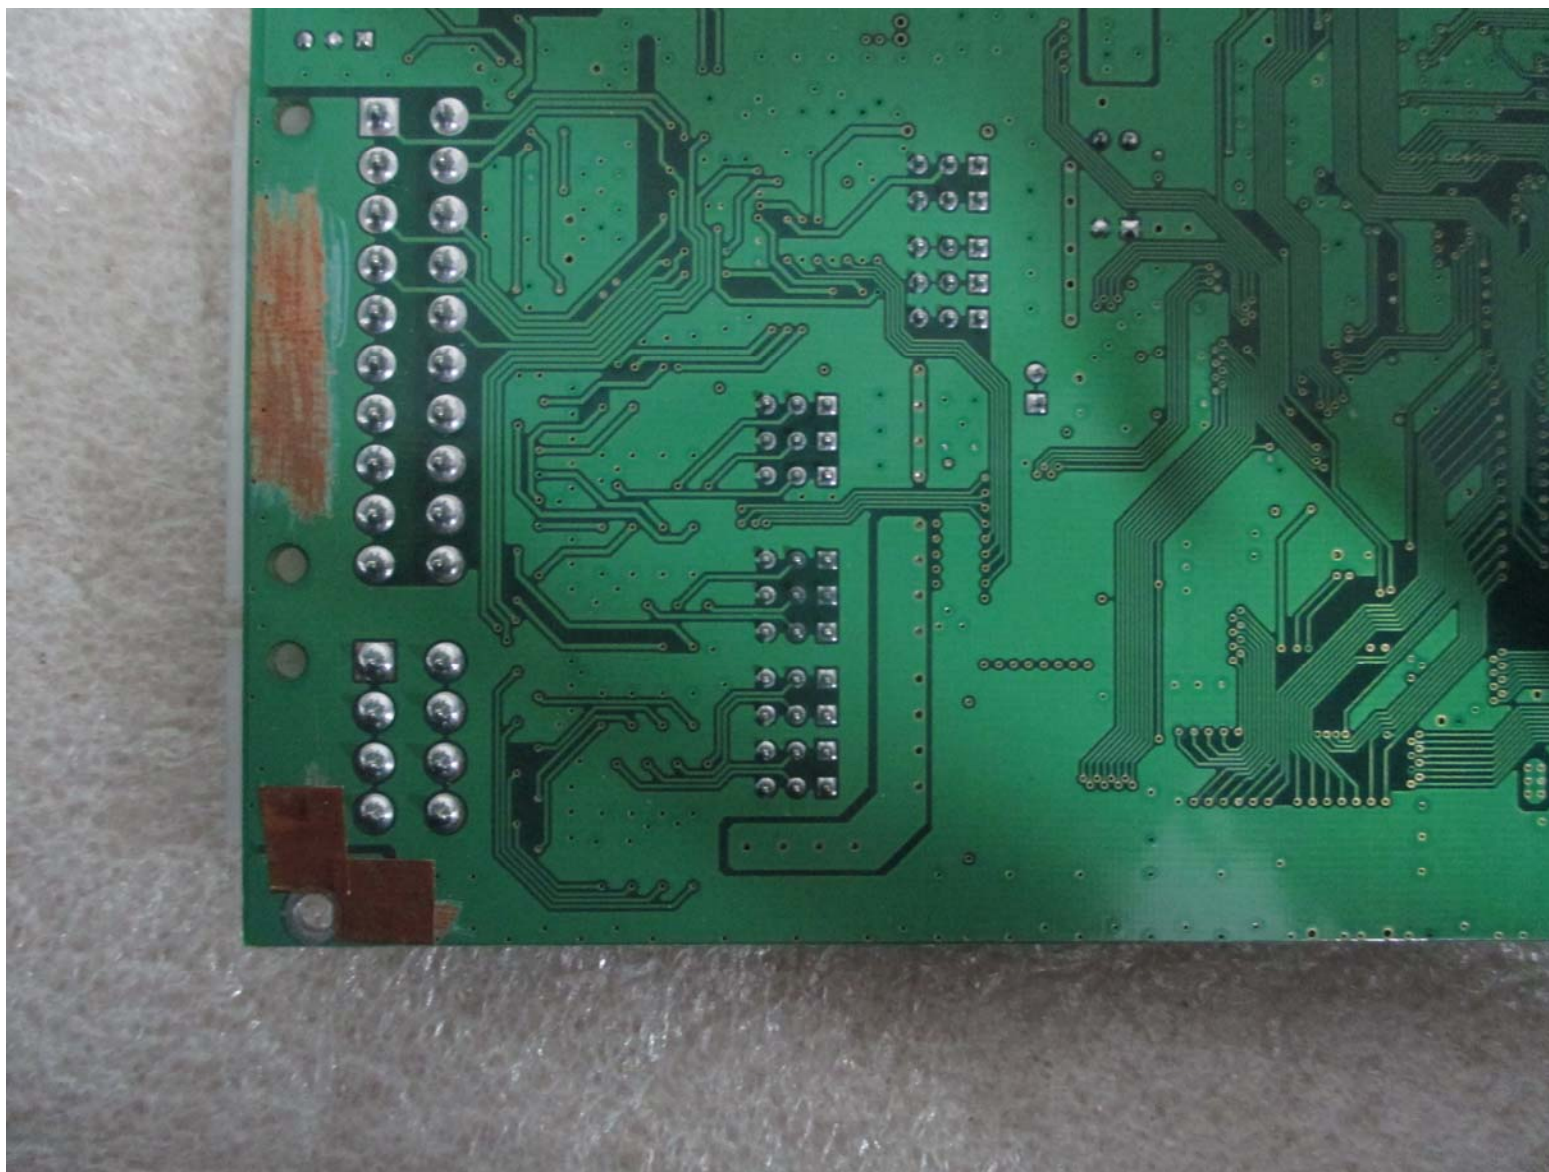


ERTS-5000_Main Board Rear-2

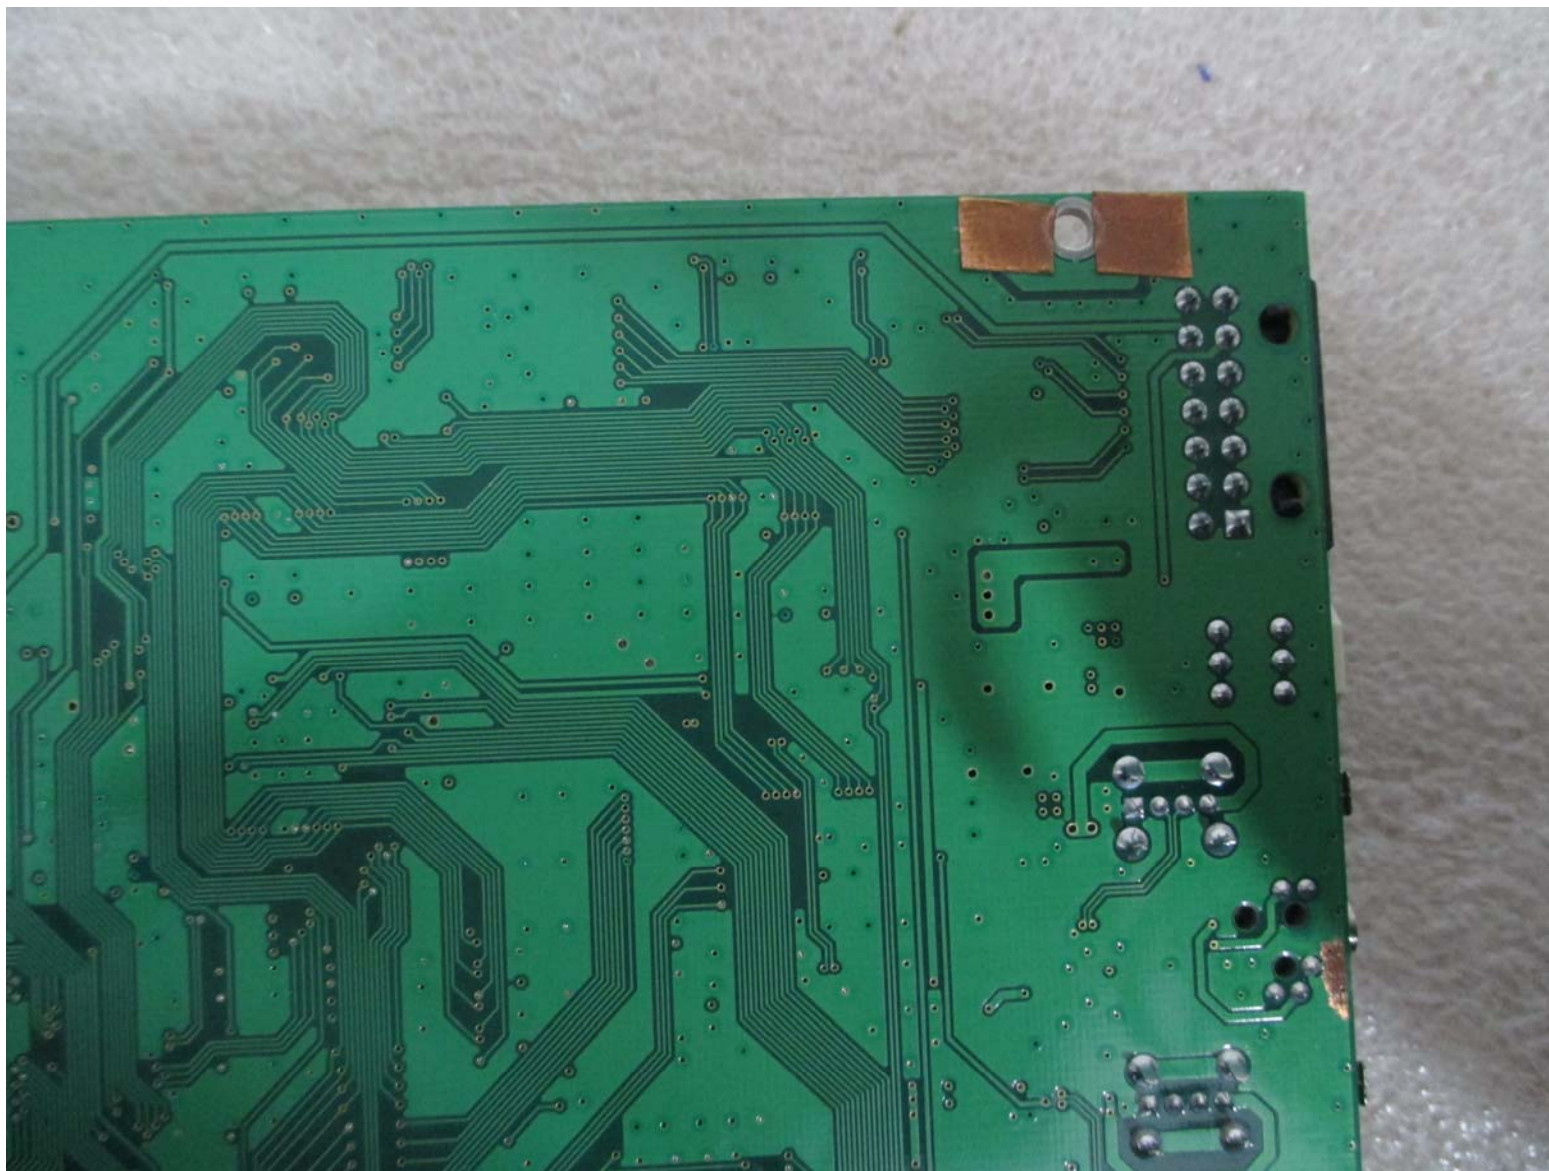

ERTS-5000_Main Board Rear-3

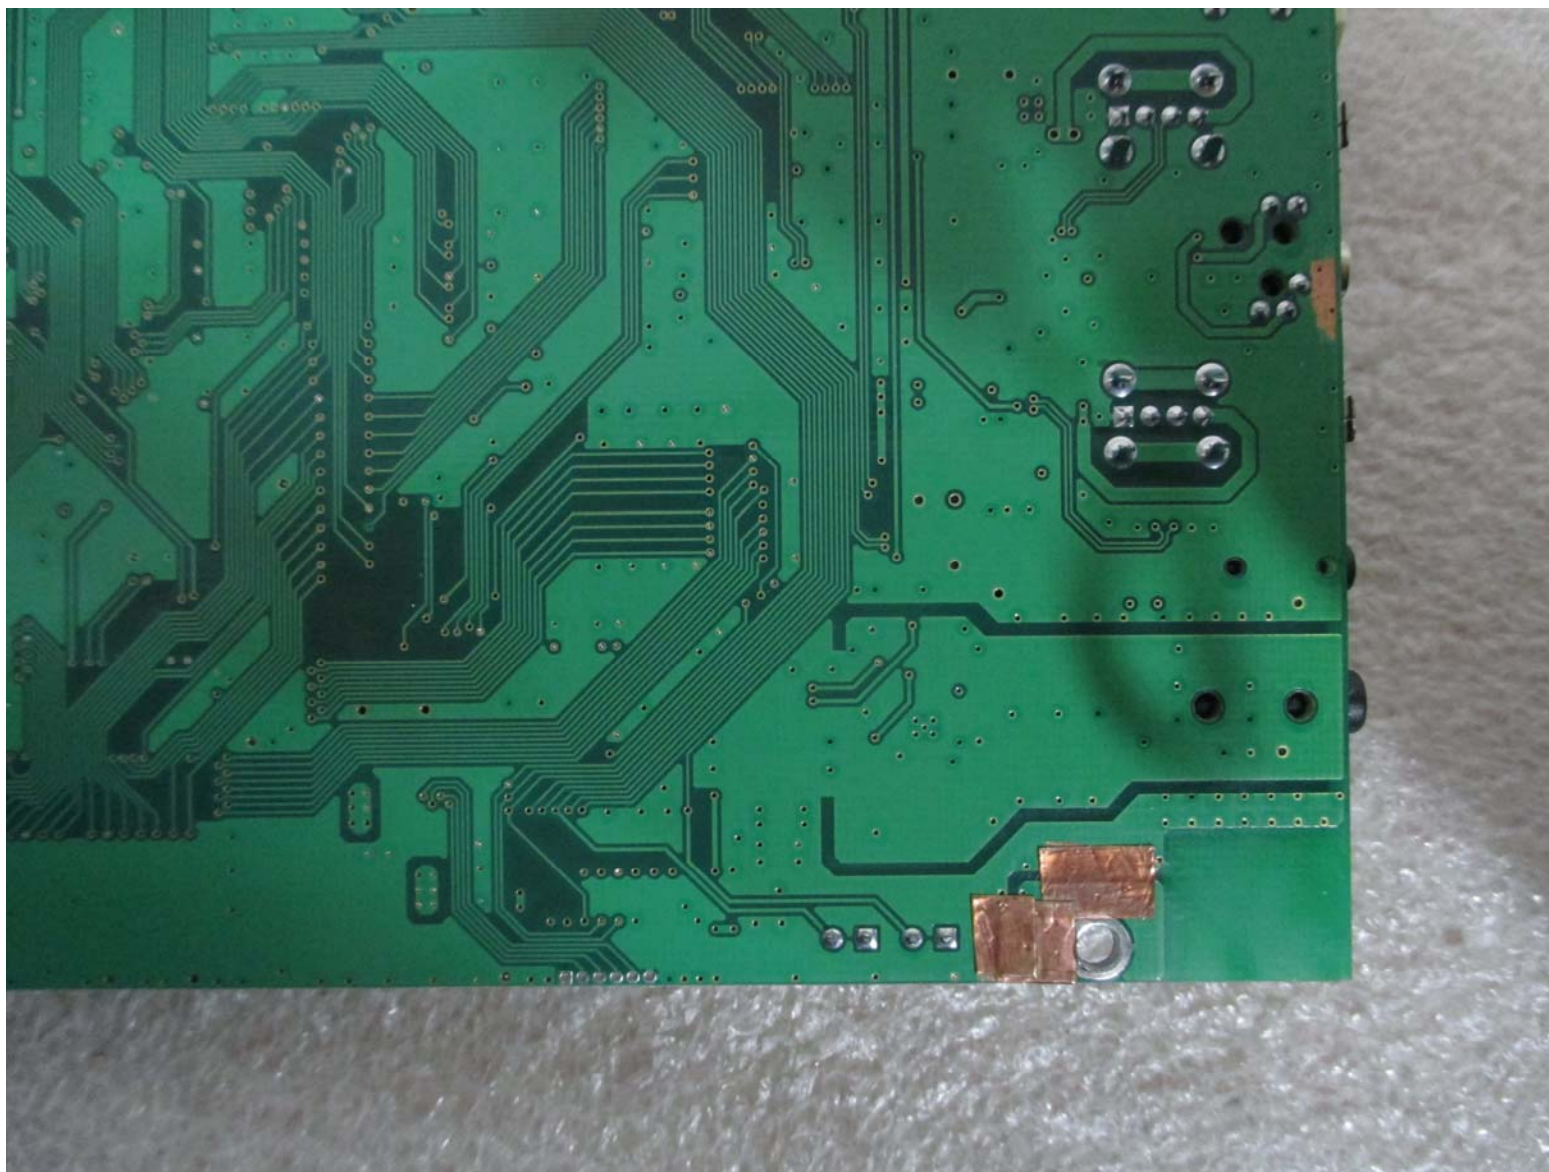

ERTS-5000_Main Board Rear-4

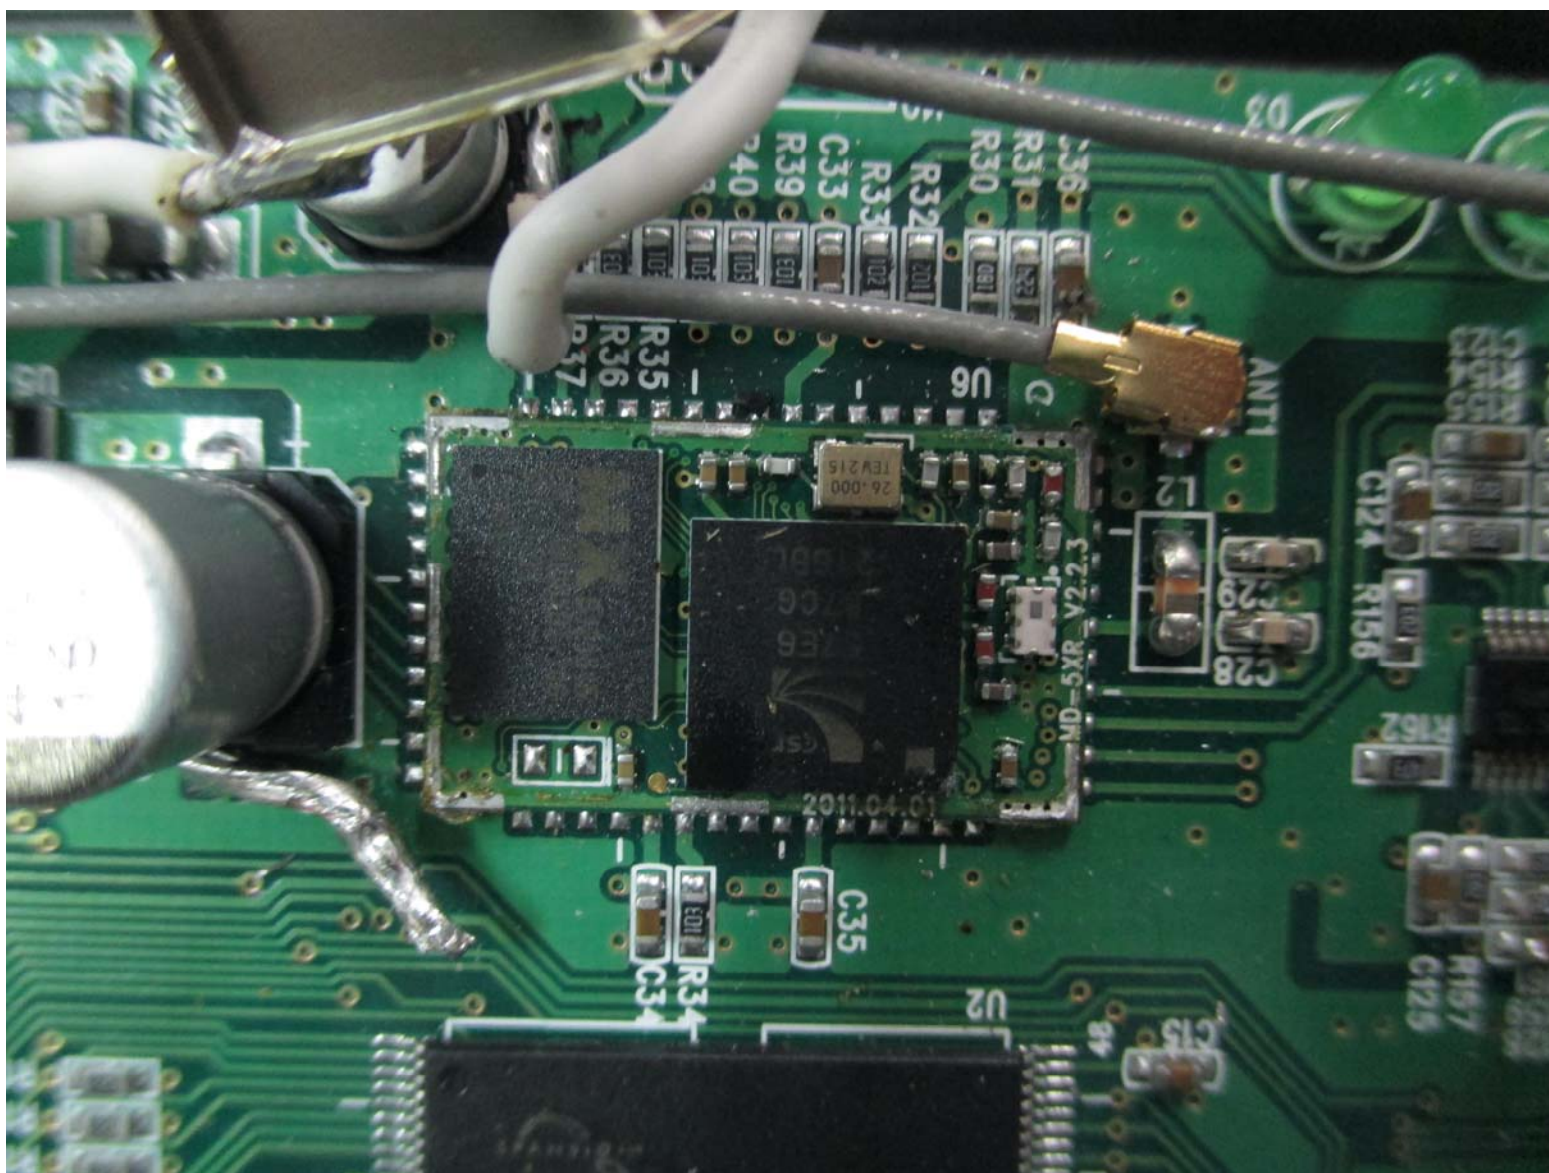

ERTS-5000_RF Module