

Preface


Dear Users :

Welcome to purchase "our" product, please read this user manual carefully before using it. Thanks, Let's enjoy music together!

Warnings

- Please use and store this product at room temperature
- Do not expose this product to rain or wet conditions
- Do not throw and drop this product to avoid product damage
- Do not self-dismantling, repair and transform the product
- Do not use chemical solvent cleaning the product
- Please don't arbitrarily discarded or placed the lithium battery in the fire in order to avoid the risk of explosion

Packing Content :

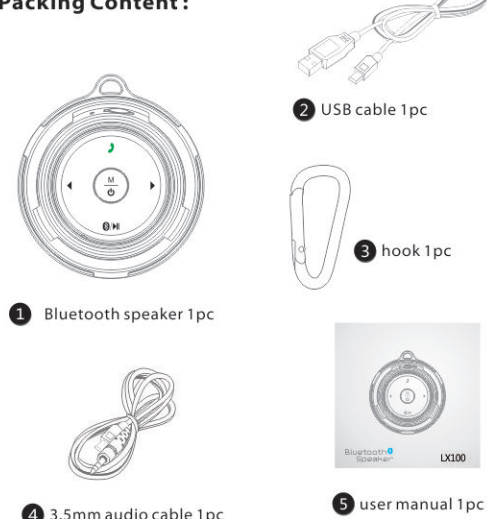


Features

- With wireless Bluetooth technology
- Support one button Bluetooth reconnection
- With built-in Mic, support handfree function
- Play APE/FLAC format high quality audio files stored in TF card
- Play main MP3/WMA/WAV format audio files stored in TF card



- Automatic shutdown after suspension without operation for 10 minutes
- Built in efficient li-on battery, USB charging is available
- With voice broadcast, support the phone ring

Technique Parameters

| | |
|---------------------|---|
| Interfaces | Micro USB port |
| | TF card slot |
| Product size | W77.5xD85xH46mm |
| Product weight | 200g(Including battery) |
| Speaker type | Bluetooth Speaker |
| Speaker structure | Single track+ Low frequency radiator |
| Functions | Bluetooth wireless connection, Handfree function, Voice prompt, TF card music play, |
| Supported cards | Max. 32GB TF card |
| Power supply | Built-in 650 mAh li-on battery |
| | DC 5V—500mA USB charging |
| Loudspeaker | 1.5inch |
| Frequency Response | 100Hz~20KHz |
| Wireless connection | Bluetooth 2.1+EDR |
| USB | USB2.0 Compatible with USB1.1 |
| File formats | APE/FLAC/WAV/WMA/MP3 |
| Bit Rate | MP3: 8Kbps~320Kbps |
| | WMA: 32Kbps~384Kbps |
| | APE: 600Kbps~1000Kbps |
| | FLAC: 600Kbps~1000Kbps |
| | WAV: 32Kbps~1000Kbps |

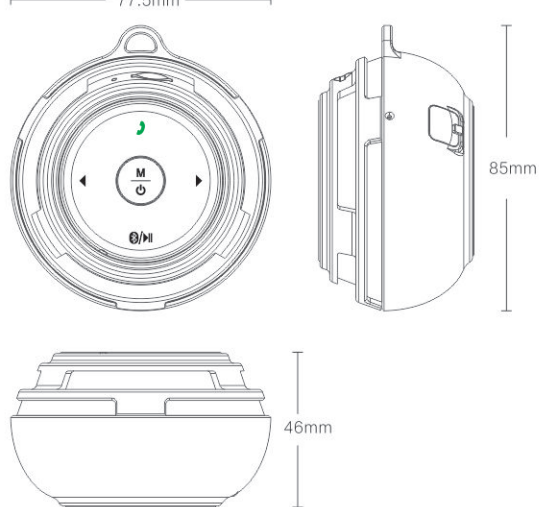


Key Functions

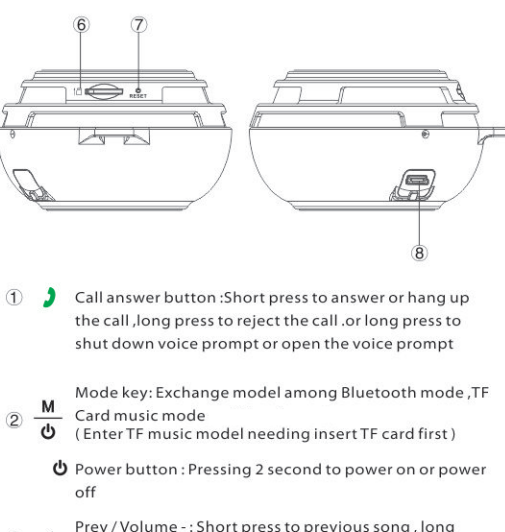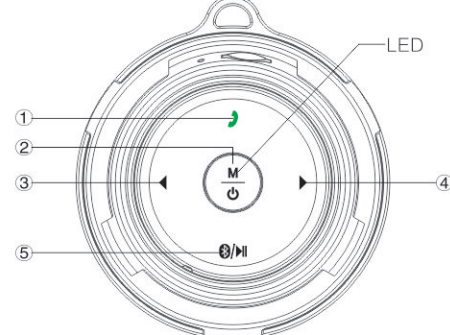

1. Call answer button :Short press to answer or hang up the call ,long press to reject the call .or long press to shut down voice prompt or open the voice prompt
2. Mode key: Exchange model among Bluetooth mode ,TF Card music mode (Enter TF music model needing insert TF card first)
Power button : Pressing 2 second to power on or power off
3. Prev / Volume - : Short press to previous song , long press to decrease the volume


4. Next/Volume+ : Short press to next song . long press to increase the volume . There will be voice prompt when Max. volume and light blue flashing
5. Bluetooth disconnected or reconnected : Under Bluetooth connection mode, long press to disconnect , short press again to reconnect the previous device
6. Play / Pause : Short press to play or pause music play
7. TF card slot : Insert TF card
8. Reset button : Press to reset the device
9. Micro USB port :

Main Function Operation Instruction : Bluetooth Connection :

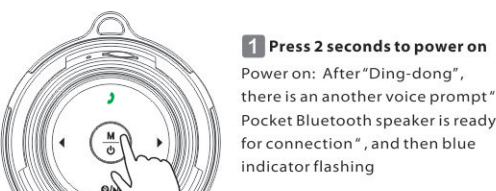

Bluetooth Connection :

Open the Bluetooth function of mobile phone , MID and other music players with Bluetooth function ,and search the devices , when you find the "it", click to connect

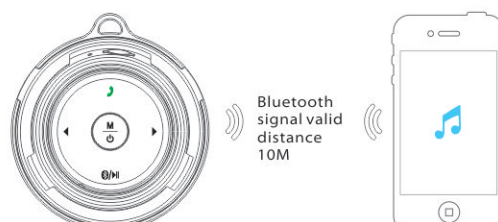


Connected and play

The speaker says " Connected ", and the blue indicator always light up, and then you can enjoy the music with this speaker .

1. If need password , please input "0000" and confirm to connect


2. The Bluetooth can reconnect the last paired device automatically

TF Card music play

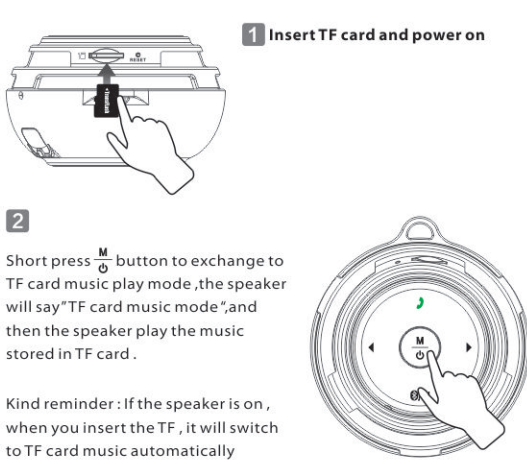


Kind reminder : If the speaker is on , when you insert the TF , it will switch to TF card music automatically

Handfree Function

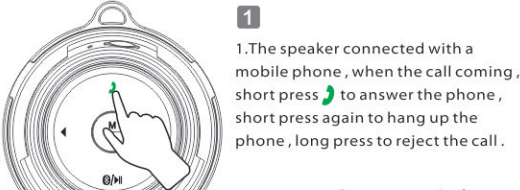

Under line-in mode


Power on the speaker , after "Ding-dong", the speaker says " Pocket Bluetooth speaker is ready for connection " , short press M to switch to line in mode , connect the speaker to the music player to play music stored in other players .

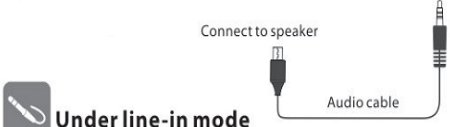

Power on the speaker , after "Ding-dong", the speaker says " Pocket Bluetooth speaker is ready for connection " , short press M to switch to line in mode , connect the speaker to the music player to play music stored in other players .

Charging

The user can choose DC5V-500mA USB adaptor to charge the device

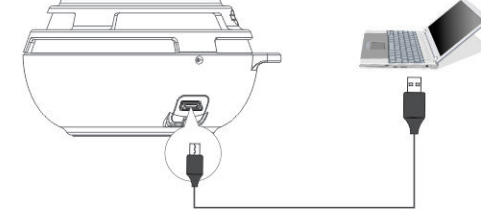

Speaker power supply voice prompt :

Battery low : "Battery low , please charge " , it will prompt every 30 seconds
Battery is charging "Pocket Bluetooth speaker is charging"
Battery full : "Charging done"

FAQ

| Questions | Settlement |
|---------------------------|---|
| Fail to Bluetooth connect | 1.Restart the speaker 2.If need password , please input "0000" |
| Music Play Break | Please check the Bluetooth connection valid distance or if something cut off the signal |
| TF card music play wrong | 1. Check if the TF card format right (the speaker just can support FAT 32 format TF card) 2.Check if the music file format store in TF card right ,the speaker just can support APE、FLAC、WAV、WMA、MP3 format files |
| No Sound | 1.Check the volume the speaker 2.Check if the speaker is in mute or pause |
| Line-in no sound | Check if the audio cable connect right |
| Fail to power on | Check if the batter is low |
| Speaker halt | Reset the speaker |

Warranty Card

Please fill up this "Warranty Card" after purchasing this product .

Date of purchase : _____

Name: _____

Address: _____

Telephone: _____, ip code: _____

Authorized dealer stamp: _____

Dealer Address: _____

Phone: _____ Zip Code : _____

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.