



Internal Photographs

EUT - Open View

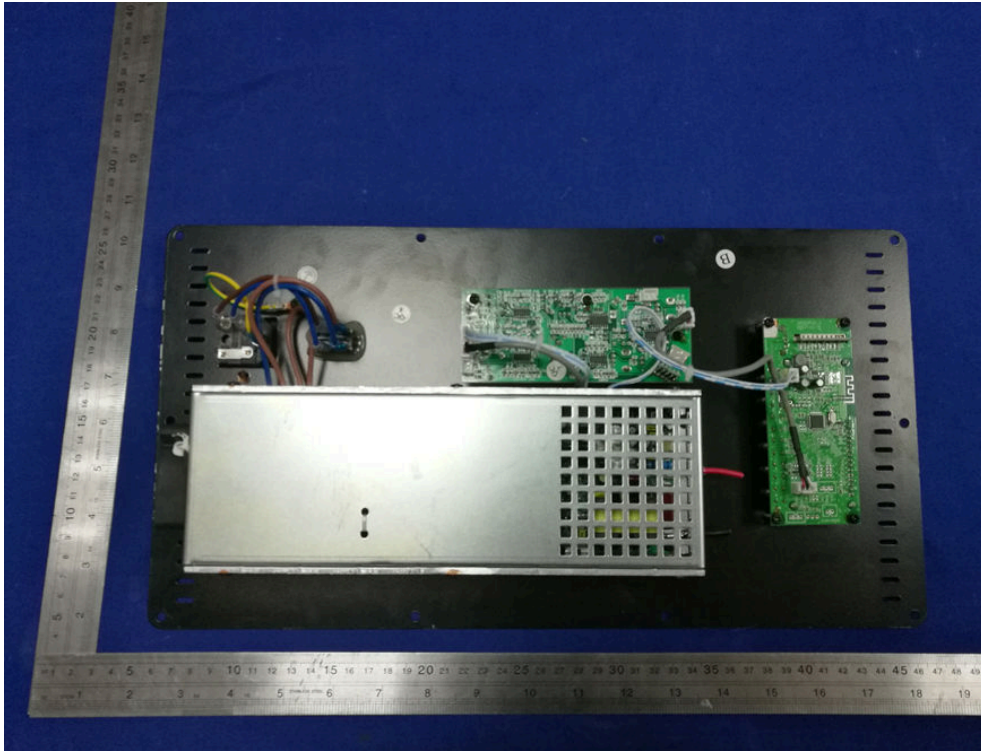


EUT – PCB View 1


Antenna location

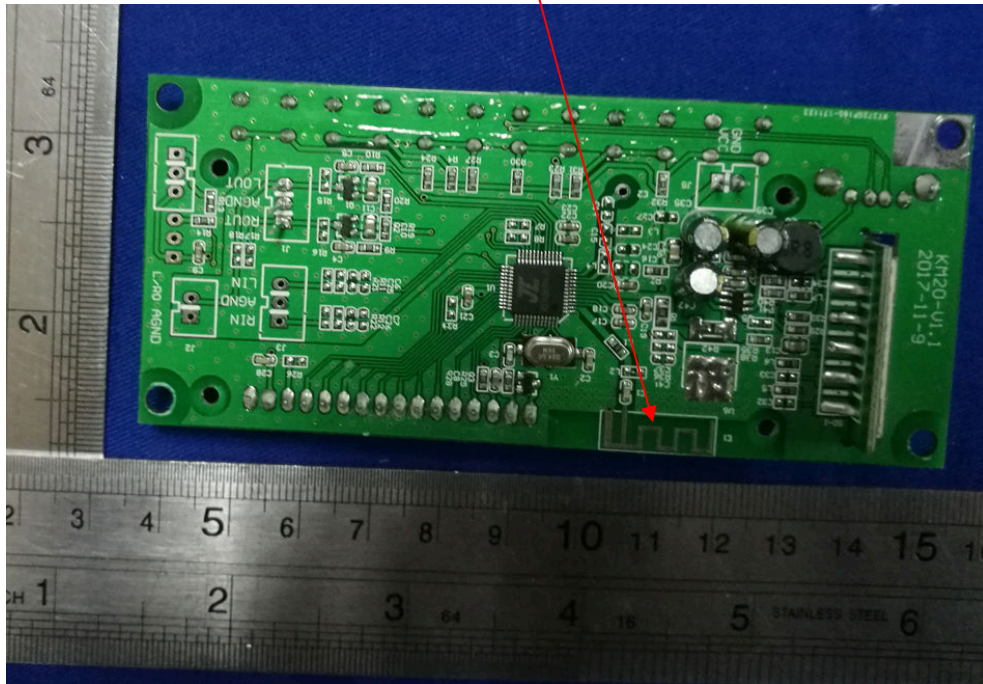


EUT – PCB View 2

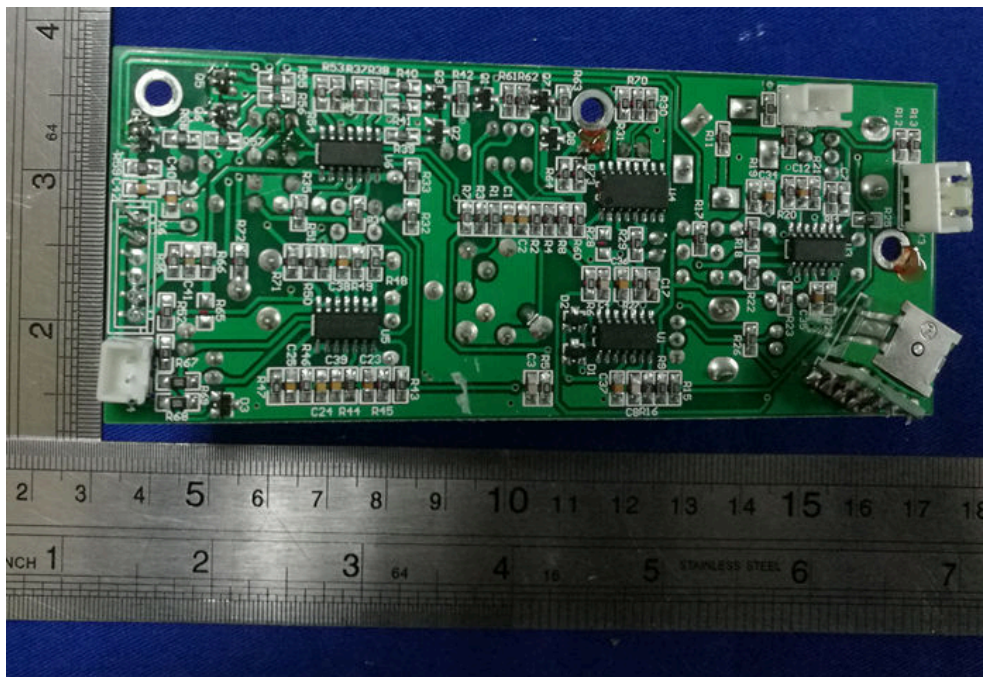


EUT – PCB View 3

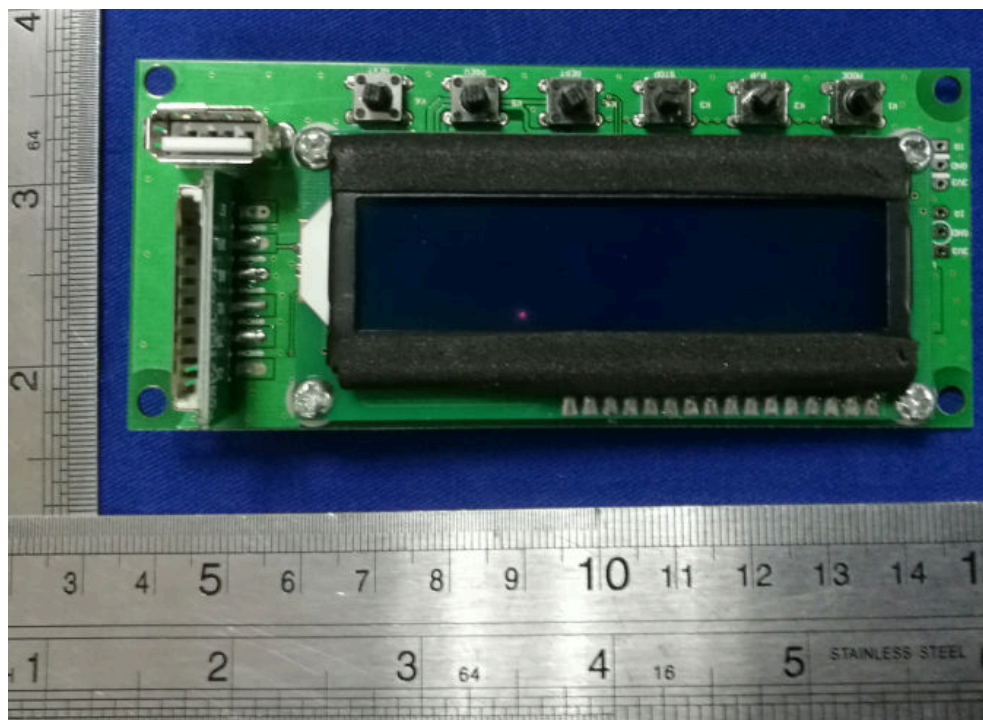


EUT – PCB View 4

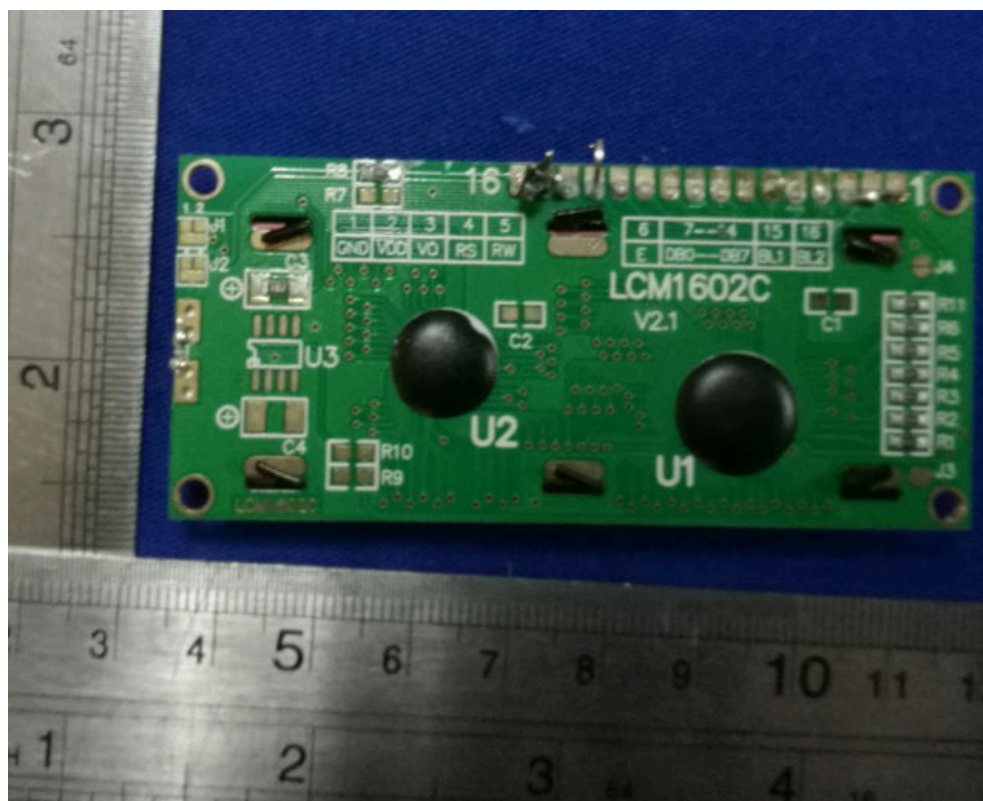

EUT – PCB View 5

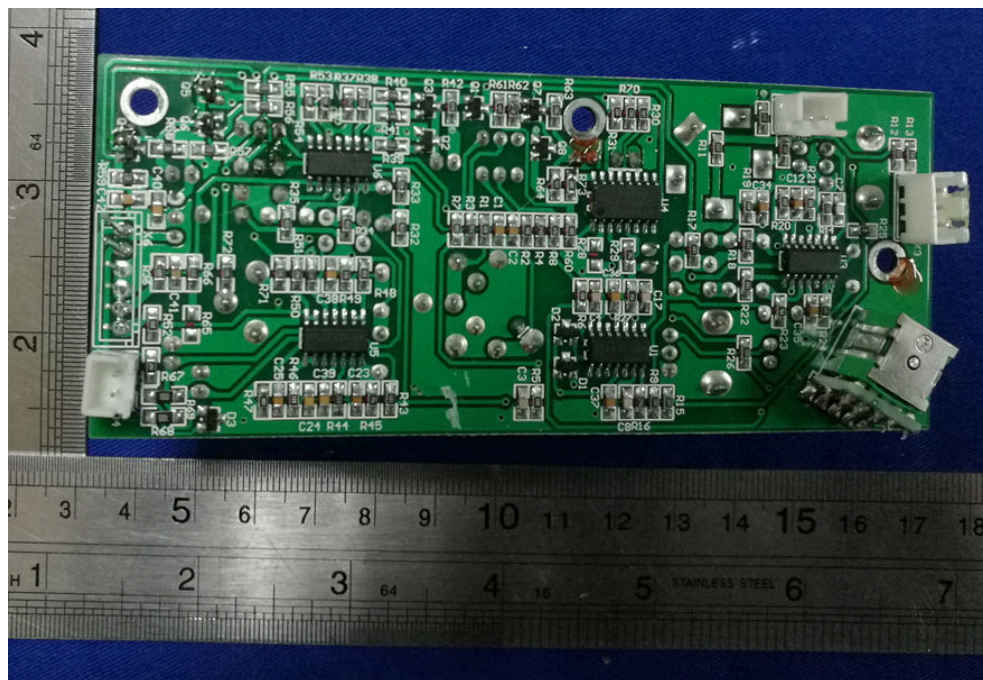

EUT – PCB View 6

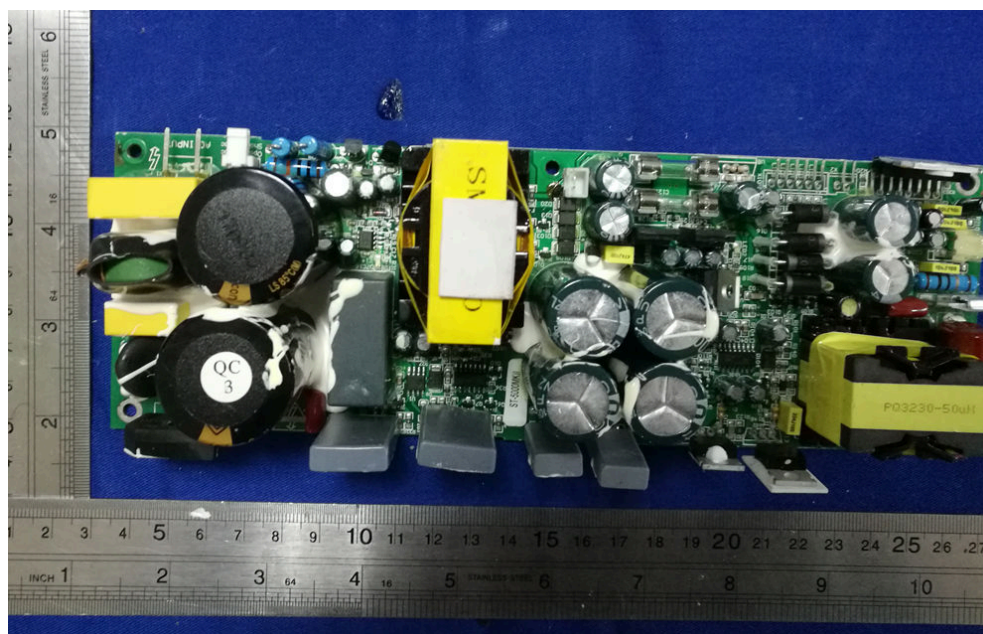

EUT – BT MODULE View

