



Age 8 +

## GRAVITY SKY HAWK



### 3.5 CHANNEL REMOTE CONTROL HELICOPTER WITH VIDEO CAMERA

Thank you for purchasing our product. In order to safely enjoy this helicopter, please read this manual carefully before using. Please keep it for future reference.

#### TRIM ADJUSTMENT:

If the helicopter is rotating in the air uncontrollably, adjust the rudder trimmer until the helicopter is stable.

#### LEFT / RIGHT TURN ADJUSTMENT




If the helicopter is spinning clockwise, push the left trim button until the helicopter stops spinning.



If the helicopter is spinning counter clockwise, push the right trim button until the helicopter stops spinning.

#### CAMERA VIDEO RECORDING INSTRUCTION:

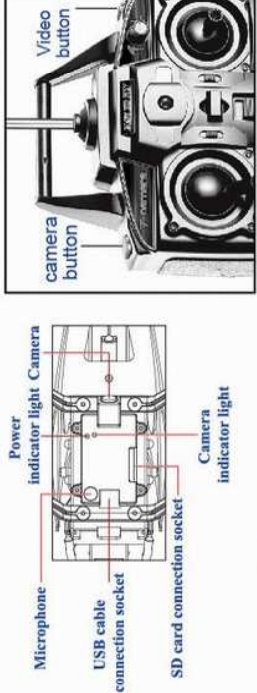

#### (1) Installation of SD card:

Insert the SD card into the slot, press slightly to insert. To remove press it again and it will pop up automatically. When the SD card is not inserted into the slot, the "Camera button light" will blink red and green.

#### PRECAUTIONS:

1. This helicopter is only recommended for use by experienced RC helicopter users. This helicopter is not a toy and requires skill to operate.
2. This helicopter will become damaged and possibly become inoperable if not properly and skillfully used.
3. It is recommended that you start out by flying the helicopter at slow speed and at a low height until you become skilled at flying this helicopter.
4. It is the sole responsibility of the operator of this helicopter to fly it in a safe and controllable manner.
5. This helicopter is warranted against defects in workmanship and materials, but is not warranted against damage caused by crashing the helicopter.
6. Do not touch the motor as it can become very hot during operation.
7. After each use, inspect the helicopter to make sure there is no damage. Do not attempt to fly a damaged helicopter as it will not operate properly and may cause injuries.
8. Do not fly near or around water. If the helicopter lands or crashes in water, it can damage the circuit boards and make the helicopter unoperable.

#### YOU MUST READ THIS MANUAL THOROUGHLY AND FULLY UNDERSTAND HOW TO OPERATE THIS HELICOPTER BEFORE ATTEMPTING TO FLY THIS HELICOPTER.

#### SAFETY:

1. Insufficient battery power will shorten the control distance.
2. Insufficient battery power will lead to difficulties in controlling the helicopter.
3. Avoid dropping and crashing the helicopter for it will lead to damages and shorten the product life.
4. Before flying, always turn on the helicopter switch first and then the transmitter switch.
5. After flying, always turn off the transmitter switch first and then the helicopter switch.

#### (2) Camera light indicator status:

Green: standby mode.  
The red light flashes 3 times: start to take a picture.  
The red light flashes continuously: start to record.  
The red light stops flashing: exit from recording state.

#### (3) Dynamic/static state camera functions:



Launch the helicopter and press the "camera button", the camera indicator light will turn to red. When the red light flashes 3 times, it will take a static state photo automatically and store on the SD card. Press the "record button", it will flash continuously and start to record. When you press the "record button" again it will stop recording and exit.

#### (4) To play videos/ pictures:

Switch off the helicopter, take out the SD card and connect the SD card to your computer. You can view your videos and images by media player.

#### PROBLEMS AND SOLUTIONS:


PROBLEMS	CAUSES	SOLUTIONS
Transmitter not working	1. The transmitter switch is on "OFF".	1. Turn the transmitter switch to "ON".
	2. Batteries are installed improperly.	2. Remove the batteries and re-install with the correct polarity.
	3. Batteries are completely consumed.	3. Replace with new batteries.
Control failure	1. The helicopter switch is on "OFF".	1. Turn the helicopter switch to "ON".
	2. The antenna is not installed properly or is not fully extended.	2. Re-install the antenna and pull it out completely.
	3. Windy conditions.	3. Do not fly the helicopter in windy conditions.
	4. The transmitter indicator is flashing.	4. Push the throttle lever to the top and then to the lowest, or replace the batteries.
Ascending failure	1. The rotation of main blades is too slow.	1. Push up on the throttle stick.
	2. The helicopter battery is not fully charged.	2. Recharge the helicopter battery.

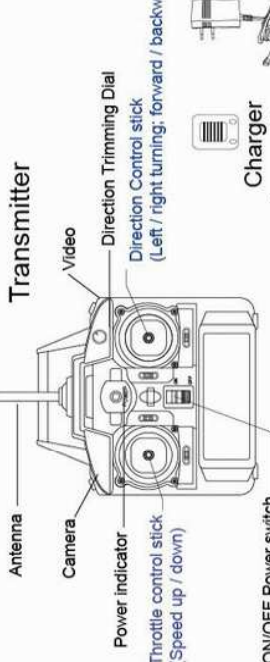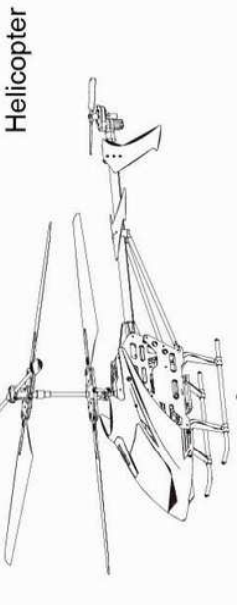

#### PREPARING THE TRANSMITTER FOR USE:


1. Insert the antenna into the hole at the top of the transmitter. Screw the antenna clockwise until it is tight. (Fig. 1)
2. Remove the battery cover from the back of the transmitter. Install 6 AA batteries as shown. Replace the battery cover. (Fig. 2)

**CAUTION:** 1. Make sure that you have installed the batteries with the correct polarity.  
2. Do not mix old and new batteries.  
3. Do not use damaged or leaking batteries.  
4. Please discard old batteries properly.  
5. When not in use for an extended period of time, please remove the batteries from the transmitter.

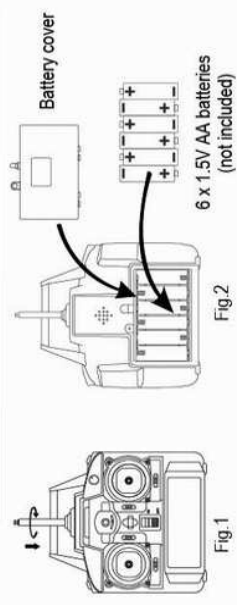

#### FLYING PRACTICE:

To master the helicopter, please attempt the following flying practices.

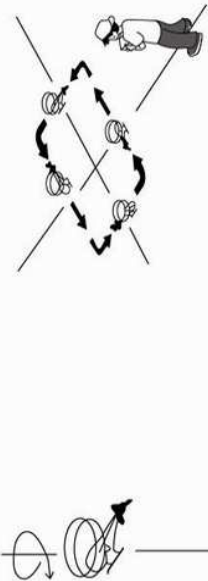

#### Fixed-point revolving


Keep flying forward—turn left—forward—turn left—forward—turn left. Practice flying into a square pattern. Keep practicing to gradually fly into a circle.

#### Fixed-point landing

#### Figure eight flying

#### CHARGING THE HELICOPTER:

1. To charge the Lithium-Ion Battery, remove the circuit board socket.
2. Connect the transmitter to the lithium-ion battery's three-pin plug and then plug the AC charger into the transmitter. Plug the charger into a power socket.
3. When the helicopter is charging, the RED light and the GREEN light on the transmitter will be ON. Once the charging is complete, the GREEN light on the transmitter will be OFF.
4. Disconnect the charger from the power socket and then carefully disconnect the battery plug from the transmitter.

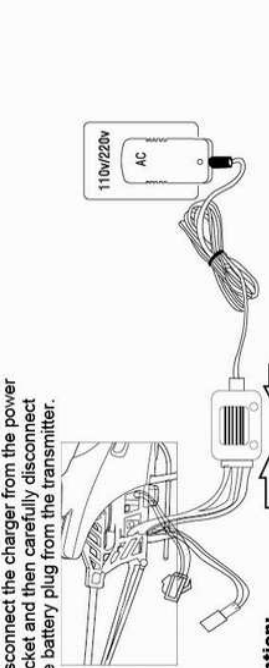


#### Attention:

1. Charging the battery will take up to 90-120 minutes.
2. Once the GREEN light on the transmitter turns on, promptly unplug the charger from the power socket.
3. Do not attempt to further charge a fully charged battery as this could cause damage to the battery.
4. After charging, please wait 20-30 minutes before re-charging the battery so that the battery may cool down prior to re-charging. Failure to do this can result in damage to the battery.
5. Do not use any other charger than the charger that has been supplied with this helicopter.
6. Do not use a circuit the battery. Do not leave the battery together with tiny metal parts in consideration of safety.

#### CONNECTING THE HELICOPTER BATTERY:

Connect the battery wire with the circuit board socket carefully.

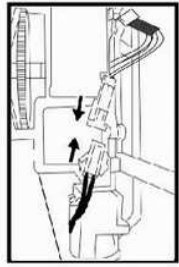

- WARNING**
1. Carefully connect the black card of the battery to the black catch of the circuit.
  2. When not using the helicopter for a long period of time, please disconnect the battery wire from the circuit board socket.

#### WARNING:

#### WARNING:

- Not for children under 3 years of age due to small parts.
- Do not fly to stop fly while it is in motion.
- Keep hands, face and hair away from all moving parts.
- Exercise caution during use at all times.
- Do not allow children to disassemble the transmitter or controller by themselves.
- Do not use the transmitter or controller in rain or other wet conditions.
- If toy is broken during use, it should be checked or repaired by an adult.
- Remove the batteries from the transmitter and controller when not in use for a longer battery life.
- All battery types must be recycled or disposed of properly.
- Please always read the instruction manual carefully before operating toy.
- Specifications and colors of content may vary from illustrations.

#### BATTERY CAUTIONS:


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged by an adult.
- Batteries should be stored in a cool, dry place and used batteries are not to be used.
- Batteries to be recharged with correct polarity.
- The supply terminals are not to be short-circuited.
- Exhausted batteries are to be removed and properly discarded as they will hinder performance.
- Always use fresh and/or fully charged batteries.
- Please check the wire, plug, shell and other parts of charger periodically and if any damage, stop using until fully repaired.

#### Helicopter is equipped with a lithium-ion rechargeable battery, please also pay attention to the following cautions for safety use:

- The lithium polymer battery in the toy is not replaceable.
- Do not use or leave the battery near a heat source.
- Do not dispose of the battery in fire or heat.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water, and do not use in a cool, dry environment.
- Do not use the battery in a high-temperature environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not short circuit the Li-Po battery.
- Do not leave the Li-Po battery unattended during the charging process.
- Do not disassemble or alter the battery. The outer casing is soft and can be damaged.
- Always let the battery cool between use and charging.
- Inspect the battery before each use for swelling or malfunction. If damaged, discontinue use and discard properly.
- Please recycle after covering the Li-Po battery terminals with insulated tape or insert into an individual polybag.

#### HOW TO CONTROL:

1. Set your helicopter on the ground. Turn on the power switch on the helicopter, and wait for the lights to turn on. Leave the helicopter at least two meters away with the tail aimed at you, then turn on the transmitter.
2. After turning on the transmitter, you must wait for the lights on the tail unit to start blinking before being able to fly the helicopter. This will take up to 20 seconds. Move the throttle stick forward and then backward to initiate communication with the helicopter. You are now ready to begin flying.

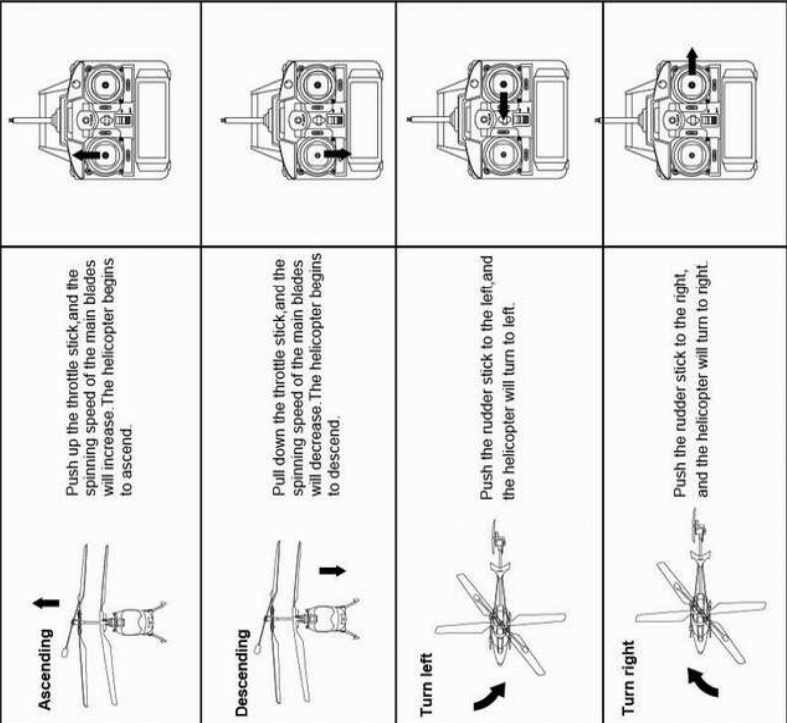

#### FCC Label Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with RSS-310 of Industry Canada. Operation is subject to the following conditions: 1) this device must not cause interference, and 2) this device must accept any interference that may cause undesired operation of the device.

This radio transmitter 482015005-Gravity Sky Hawk has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Detachable antenna: telescopic antenna 7138, the maximum permissible antenna gain is 2.15 dBi and the impedance is 50 Ohm.  
Operation is subject to the following two conditions:  
The operation is subject to the following two conditions:  
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Frequency: 27.145 MHz, Field strength: 78dBuV/m at 3 m  
Control distance: about 300 meters  
Maximum power: 100mW  
Peak Value: 100dBuV/m @3m

#### Forward



Push the rudder stick upward, and the helicopter will move forward.

#### Backward



Push the rudder stick downward, and the helicopter will move backward.

This helicopter comes with a replacement undercarriage to be used in case you break the unit installed on the helicopter. Prior to removing the damaged undercarriage, you will need to remove the old undercarriage and install the new undercarriage in the same manner as before.

#### ENVIRONMENT FOR FLYING:

1. Fly on a sunny day, without wind.
2. Do not fly in extreme temperatures, do not fly in temperatures above 113 degrees Fahrenheit/ 45 degrees Centigrade, or below 50 degrees Fahrenheit/ 10 degrees Centigrade. Flying in extreme and/or cold will affect performance and may damage model.
3. Do not fly in adverse windy conditions. Do not fly in adverse flying control. In very windy conditions your helicopter may become lost and/or damaged.
4. Select a large, wide open area for flying. Make sure there are no obstructions, water, animals or people nearby.
5. Do not fly while it is raining.



NOT INCLUDED  
AAx6

INA INTERNATIONAL LTD.  
MODEL/NO:LE-480215005  
INA AAX6  
CANADA IMPORTS 5m

UNITED STATES  
IMPORTED BY:  
GOLDEN VIBING SPORTS  
21929 - 67th AVENUE SOUTH  
KENT, WA, USA 98032

MADE IN CHINA



CANADA  
IMPORTED BY/IMPORTÉ PAR:  
INA INTERNATIONAL LTD.  
21929 - 67th AVENUE SOUTH  
KENT, WA, CANADA T2E 3R3

CONFORMS TO THE SAFETY  
REQUIREMENTS OF CPSIA,  
ASTM F983 AND CPSCA TOY  
REGULATIONS.

**WARNING:**  
CHOKING HAZARD - small parts.  
Not for children under 3 years.



Pour ans 14 et+  
RECOMMENDÉ



## GRAVITY SKY HAWK




### HÉLIOPTÈRE SKY HAWK RADIOGUIDÉ DE 3,5 CANAUX ET CAMÉRA VIDÉO

Nous vous remercions pour l'achat de ce produit. Afin de profiter de produit en toute sécurité, veuillez lire attentivement ce manuel avant l'utilisation. Veuillez garder ce manuel pour toutes références futures.


#### Ajustement de la COMPENSATION:

Si l'hélicoptère tourne dans l'air d'une manière incontrôlable, ajustez le réglage du gouvernail jusqu'à ce que l'hélicoptère soit stable.

#### Ajustement du virage gauche / droite.

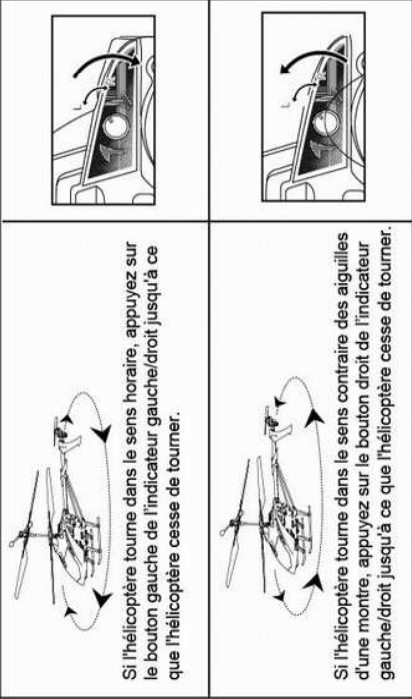

#### INSTRUCTIONS D'ENREGISTREMENT DE LA CAMERA VIDEO:

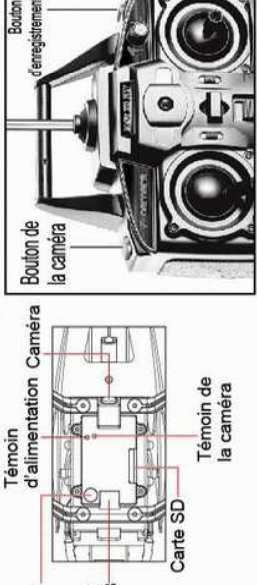

(1) Insertion de la carte SD : Insérez la carte SD dans la fente en la pressant légèrement. Pour la retirer, pressez de nouveau sur la carte; elle s'éjectera automatiquement. Lorsque la carte SD n'est pas insérée dans la fente, le « témoïn du bouton de la caméra » clignotera rouge et vert.

#### PRÉCAUTIONS:

- Cet hélicoptère ne devrait être contrôlé que par des utilisateurs d'hélicoptères radioamateurs d'expérience. Ce n'est pas un jouet et son utilisation nécessite certaines aptitudes.
- Cet hélicoptère pourrait être endommagé et devenir inutilisable s'il n'est pas employé adéquatement et habilement.
- Il est conseillé de le faire voler à basse vitesse et à basse altitude tant que l'utilisateur n'a pas acquis l'habileté nécessaire.
- Il incombe à l'utilisateur de conserver en tout temps la maîtrise de l'hélicoptère et de le faire voler de manière sécuritaire.
- L'hélicoptère est assorti d'une garantie contre les défauts de fabrication et de matériel, mais non contre les dommages causés par l'écrasement de l'hélicoptère.
- Ne touchez pas au moteur, car il peut devenir très chaud quand l'hélicoptère est utilisé.
- Après chaque utilisation, inspectez l'hélicoptère pour s'assurer qu'il n'est pas endommagé. N'essayez pas de faire voler un hélicoptère endommagé, car ce dernier ne fonctionnera pas convenablement et pourrait blesser une personne.
- Ne faites pas voler l'hélicoptère à proximité de l'eau. Si l'hélicoptère s'écrase ou atterrit dans l'eau, les cartes de circuit imprimé peuvent être endommagées, ce qui pourrait rendre l'hélicoptère inutilisable.

#### VOUS DEVEZ LIRE LE PRÉSENT GUIDE ATTENTIVEMENT ET BIEN COMPRENDRE LE FONCTIONNEMENT DE L'HÉLIOPTÈRE AVANT D'ESSAYER DE FAIRE VOLER CE DERNIER.

#### SÉCURITÉ:

- Une alimentation insuffisante de la batterie raccourcit la distance de contrôle de la télécommande.
- Une alimentation insuffisante de la batterie engendrera des difficultés au niveau du contrôle de l'hélicoptère.
- Évitez d'échapper et d'écraser l'hélicoptère ceci peut résulter aux dommages permanents ainsi que raccourcir la durée de vie de votre hélicoptère.
- Avant le vol de votre hélicoptère, toujours allumer l'interrupteur sur l'hélicoptère en premier, ensuite l'interrupteur émetteur.
- Après le vol, toujours éteindre l'interrupteur émetteur en premier et ensuite l'interrupteur sur l'hélicoptère.

-1-

#### (2) Témoïn de la caméra :

Vert : mode veille.  
La lumière rouge clignote trois fois : prenez une photo.  
La lumière rouge clignote continuellement : enregistrez une vidéo.  
La lumière rouge arrête de clignoter : quittez le mode d'enregistrement.

#### (3) Fonctions de photo et de vidéo de la caméra :

Faites décoller l'hélicoptère et appuyez sur le « bouton de la caméra » : le témoïn de la caméra deviendra rouge. Lorsque la lumière rouge clignote trois fois, la caméra prendra automatiquement une photo et la stockera sur la carte SD. Appuyez sur le « bouton d'enregistrement » : il clignotera continuellement et l'appareil commencera à enregistrer une vidéo. Appuyez sur le « bouton d'enregistrement » de nouveau pour arrêter l'enregistrement et quitter le mode.

#### (4) Pour visionner des vidéos ou photos :

Éteignez l'hélicoptère, retirez la carte SD et connectez-la à votre ordinateur. Vous pouvez ensuite visionner vos vidéos et images à l'aide d'un diffuseur de médias.


#### Problèmes et Solutions :

Problèmes	Causes	Solutions
L'émetteur ne fonctionne pas.	1. L'interrupteur émetteur est sur OFF. 2. Les batteries ne sont pas installées correctement. 3. Les batteries sont complètement épuisées.	1. Activer l'émetteur en appuyant sur ON. 2. Retirer les batteries et réinstaller les batteries en respectant la polarité. 3. Remplacer les batteries.
Défaillance de la commande.	1. L'interrupteur émetteur est sur OFF. 2. L'indicateur d'alimentation est complètement éteint. 3. Conditions ventueuses.	1. Activer l'émetteur en appuyant sur ON. 2. Réinstaller l'antenne et le retirer complètement. 3. Ne pas voler l'hélicoptère durant les conditions ventueuses.
Échec à monter / décollage	4. L'indicateur lumineux de l'émetteur clignote. 1. La rotation des pales principales est trop lente. 2. Les batteries de l'hélicoptère ne sont pas entièrement chargées.	4. Poussez la manette à accélérateur vers le haut, puis vers le bas ou remplacez les batteries. 1. Poussez sur la manette à accélérateur vers le haut. 2. Rechargez les batteries de l'hélicoptère.

-6-

#### Chargement de l'hélicoptère:

- Pour charger la batterie lithium-ion: 1. Retirez la batterie de la prise de la carte de circuit imprimé.
- Relevez l'émetteur avec les trois broches de la batterie au lithium-ion et ensuite relevez le chargeur AC à l'émetteur. Branchez le chargeur dans une prise de courant.
- Lorsque l'hélicoptère se recharge, le témoïn ROUGE et le témoïn VERT sur l'émetteur seront ALLUMÉS. Lorsque la recharge est terminée, le témoïn VERT sur l'émetteur SETENDRA.
- Débranchez le chargeur de la prise de courant puis déconnectez soigneusement la batterie de l'émetteur.

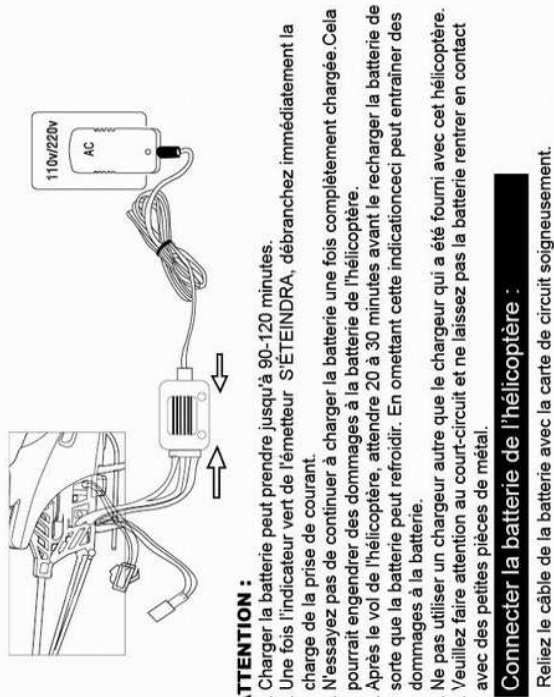

-3-

#### Avertissement:

- NE PAS laisser les enfants de moins de 3 ans en raison des petites pièces.
- Ne convient pas aux enfants de moins de 3 ans en raison des petites pièces.
- Garder les mains, le visage et les cheveux loin de toutes les pièces mobiles.
- Éviter d'entrer en contact avec les pièces mobiles.
- Ne pas permettre aux enfants de démonter eux-mêmes le transmetteur ni le contrôleur.
- Ne pas laisser les enfants jouer avec les pièces mobiles.
- Si le jouet se brise en cours d'utilisation, il devrait être vérifié ou réparé par un adulte.
- Retirer les piles du transmetteur et du contrôleur lorsqu'ils ne sont pas utilisés pour prolonger la durée des piles.
- Tous les types de pile doivent être recyclés ou éliminés de façon sécuritaire.
- Ne pas jeter les piles dans l'eau, le feu ou les déchets.
- Les caractéristiques et les couleurs du contenu peuvent être différentes de ce qui est illustré.

#### MISES EN GARDE CONCERNANT LES PILES:

- Les piles non rechargeables ne doivent pas être rechargées.
- Les piles rechargeables ne doivent être rechargées que par un adulte.
- Ne pas utiliser simultanément des piles de types différents ni des piles neuves avec des piles usagées.
- Ne pas mélanger les piles dans le boîtier en respectant la polarité.
- Ne pas utiliser les piles dans le boîtier si elles sont déformées.
- Les piles déchargées doivent être retirées et éliminées de façon sécuritaire puisqu'elles nuisent au fonctionnement.
- Toujours utiliser des piles neuves ou à pleine charge.
- Veuillez vérifier périodiquement le fil, la fiche, le boîtier et toutes les parties du chargeur. En cas de détérioration, cesser l'utilisation jusqu'à ce que la réparation soit complète.


L'hélicoptère est équipé d'une batterie au lithium-ion rechargeable, veuillez faire attention aux points suivants: 1. La pile au lithium polaire dans le jouet n'est pas remplaçable. 2. La pile ne doit pas être utilisée ni laissée à proximité d'une source de chaleur. 3. Ne pas éliminer la pile dans un feu ou sur une surface dure. 4. Ne pas immerger la pile au lithium-polymère à la lumière directe du soleil, ni la laisser dans un endroit chaud (comme une voiture).

- Ne pas charger la pile au lithium-polymère sans surveillance pendant le processus de charge.
- Ne pas laisser la pile au lithium-polymère sans surveillance pendant le processus de charge.
- Ne pas démonter ni modifier la pile. L'enveloppe extérieure est souple et peut être abîmée.
- Ne pas charger les piles à proximité de matériaux inflammables.
- Toujours laisser la pile se refroidir entre les utilisations et les charges.
- Inspecter la pile avant chaque utilisation pour détecter tout gonflement ou toute déformation. En cas de détérioration, cesser l'utilisation et éliminer de façon sécuritaire.
- Veuillez à récupérer après avoir recouvert les bornes de la pile au lithium-polymère avec du ruban isolant ou glisser dans un sac de plastique individuel.

-9-

#### COMMANDE DE L'HÉLIOPTÈRE:

- Déposez votre hélicoptère sur le sol. Réglez la puissance de l'hélicoptère. Gardez une distance d'au moins deux mètres entre vous et l'appareil en vous assurant que la queue est dirigée vers vous, puis mettez l'émetteur en marche.
- Après avoir allumé l'émetteur, vous devez attendre que les indicateurs, à la queue de l'hélicoptère, soient illuminés et clignotent avant d'être capable de voler l'hélicoptère. Déplacez la manette à accélérateur vers l'avant puis vers l'arrière pour amorcer une communication avec l'hélicoptère. Vous êtes maintenant prêt à débuter votre vol.

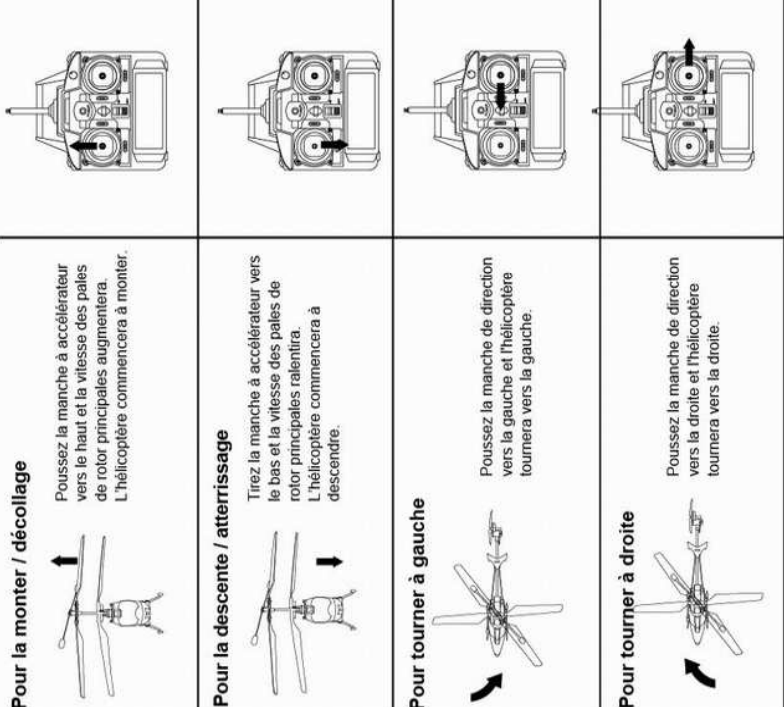

-4-

#### Déclaration de conformité FCC :

Cet appareil est conforme à la section 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : 1. Ce dispositif ne cause pas d'interférences nuisibles. 2. Cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.

REMARQUE: Cet équipement a été testé et est conforme aux limites pour un appareil digital de classe B, conformément à la section 15 des règles de la FCC.

Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre une énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications de radio et de télévision. Cet équipement peut également interférer avec les appareils de radio et de télévision. Si cet équipement interfère avec votre radio ou votre télévision, vous pouvez essayer de corriger l'interférence en prenant les mesures suivantes: 1. Réorienter ou déplacer l'antenne de réception. 2. Augmenter la distance entre l'équipement et le récepteur. 3. Connecter l'appareil à une prise située sur un circuit différent. 4. Consulter le revendeur ou un technicien de radio ou de télévision pour plus d'assistances.

Le fabricant n'est pas responsable pour toutes interférences radio ou télévision causées par des modifications non autorisées apportées à cet appareil. De telles modifications pourraient annuler l'approbation de l'appareil pour opérer cet équipement.

Attention: Tout changement ou modification apporté à cet appareil sans l'approbation expresse de la partie responsable de sa conformité risque d'annuler de droit de l'utilisateur à se servir de cet équipement.

Cet appareil est conforme à la norme RSS-310 d'Industrie Canada. Son fonctionnement assure que cet appareil ne provoque aucune interférence nuisible. Cet émetteur radio 4201-5005. Gravity Sky Hawk a été approuvé par Industrie Canada pour fonctionner avec les types d'antennes énumérées ci-dessous avec le gain maximal admissible et l'impédance d'antenne requise pour chaque type d'antenne indiquée. Les types d'antennes non comprises dans cette liste, ayant un gain supérieur ou maximal qu'indiqué pour ce type d'antenne, sont strictement interdites pour une utilisation avec cet appareil.


Antenne amovible : antenne télescopique 7138; gain d'antenne maximum permis de 3dB et impédance de 100 Ohms.

Cet appareil est conforme avec Industrie Canada en vertu de la licence standard RSS (S). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.


Fréquence : 27 MHz. Intensité du champ: 79 dBuV / m à 3 m. Valeur moyenne : 1000 uV = 80 dBuV/m à 3 m. Valeur de pointe : 100 dBuV/m à 3 m.

-10-

#### Pour avancer

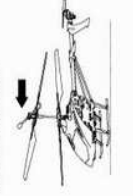

#### Pour reculer

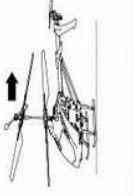

Cet hélicoptère inclut un châssis de remplacement au cas où vous brisiez la pièce installée sur le châssis. Pour remplacer le châssis, vous devez d'abord retirer l'antenne et le châssis, puis installer le nouveau châssis, assurez-vous de revisser l'antenne de la même manière que précédemment.

#### ENVIRONNEMENT D'UTILISATION :

- Utilisez l'hélicoptère lors d'une journée ensoleillée sans vent.
- Ne l'utilisez pas dans des conditions de vent fort (plus de 45 degrés Celsius (113 degrés Fahrenheit) ou moins de 10 degrés Celsius (50 degrés Fahrenheit)). L'utilisation par temps très froid ou chaud influencera les performances et peut endommager l'hélicoptère.
- Ne laissez pas le grand vent: le temps chaud peut causer la surchauffe de l'hélicoptère. Vous pouvez également le perdre ou l'endommager.
- Choisissez un endroit bien dégagé. Assurez-vous qu'il n'y a pas d'obstacles, de plans d'eau, d'animaux ni de personnes dans les alentours.
- N'utilisez pas l'hélicoptère lorsqu'il pleut.

-5-



Le produit comprend un chargeur de batterie 110V.

COMPOSANTS NON INCLUS: NON INCLUS AAX6. Ce produit est conforme à la section 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

IMPORTED BY/IMPORTÉ PAR: HIA INTERNATIONAL LTD. 8800 16th Avenue S.W. CALGARY, AB, CANADA T2Z 3R3

FABRIQUÉ EN CHINE. Ce produit est conforme à la section 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.