

110mm

80mm

80mm

80mm

80mm

PS4 WIRELESS ADAPTER

MARINE

USER GUIDE

Easy operation

ver.EN-CHT-1910

Product Introduction

MARINE enables your PS4 controllers to be used on PS4,PS3,Switch,Android,Mac/iOS and PC. MARINE also supports Turbo and Remap function with 4 additional paddles, which can be completely customized. And it is suggested that a fully charged 18650 lithium battery be installed before playing.

MARINE Adapter
x1

Paddle
x2

Paddle(s)
x2

User Guide
x1

Lock Tool
x1

2

Battery Cover

Controller Connector

Lock

Paddle

Paddle(S)

Battery Latch

18650 Battery

Paddle x2

Paddle(s) x2

3

Micro USB

Knob

LED

Audio Jack

Reset Hole

Mode Switching

Switch mode

Power Off

PC

Android

Mac / iOS

Backup

Firmware Upgrade

Nintendo Switch

Play Station 3

Play Station 4

Power Off

Brook Key

4

Status LED

Knob	LED
P4	Blue
P3	Cyan
N5	Orange
Ad	Green
Pc	White
05	Yellow
Fn	--
C	Purple

More about LED signal :

No light:

MARINE is in sleep mode.

Red Light:

Low battery, you can replace the battery or plug for charging. Charging and playing simultaneously is supported.

Orange Flashing Light:

When Knob is charging in Power Off mode, LED displays orange flashing light. When the power if full, it displays green light.

Note:

1. The Remap Setting in each Mode will be memo- rized. For example: you make a Remap Setting in PS4 mode, then switch to NS Mode. The next time you switch back to PS4 mode, the Remap Setting in PS4 mode still remains.

2. The default currently of Backup Mode has no function, it is reserved for possible future product upgrades.

5

How to install MARINE

1. Use the attached Lock Tool to loosen the cover of the lower edge of MARINE

2. Attach the lock cover to PS4 Controller.

3. Place MARINE carefully into PS4 controller.

6

4. Sit the lock cover to MARINE, don't forget to relock it.

Replace the battery and paddles

1. Press and hold the battery latches on both sides of the MARINE to open the battery cover.

2. Place the fully charged 18650 lithium battery. Be sure to confirm that the battery is in the correct direction.

3. Insert or remove the paddles according to your requirement.

4. Relock the battery cover.

Note:

This product has 2 versions, "Battery version" and "Non Battery version". When you choose to purchase MARINE with "Battery version", it includes a 3350mAh 18650 Lithium Battery, which takes 4 hours to be fully charged and 8 hours continuous use. However, if you purchase the "Non Battery version", please remember to purchase a 18650 Lithium Battery.

7

Firmware Upgrade

BROOK always provides the complete user manual, product information, demonstration film and latest firmware version. Please visit the official website to confirm:

Firmware update

User Guide

Enter Brook's website or scan the QR code for User Guide with multi-languages and the latest information

User Guide

About MARINE

Product information and demonstration film

information

8

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

9

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Label: Brook P/N: ZPMN02C

CCXXxxLPyyZzW

FCC ID 2ADKMN009

10

110mm




110mm



產品說明

使用MARINE多平台轉接器可讓PS4手把於PS4、PS3、Switch、Android、PC與Mac/iOS平台上操作使用，並提供Turbo與Remap設定功能以及四個可自定義的額外按鍵撥片。本產品使用18650鋰電池，建議使用前請先將鋰電池充飽電力後即可開始使用本產品。

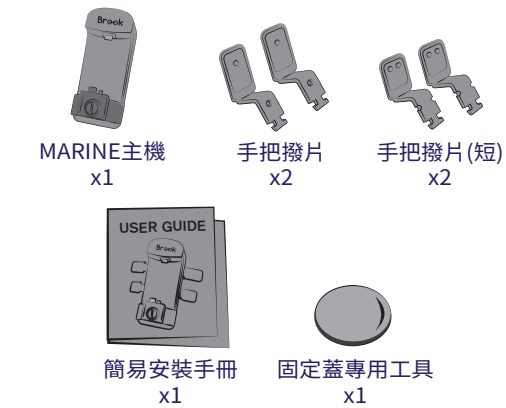

2

4. 將固定蓋與MARINE扣合，重新旋緊固定蓋。




更換電池與撥片

- 按住MARINE兩側的電池蓋卡榫，打開電池蓋。
- 將充電完成的18650鋰電池放入。
※務必確認電池方向是否正确。
- 根據需求將額外按鍵用的手把撥片插入或取出撥片槽。
- 重新扣緊電池蓋。

注意事項

本產品分為「內含電池版」與「無電池版」與。選擇購買「內含電池版」的MARINE時，產品內附3350mAh的18650鋰電池；約需充電四個小時，可支持連續八小時使用。「無電池版」請另行選購適用電池。

7

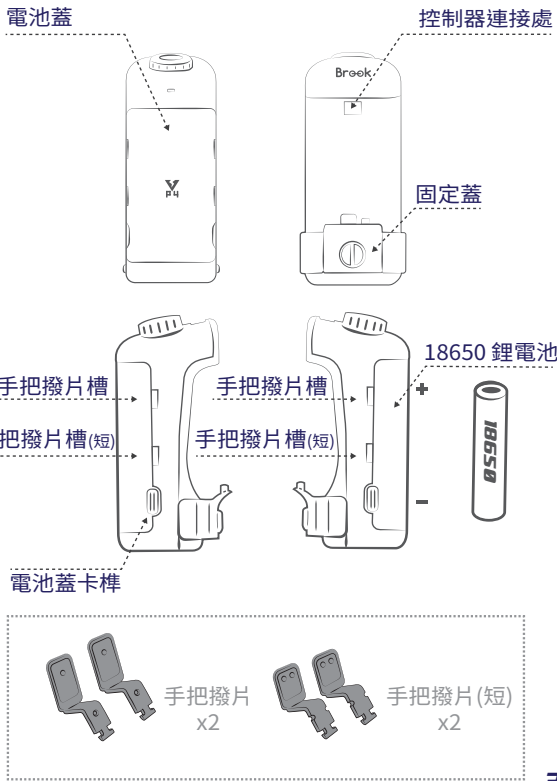

3

韌體更新

我們隨時提供完整使用手冊、產品資訊、操作示範影片與最新版本的支援韌體，請留意官網相關資訊：



韌體更新

使用手冊下載

最新使用手冊及多國語言版本可至下方Brook官方網站下載或者掃描右側QR-code前往。



使用手冊


關於MARINE

產品資訊與操作示範影片：



相關資訊

8

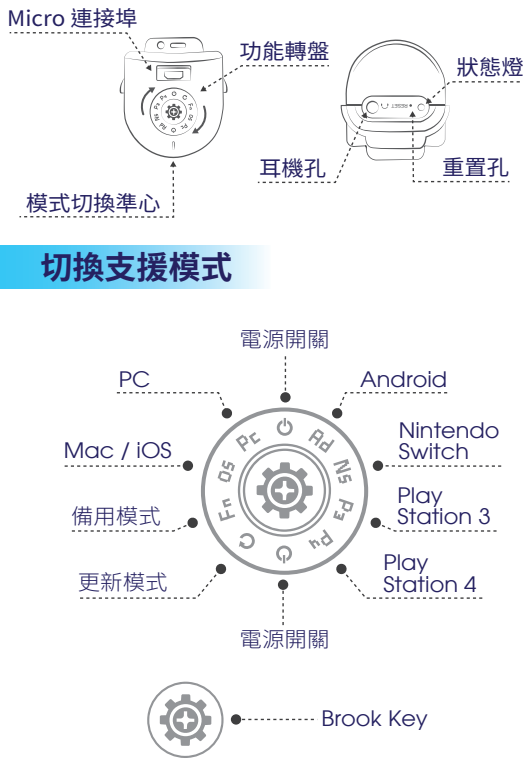

4

NCC

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Label: Brook P/N: ZPMN02C

CCXXxLPyyyZzW

9

狀態燈

補充說明：

無燈號：
MARINE正在休眠模式。

紅燈：
低電量提示，您可更換電池或直接連線以進行充電；MARINE支援在直接連線時邊充電邊玩。

橙色循環燈：
旋鈕設定為電源關閉模式下進行充電，LED會顯示為橙色閃爍燈號，電力充滿後會顯示為綠燈。

注意事項

- 每個平台均保留各自獨立的設定檔。例如:在PS4模式上設定的Remap，切到NS模式遊玩後，再次切回PS4模式時，原先設定在PS4模式上的Remap依然保留。
- 備用模式是為將來產品升級所預留，MARINE出廠時預設為無功能。

5

80mm

80mm

80mm

80mm

80mm

10