




# SITU


## Quick Start Guide

- Full instructions at [www.situscale.com/support](http://www.situscale.com/support)
- Des instructions complètes à [www.situscale.com/support](http://www.situscale.com/support)
- Vollständige Anweisungen unter [www.situscale.com/support](http://www.situscale.com/support)
- Las instrucciones completas en [www.situscale.com/support](http://www.situscale.com/support)

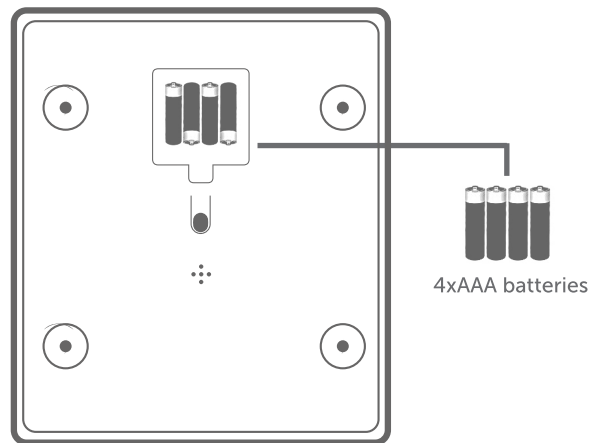


- Insert batteries in SITU
- Insérez les piles dans SITU
- Legen Sie die Batterien in SITU ein
- Inserte las pilas en SITU

1

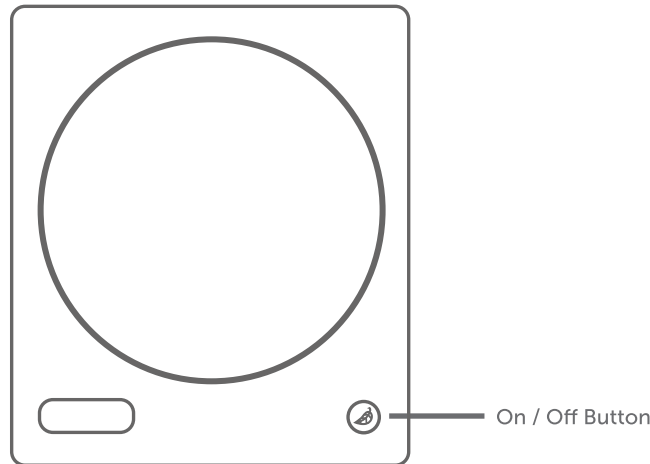


- Press button to turn On. Press and hold button for 4secs to turn Off
- Appuyez sur le bouton pour allumer. Appuyez et maintenez enfoncé le bouton pour 4secs pour éteindre
- Drücken Sie die Taste zum Einschalten. Halten Sie die Taste zum Ausschalten für 4 Sekunden gedrückt
- Pulse el botón para encenderla. Mantenga pulsado el botón para 4secs para apagar

2

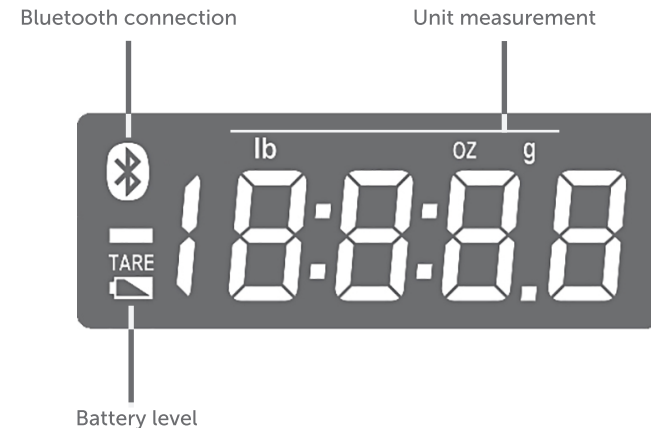

- LCD Screen - Bluetooth connection, battery level and unit measurement
- Écran LCD - Lien bluetooth, unité de mesure et niveau de la batterie
- LCD-Bildschirm - Bluetooth-Verbindung, Maßeinheit, Akkuladestand
- Pantalla LCD - Conexión Bluetooth, Unidad de medición y nivel de la batería

3

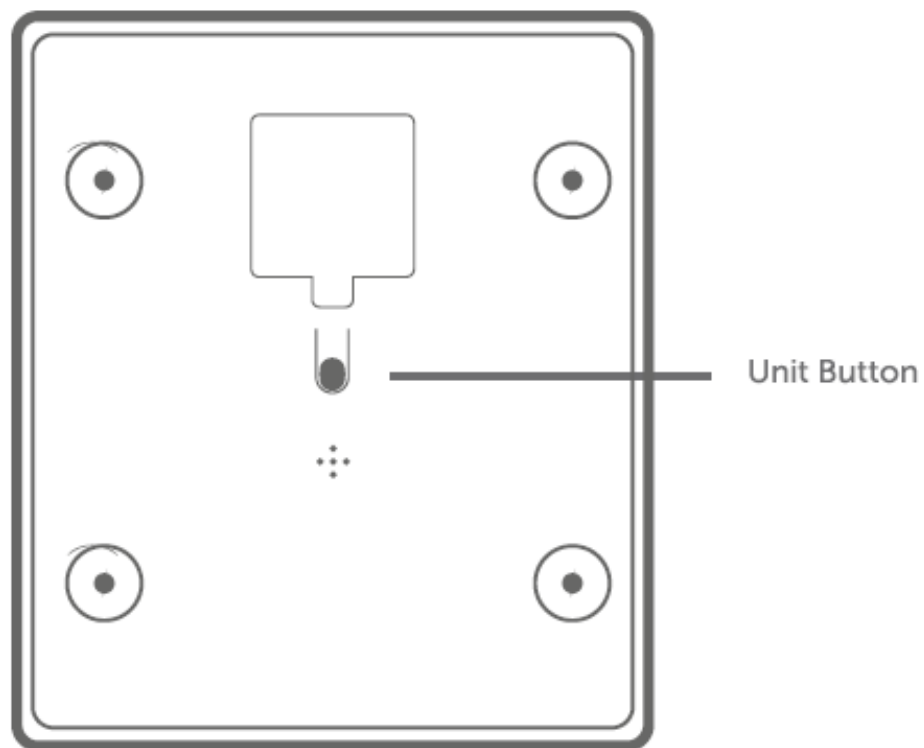

- Press to switch between Imperial and Metric
- Appuyez sur pour basculer entre les unités impériales et métriques
- Drücken Sie, um zwischen imperialen und metrischen Maßeinheiten zu wechseln
- Pulse para cambiar entre Imperial y Métrico




Download the SITU app in the App Store by searching for "SITU scale" or follow this link: [www.situscale.com/download](http://www.situscale.com/download)

Téléchargez l'application SITU dans l'App Store en cherchant "SITU scale" ou suivez ce lien: [www.situscale.com/download](http://www.situscale.com/download)

Laden Sie die SITU App im App Store herunter, indem Sie nach "SITU Scale" suchen oder folgen Sie diesem Link: [www.situscale.com/download](http://www.situscale.com/download)

Descarga la aplicación SITU en el App Store mediante la búsqueda de "SITU scale" o siga este enlace: [www.situscale.com/download](http://www.situscale.com/download)

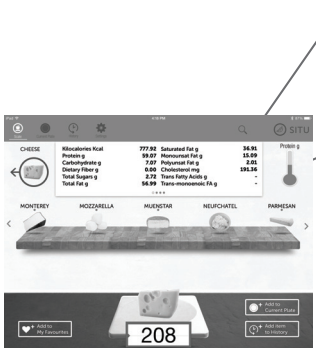

- SITU logo glows green when connected
- SITU logo lueurs vert lorsqu'elle est connecté
- Das SITU-Logo leuchtet grün, wenn verbunden
- SITU logo resplandores verde cuando se conecta

- Open the SITU app. The scale will connect automatically
- Ouvrez l'application SITU. La balance connecter automatiquement
- Öffnen Sie die SITU App. Die Skala wird verbinden Sie automatisch
- Abre la aplicación SITU. La escala va conecte automáticamente

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment