


# THANK YOU / HELLO

Thank you for purchasing the DUBSTEIN:  
the world's first Bluetooth® speaker with  
beverage integration.

Please equip yourself with your favorite  
drink and tunes – and let's get started.

Cheers!


-The Dub Team

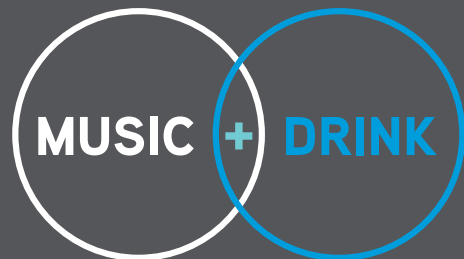


MUSIC

# ARCHITECTURE

1. removable lid
2. removable drink insert
3. speaker base unit
4. micro-usb charging port
5. auxiliary line-in port

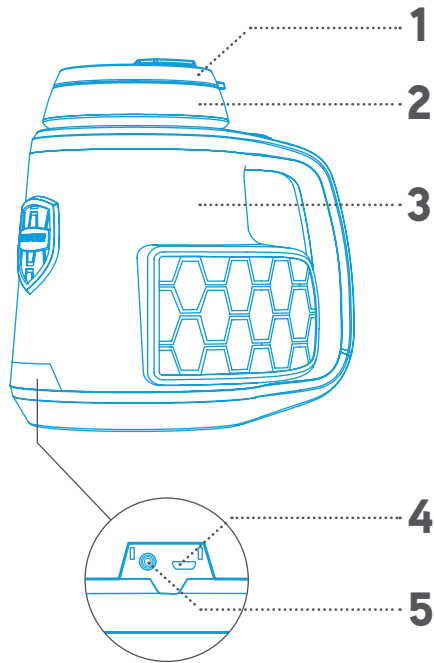


6. power/charging indicator light (LED)
7. power button
8. audio thumb control pad
9. Bluetooth® indicator light (LED)
10. Bluetooth® pairing button
11. microphone

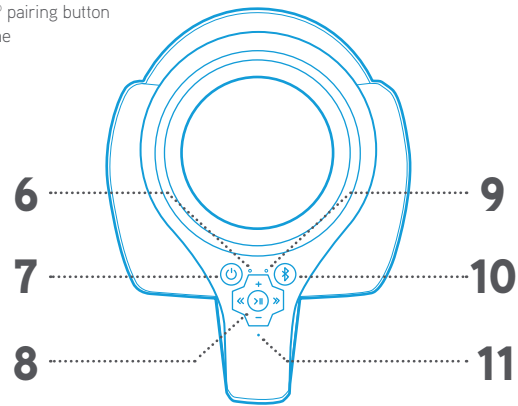

# GETTING STARTED


## CHARGE UP!

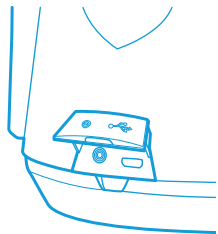

Your DUBSTEIN comes with a micro USB charging cable.


The charging port is located on the front of the DUBSTEIN behind the port cover.

A full charge takes approximately 2 hours.

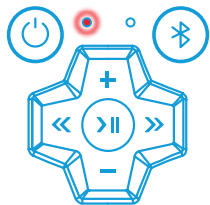

The Red LED charging light will pulse during charging and become solid red when fully charged.

The red LED charging light will blink to indicate low battery level of 20%.

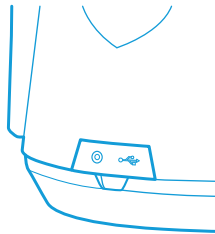


Completely close the port door after charging.

Playback time is up to 8 hours.

(Please note, when the port cover is open, the DUBSTEIN is no longer splash proof)


## POWER UP AND CONNECT!

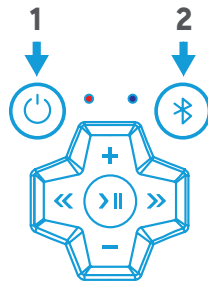


1. Press the Power Button to turn on your DUBSTEIN.

Your DUBSTEIN will automatically power down after 15 minutes of inactivity or use the power button to turn your DUBSTEIN off.

2. Press and hold the Bluetooth Pairing Button until the red & blue LED lights alternate on and off. This is pairing mode.

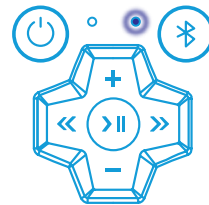

Once in pairing mode, locate and select 'DUBSTEIN' on your Bluetooth device (i.e. smartphone, tablet, or computer). You should now be paired (wirelessly connected) to your DUBSTEIN. The blue LED light will indicate a solid blue color when successfully paired.

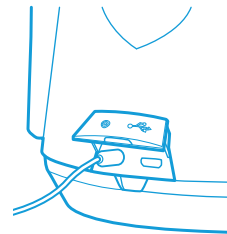


Should you choose to connect directly to your DUBSTEIN, use the 3.5mm audio cable provided. The 3.5mm audio port is located on the front of your DUBSTEIN behind the port cover.

(In this mode, with the port cover open, your DUBSTEIN is no longer splash proof)

## ENJOY YOUR MUSIC!

Use the audio thumb control pad to enjoy your music or take a speakerphone call.

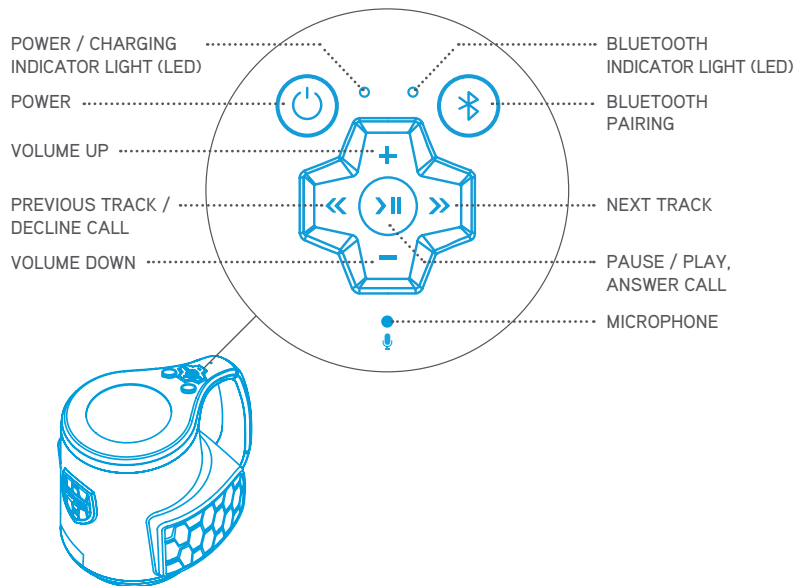

# DRINK

# OVERVIEW


The DUBSTEIN comes with a 395ml, BPA-free drink insert. You can take your drink with you anywhere in the DUBSTEIN speaker base unit for the full music + drink experience, or you can enjoy them separately. Most bottled or canned beverages will also fit into the speaker base unit.

## BOTTLES & CANS

The DUBSTEIN is compatible with most beverage bottles and cans. Simply remove the DUBSTEIN drink insert and install a bottle or can into the speaker base unit until you reach the bottom of the cavity. If your can or bottle does not fit into the speaker base cavity, simply pour its contents into the provided drink insert.

## DRINK INSERT

The DUBSTEIN drink insert has been custom designed to fit into the DUBSTEIN speaker base unit. It is recommended that beverages are poured into the drink insert when it is NOT inside the DUBSTEIN speaker base unit.

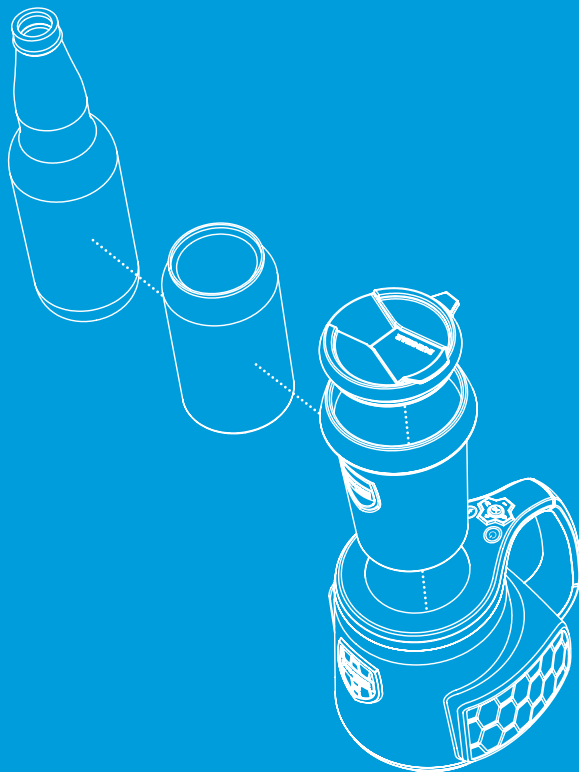


# 2 WAYS TO ENJOY YOUR DRINK!

## OPTION 1: DUBSTEIN DRINK INSERT

1. Remove the DUBSTEIN drink insert from the DUBSTEIN speaker base unit.
2. Remove the drink insert lid.
3. Pour your favorite hot or cold beverage into the drink insert (it is recommended that you first remove the drink insert from the DUBSTEIN speaker base unit to pour your drink).
4. Secure the drink insert lid back into place.
5. Open the drink insert flip top and enjoy!  
Use the drink insert either with, or without the DUBSTEIN speaker base unit.

### Please Note:

- The DUBSTEIN drink insert is BPA-free and holds up to 395ml.
- Hand wash your DUBSTEIN drink insert. Do NOT put your drink insert into the dishwasher. Dishwashers may cause plastic or rubber to warp.
- Caution: Please use caution when using the drink insert with hot beverages – use common sense, just as you would with any hot beverage container.
- Caution: Do NOT put the drink insert or DUBSTEIN speaker base unit into the microwave.
- Caution: Do NOT put your DUBSTEIN speaker base unit in the dishwasher, refrigerator, or freezer.

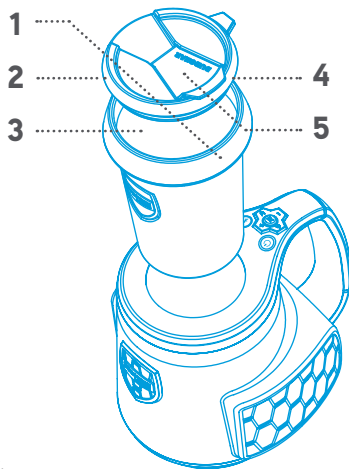


## OPTION 2: CAN OR BOTTLE

1. Remove the DUBSTEIN drink insert from the DUBSTEIN speaker base unit.
2. Insert your favorite beverage bottle or can.
3. Enjoy!

### Please Note:

- The DUBSTEIN can accommodate most can and bottle sizes. If your can or bottle does not fit properly, you can simply pour its contents into the included drink insert.

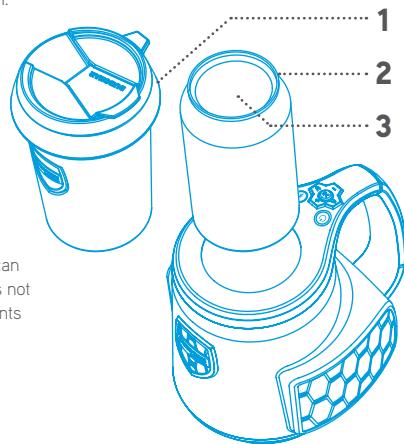



# CARE & SAFETY

Please observe the following guidelines and you and your DUBSTEIN will stay happy for as long as possible.

- To clean DUBSTEIN speaker base unit, wipe with damp cloth.
- Do not put the DUBSTEIN drink insert or speaker base unit into the dishwasher.
- Do not submerge DUBSTEIN speaker base unit.
- Do not put liquids into the DUBSTEIN speaker base unit cavity. Use the drink insert provided.
- Do not place DUBSTEIN speaker base unit into the freezer or refrigerator.
- Do not put the DUBSTEIN drink insert or speaker base unit into the microwave.



NO DISHWASHER



DO NOT MICROWAVE



NO REFRIGERATOR  
OR FREEZER

# CARE & SAFETY

## DUBSTEIN SPEAKER BASE UNIT

- Do not submerge.
  - Do not expose to moisture or humidity.
  - Do not expose to extremely high or low temperatures.
  - Do not drop, disassemble, modify, or attempt to repair.
  - Do not microwave.
  - Do not refrigerate or freeze
  - Do not leave in direct sunlight for extended periods of time.
  - Do not leave near sources of heat or open flame.
  - Only charge your DUBSTEIN in a moisture free location, out of direct sunlight, and at room temperature.
  - Dispose of your DUBSTEIN in accordance with your local waste disposal regulations.
- Keep the USB port cover completely closed during wireless operation and when not charging. The DUBSTEIN has no level of water resistance when the USB port cover is open and/or not fully closed. The DUBSTEIN has no level of water resistance when connected directly with the 3.5mm audio cable.
  - Clean the DUBSTEIN speaker base unit with a damp cloth and only with the front USB port cover completely closed. Do not use detergents and/or cleaning products to clean the DUBSTEIN speaker base unit.
  - Not recommended for children.
  - Observe and comply with RF radio frequency product regulations in locations where you have and/or use your DUBSTEIN.
  - Please consume alcoholic beverages responsibly. DUBGEAR does not encourage excessive alcoholic consumption.

# FEATURES / SPECIFICATIONS

- Bluetooth® 4.0 wireless audio – up to 33 ft range.
- 360 degree, stereo sound
- 2 X 3 watt speaker drivers
- Noise cancelling microphone for speakerphone calls
- BPA-free, 395ml drink insert for hot or cold drinks.
- Ergonomic audio thumb controls.
- Rechargeable lithium-ion battery – up to 8 hours\* playtime.
- 3.5mm audio port
- Splash proof IPX-4 rating

\* Battery life varies depending on factors such as volume level used, ambient temperature conditions, and age of the device/battery.

# ADDITIONAL INFORMATION

## FOR MORE INFORMATION:

Visit: [www.DUBGEAR.com](http://www.DUBGEAR.com)  
Call: 1.844.DUB.GEAR (382-4327)

## FOLLOW US:

Facebook: [www.facebook.com/DUBGEAR.Inc](http://www.facebook.com/DUBGEAR.Inc)  
Twitter: @DUBGEAR  
Instagram: @DUBGEAR

## PRODUCT RETURNS:

DUBGEAR Inc.  
2680 Matheson Blvd E.  
Unit #102  
Mississauga, ON.  
Canada  
L4W 0A5

# WARRANTY


DUBGEAR warrants its products against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. If DUBGEAR has determined that a defect in material or workmanship exists, DUBGEAR, at its discretion, will:

- (1) Repair the product at no charge using new or refurbished components, or
- (2) Exchange the product with an equivalent product that is new or refurbished, or
- (3) Refund the original purchase price.

This warranty does not cover:

- Normal wear and tear
- Dents and scratches
- Damage from water, liquid, or other substance
- Blown speakers
- Loss or theft
- Damage or product failure resulting from abuse, neglect, accident, mistreatment, modification, disassembly, repair, or customization.

To obtain warranty service, please contact DUBGEAR. Proof of purchase is required to verify warranty eligibility. The customer is responsible for any costs associated with shipping product to DUBGEAR for warranty evaluation.

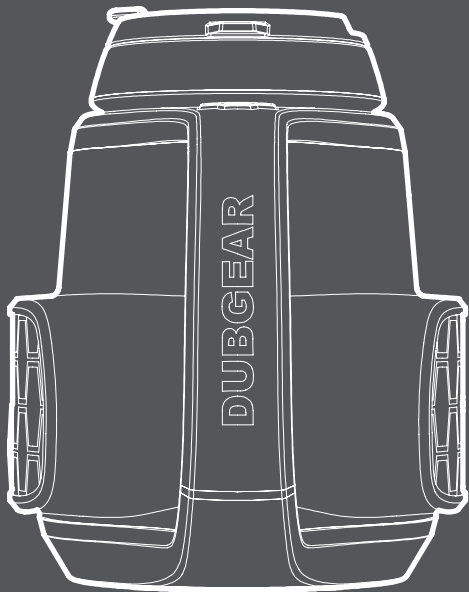

© 2015 DUBGEAR Inc. All rights reserved.  
Designed in Canada.  
Made in China.

## 1.FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.