

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Nokē Inc. herewith declares that this unit complies with the fundamental requirements and relevant regulations set forth by Guideline 2014/53/EU.

The declaration of conformity can be found at [nokē.com/ce](http://nokē.com/ce) or requested by e-mail: [support@nokē.com](mailto:support@nokē.com)



## nokē U-LOCK

### User Guide

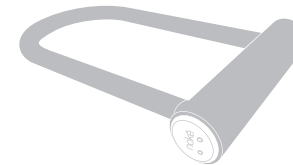

## Getting Started

1. Download Nokē app. [Not the Nokē Pro app](#)




2. Follow instructions in Nokē app to create account and set up Nokē.

## Using

There are four ways to open Nokē U-lock:

### With Phone




**1-Step Unlock:** Press button on Nokē U-lock for automatic unlock when phone is near and Nokē app is running.

**OR**



**2-Step Unlock:** Press button on Nokē U-lock then press "Unlock" in Nokē app.

### Without Phone



**Quick-Click:** Key-in a series of short and long presses on Nokē U-lock button. [Code created in setup](#)

**OR**




**Nokē Fob (optional):** Press button on Nokē Fob AND press button on Nokē U-lock. [Purchase Nokē Fob at \*\*nokē.com\*\*](#)


## Bateria / Batterie / Batteria / Batterie

**ES** Remplacar la bateria AA del U-lock Nokē **DE** Ersetzen der Standard AA Batterie im Nokē U-Lock  
**IT** Sostituzione batteria standard AA di Nokē **FR** Remplacer la pile AA standard dans Nokē U-Lock


1. **ES** Abre el U-lock Nokē y retire el soporte **DE** Öffne Nokē U-Lock und entferne den Bügel **IT** Sbloccare Nokē U-lock e rimuovere grillo **FR** Ouvres Nokē U-Lock et retires le support

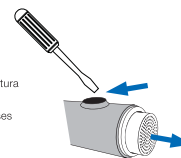


2. **ES** Pulsa la tapa de extremo a través de la abertura del soporte **DE** Drücke die Endkappe durch die Öffnung des Bügels raus **IT** Spingere tappo di chiusura da dentro nell'apertura grillo **FR** Pousses le capuchon a travers l'ouverture de l'anse



3. **ES** Quita la tapa de extremo y la batería vacía **DE** Entferne die Endkappe und die alte Batterie **IT** Rimuovere il tappo di chiusura e la batteria vecchia **FR** Retires le capuchon et l'ancienne batterie



4. **ES** Inserta la batería nueva y pulse la tapa de extremo de nuevo en el U-lock Nokē **DE** Setze die neue Batterie ein und drücke die Endkappe zurück ins Nokē U-Lock **IT** Sostituire la batteria con una nuova AA e rimettere il tappo di chiusura **FR** Places la nouvelle batterie et replaces le capuchon



### Activar alarma / Alarm aktivieren Impostazione allarme / Activer l'alarme

**ES** Apretar el botón sobre el U-lock Noké mientras que aprieta el soporte en la parte de base  
**DE** Drück den Knopf auf dem Noké U-Lock während du den Bügel in das Basisteil steckst.  
Lass den Knopf erst los wenn du einen Ton hörst. **IT** "Ponendo il grillo nel corpo della serratura,  
premere e tenere il tasto sul U-lock. Rilasciare il pulsante quando si sente un tono."  
**FR** Pressez le bouton sur Noké U-Lock pendant que tu que refermes le cadenas et cesses  
que tu entends une tonalité

**ES** Se mueve el candado durante más de tres segundos, la alarma se activa.  
suelta el botón apenas oíes un sonido. **DE** Bewege sich das Schloss für mehr  
als 3 Sekunden, aktiviert sich der Alarm. **IT** L'allarme si attiverà dopo 3 secondi  
di movimento indesiderato della serratura. **FR** Si le cadenas est déplacé  
pendant plus de 3 secondes, l'alarme est activée

### Ayuda inicial / Starthilfe / Aiuto di attivazione / Aide au démarrage

**ES** Estando la batería vacía cuando el U-lock Noké esté cerrado, utiliza la función "ayuda inicial" para poder  
abrir el candado. **DE** Sollte die Batterie bei geschlossenem Noké U-Lock leer sein, kannst du mittels der  
Starthilfefunktion dein Schloss wie folgt öffnen: **IT** Se la batteria si è scaricata mentre Noké U-lock è chiuso,  
è possibile riattivare il vostro U-lock seguendo questi passi: **FR** Si la batterie est vide alors que Noké U-Lock  
est verrouillé, tu peux ouvrir le cadenas grâce à l'aide au démarrage.

1. **ES** Toca con una batería de 9volts los puntos de control al final del U-lock Noké **DE** Berühre mit einer  
9 Volt Batterie die Kontaktpunkte am Ende des Noké U-Lock **IT** Tocca con una batteria 9 volt i punti di  
contatto sull'estremità del Noké U-lock **FR** 1. Touches les points de contact  
à l'extrémité du Noké U-Lock avec une batterie de 9 volts




2. **ES** Apretar el botón sobre el U-lock Noké y abre el candado al mismo tiempo, con una  
de las cuatro posibilidades **DE** Drücke gleichzeitig den Knopf vom Noké U-Lock und öffne  
das Schloss mit einer der 4 Möglichkeiten **IT** Premere il pulsante su U-lock e sblocco  
utilizzando uno dei quattro metodi di sblocco. Apertura in un passo. Apertura in due passi.  
Quick-Click o Portachiavi **FR** Pressez en même temps le bouton sur Noké U-Lock et  
ouvres le cadenas avec l'une des 4 méthodes

### Setting Alarm

Using the alarm will decrease battery life

Enable alarm by pressing and holding button on Noké U-lock while  
placing shackle into lock. Release button  
when you hear 3 beeps.




Alarm will sound after 3 seconds of motion. Unlocking U-lock disables alarm.

### Jump-Starting

If your battery dies while Noké U-lock is locked, you can jump-start your U-lock  
by following these steps:

1. Hold a 9 volt battery to the contact points on the end of the Noké U-lock.



2. While holding battery in place, press button on U-lock and unlock it using one  
of the four unlocking methods: 1-Step Unlock, 2-Step Unlock, Quick-Click, or Noké Fob.

## Replacing Battery (App will indicate when battery level is low)


Noké U-lock uses a standard AA battery. For best cold weather performance, we recommend Energizer Ultimate Lithium.

1. Unlock Noké U-lock and remove shackle.

2. Firmly pry end-cap off using screw driver. May require significant force.

3. Remove end-cap and old battery.

4. Replace battery with new AA battery and insert end cap assembly.

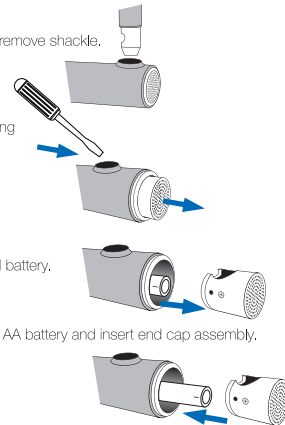

## Empezando / Anfangen / Iniziare / Commencer


1. **ES** Carga el app Noké **DE** Lade die Noké App herunter  
**IT** Télécharge l'app Noké **FR** Télécharge l'app Noké



2. **ES** Siga las instrucciones del app, crea un account y instala Noké **DE** Befolge die Instruktionen in der App, Erstelle einen Account und installiere Noké **IT** Seguire le istruzioni nell'app per creare un conto ed impostare Noké **FR** Suis les instructions de l'app, Saisis un compte et installe Noké


## Utilizando / Benutzung / Utilizzando / En utilisant

- ES** Hay cuatro posibilidades para abrir el Noké U-lock **DE** Es gibt 4 Wege das Noké U-Lock zu öffnen  
**IT** Ci sono quattro modi per aprire Noké U-Lock **FR** Il existe 4 façons d'ouvrir Noké U-Lock




**ES** Apertura en un solo paso: pulsa el botón sobre el U-lock Noké y el candado se habra automáticamente (el app debe estar abierto) **DE** Öffnung in einem Schritt: Drücke den Knopf auf dem Noké U-Lock und Noké öffnet automatisch (App muss im Hintergrund offen sein)

**IT** Apertura in un passo: Premere il pulsante sul Noké U-lock e Noké si sblocca automaticamente. **FR** Ouverture en une étape: Presses le bouton sur Noké U-Lock et il s'ouvre automatiquement (l'app doit être ouverte)



**ES** Apertura en dos pasos: pulsa el botón sobre el U-lock Noké, confirma la apertura con el app **DE** Öffnung in zwei Schritten: Drücke den Knopf auf dem Noké U-Lock, dann bestätige das Öffnen in deiner App **IT** Apertura in due passi: Premere il pulsante sul Noké U-Lock e dopo confermare nella Noké app per sbloccare. **FR** Ouverture en deux étapes: Presses le bouton sur Noké U-Lock et confirmes l'ouverture sur l'app



**ES** Apertura con quick-click: pulsa el botón con largos y cortos clics **DE** Öffnen mit Quick-Click: Drücke den Knopf mit langen und kurzen Klicks **IT** Quick-Click: premere una serie di brevi e lunghi impulsi sul pulsante Noké U-lock per sbloccare. **FR** Ouverture avec le code "Quick-Click": Presses sur le bouton lentement et rapidement



**ES** Apertura con llavero (optional): pulsa el botón sobre el U-lock Noké y pulsa el llavero **DE** Schlüsselanhänger (optional): Drücke den Knopf auf den Noké U-Lock und drücke den Schlüsselanhänger **IT** Portachiavi (opzionale): Premere il pulsante sul Noké U-lock e premere il tasto fob per sbloccare Noké. **FR** Porte-clés (en option): Presses le bouton sur Noké U-Lock et presses sur le porte-clés