

pulse

Pulse Play User Manual

A
PROFESSIONAL
PLAYING
EXPERIENCE

Read this user manual carefully and completely before using Pulse Play

Safety information

1. Do not use Pulse Play in high temperatures (over 131°F / 55°C)
2. Do not use Pulse Play in low temperatures (under 34° / 1°C)
3. Pulse Play will not work in extreme humidity conditions (over 90% humidity)
4. Do not drop the Pulse Play smartwatch
5. Avoid contact with water
6. Only connect to power outlets with the registered Voltage and Current – see below
7. Only use the charging device supplied by Pulse Play

Package includes

- Pulse Play smartwatch
- Charging device
- User manual
- Warranty



Charging and battery

1. The smartwatch's built-in

battery is rechargeable and non-detachable. Do not try to replace the battery.

2. Only use the charging device supplied by Pulse Play. Other devices may cause damage to the smartwatch or electrify the user.
3. You can connect the USB socket of the charging device to any power outlet (computer or electric socket) as long as it complies with the registered Voltage and Current – see below.
4. Before using Pulse Play for the first time, please charge it until it is full – see instructions below.

Warning

Charging DC Voltage: 5V
Charging Current: 500mA

Charging the Pulse Play smartwatch

1. Connect the charging device to Pulse Play via the pins, which are located on the inner side of the smartwatch unit.
2. Connect the USB socket of the charging device to a power outlet (computer or electric socket).
3. When charging, an animation will show on the

LED Screen. The animation will start from the bottom of the LED screen and move up to the top of the screen.

4. When the Pulse Play smartwatch is fully charged, the charging animation will stop, and the screen will feature a full battery.

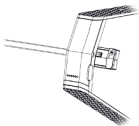


Illustration 1


Pulse Play smartwatch overview.

See Illustration 2

1. LED screen
2. Notifications indicators
3. Main button
4. Side button
5. Your points/the time's hour
6. Opponents points/the time's minute
7. Serial number
8. Charging pins

Turning Pulse Play on

Connect Pulse Play to the charging device to turn Pulse Play on. It will stay on until the battery drains.

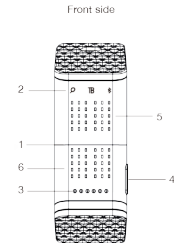

Inner side

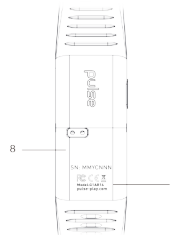


Illustration 2

Resetting the Pulse Play smartwatch

Connect Pulse Play to the charging device to reset it

Pairing Pulse Play to the application on a mobile phone

You can pair the Pulse Play smartwatch in two ways, from Settings > Pairing, or after you set up a match from the application.

1. Make sure your mobile Bluetooth settings are on
2. Press the side button to make the Pulse Play smartwatch discoverable (it will remain discoverable for 30 seconds) During this period, the connection indicator on the smartwatch will blink.
3. Open the Pulse Play application and go to Settings > Pairing or set up a new match.
4. If there is only one Pulse Play smartwatch the app will automatically connect to it. If there are more than one Pulse Play smartwatches in discovery mode, the app which ask you which Pulse Play to pair with.
5. When pairing has been successful, the smartwatch will vibrate and the connection indicator will be

permanently lit (when the screen is on)

Watch mode

1. When you turn on the smartwatch for the first time, the watch will show 00:00.
2. After pairing Pulse Play with the application on a mobile device for the first time, the time will sync to the time on your mobile device.
3. Hours are indicated on the top part of the screen & minutes on the bottom.
4. Every connection of the smartwatch to the mobile application will re-sync the time according to the time on your mobile device.
5. The moment a game has been initiated from the mobile application, the screen will display live match mode
6. To change the display from live match mode (during a match) to watch mode, double tap the top part of the screen. This transition will last 3 seconds before the screen goes back to live match mode.

Live match mode

1. Live match mode will display automatically when a new match has been initiated.

2. In case of a new match, the first screen of the smartwatch will display a ball on the top part of the screen. The player who presses the main button after you have decided who will serve first will be the first to serve. You can also choose who is serving first from the mobile application.
If you want to change the player who serves first, press the side undo button.
3. In case your smartwatch has been disconnected, re-pair it and the screen will display the updated score.
4. To add a point, press the main button. After pressing, the score on your smartwatch will update and blink until it has registered on your opponent's smartwatch. At that time, both smartwatches will vibrate.
5. To undo a point, press the side button. After pressing, the score on your smartwatch will update and blink until it has registered on your opponent's smartwatch. At that time, both smartwatches will vibrate. Undo will take the match one step back regardless of who pressed

6. When a game has ended, the screen will display the set score for tennis, or the game score for squash, ping pong or badminton.
7. If you have reached a tie-break in a tennis match (6-6 in a set), an animation will show on the screen and the tie-breaker indicator will turn on.
8. If you wish to view the game score while the screen is off, tap the top part of the screen once.
9. The player who is serving will have the serve indicator on.
10. Your points are indicated on the top part of screen; the opponent's points are on the bottom part.
11. At the end of the game, press "End Game" on the mobile application and the smartwatch will disconnect from the mobile application and go back to watch mode.

Pulse Play application

Download the Pulse Play application from the Apple App Store or Google Play. Pulse Play is compatible with iOS 8.1 and above and Android 4.3 and above.

Serial number

The serial number is located on the inner side of the Pulse Play unit.

Regulations



Warranty

Pulse Play comes with a limited warranty. Please visit www.pulse-play.com/warranty or read the warranty pamphlet in this box.

Pulse play diameter: 2-3.1" / 5-8 cm
Pulse Play width: 1" / 2.3 cm
Unit height: 0.36" / 0.9 cm
Unit length: 7.1" / 18 cm
Pulse Play weight: 0.9 oz / 26 gr
Charger weight: 0.4 oz / 12 gr
Charging Connector: USB
Material: Polycarbonate, Silicon rubber
Display: LED
Battery: 70mAh
Sync method: BLE (Bluetooth Low Energy)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/ TV technician for help.

Contact us

For any kind of support, please contact us at:
support@pulse-play.com
or visit the FAQ section on our website:
www.pulse-play.com/faq