

WATERPROOF BLUETOOTH SHOWER SPEAKER USER MANUAL

Bluetooth

Thank you for choosing our Waterproof Bluetooth shower speaker.
Sincerely hope you will enjoy your music and phone call freely.

Safety Instructions

Read this manual carefully before you use our waterproof Bluetooth speaker and keep this manual for future reference.

Keep the device away from heat, direct sunlight and sharp edges.

Keep the device away from naked flames.

Do not insert any metal objects into the device in case of short circuit!

To avoid a static charge, please do not use the device in an extremely dry climate.






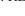
Do not repair the unit by yourself but contact an authorized specialist to help you.



Technical parameters


Bluetooth	2.1+EDR	RF range	10M	Transmission frequency	2.4GHZ
Size	110x125x55mm	Waterproof level	IPX6	Charging Time	Approx 2h
Power	DC5V/100-120mAH	Built-in Lithum battery	3.7V,400mAH	Operating Time	3-4h
Package	Bluetooth speaker 1pcs, User Instructions 1pcs, USB charging cable 1pcs				

Button description

-  On/Off : To switch on or off the device; the blue light indicator flash when it is on power mode.
-  Short press for the previous song, long press for turning down the volume.
-  Short press for the next song, long press for turning up the volume.
-  Phone: To pick up or hang up a phone call.
-  Play/pause the music
-  . RESET button: Press the button heavily to reset the speaker

Notes & Tips:

You can press Phone Button twice quickly to redial the last phone No. Call.

Long press the Phone answering Button  3 seconds, disconnected from the connection between phone and Bluetooth speaker

Pairing 2686 to Mobile phone or other device

Active the Bluetooth speaker pairing mode by button and then there has a voice reminder says: Enter to Bluetooth. the blue LED is flashing ,means the speaker is ready for pairing.

Switch off the mobile phone Bluetooth, the speaker will say: Bluetooth canceled.

Tips:

Please make sure the speaker is in power on mode when you are trying to activate the pairing mode.

Turn on your mobile Phone and activate the Bluetooth function.

Search for Bluetooth devices, 2686 will show up.

Pair your device with 2686, after 2686 is paired with your device, voice reminder says: Bluetooth connected, means the speaker had connected with your device.

Tips:

Once this speaker is paired and connected to your mobile phone, next time when you switch on this speaker, it will connect to your mobile phone automatically as long as the Bluetooth in your mobile phone is on.

How to Charge Integrated Battery

This Bluetooth speaker is powered support by integrated rechargeable Lithium Battery. Charge the battery as follows:

Insert the charging cable into the DC 5V socket on the unit. Connect the USB plug into a PC or AC/DC adapter. The LED indicator turns red and the battery is being charged.

When the battery is fully charged, the red LED indicator goes out.

Troubleshooting:

Symptoms	Causes	Solutions
Can not switch the speaker on	Battery empty	Charge the battery
Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode	Refer to the section of “Pairing 2686 to mobile phone or other device”
during working no sound suddenly	Battery out of charge	Charge the battery

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.