



Onnotes air

USER GUIDE



Cyrano



3 oChips




USB cable

1



2

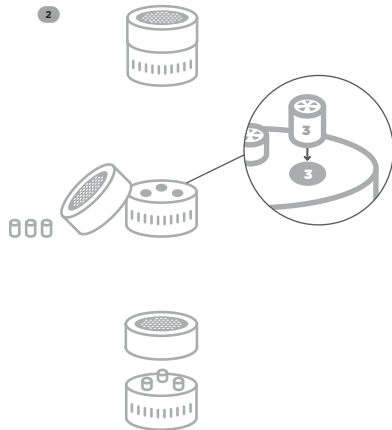

1

Download the oNotes application from iTunes to your iPhone or iPad.

2

Set up your device

- > Unpack the device and oChip scent cartridges from the box.
- > Remove the lid from your device and set it aside.
- > Load the three oChip cartridges into their slots in the base, taking care to match the numbers of the oChips to the numbers on the base. oChip 1 goes in slot 1, oChip 2 goes in slot 2, oChip 3 goes in slot 3.


3

Play a Scent Melody

- > Start the oNotes app from your iPhone or iPad.
- > The app should find your Cyrano device and display a library of scent melodies for you to enjoy.
- > Just tap one you like and enjoy. Follow the instructions on the playback screen to customize the scent melody to your liking or create one of your own.
- > Replace the device lid.
- > Press the Cyrano power button and notice that its status light turns green.

PLAYING THE BUILT-IN SCENT MELODY

*Sometimes you might want to use your Cyrano device without the oNotes app, especially if you're driving or on the go. To play the built in Scent Melody, just **press the Cyrano button** while the device is powered on.*

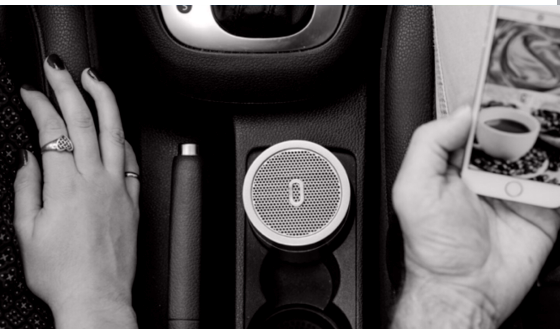

LOADING OCHIPS


The cartridges for your Cyrano are called oChips.

Your oChips arrive in sealed packaging - keep them wrapped until you are ready to use them in your device.

Each oChip is numbered 1, 2 or 3. Remove the oChips from their packaging and insert each chip into its corresponding slot in the base. oChip 1 goes in slot 1. oChip 2 in slot 2. oChip 3 in slot 3.

The oChips are designed to last with regular use for up to a month. When you begin to notice that scent is growing more faint, it is time to change out your oChips. The easiest way to get replacements is to order them online at onotes.com

YOUR CYRANO

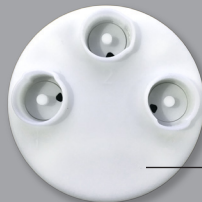

Location for oChips

Removable Lid



Base

Power / Play Button

- Press to Power On
- Press again when powered on to play the built-in scent melody.
- Press and hold for 2 seconds to Power Off

Status light

- Green when powered on and charged
- Flashing when playing a scent
- Yellow to red if the battery is running low
- Quick flash when plugged in, turned on and charging

FCC REGULATORY STATEMENT

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Vapor Communications could void the user's authority to operate the equipment.

To comply with FCC/IC RF exposure limits for general population / uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

GENERAL TIPS

To completely turn off your device, press and hold the button for about 2 seconds. Otherwise, when not in use for 5 minutes, your device will automatically power off.

If you notice residual scent after multiple uses, please wipe off the device lid with a slightly damp cloth (Dampening with rubbing alcohol is most effective).

QUESTIONS?

If you have questions or concerns about how to use this product, please visit onotes.com or send a message to support@vaporcommunications.com

