


140mm

40mm

Remote Control Guide

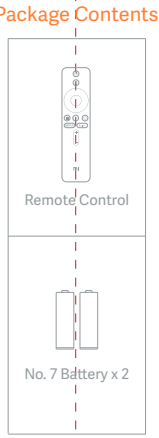

1. Please insert two No. 7 batteries prior to first use

Open the battery cover by applying pressure and sliding it downward, then insert two No. 7 batteries and reattach the battery/cover.


2. Pairing

From device desktop, enter **Settings > Remote Control and Accessories > Add Accessory**, then follow the on-screen instructions. Once paired, a message will appear on the TV screen to indicate a successful connection.

Important Reminders:

*Always keep the firmware of your TV/cable box updated with the latest/most stable version to ensure optimal user experience.

120mm

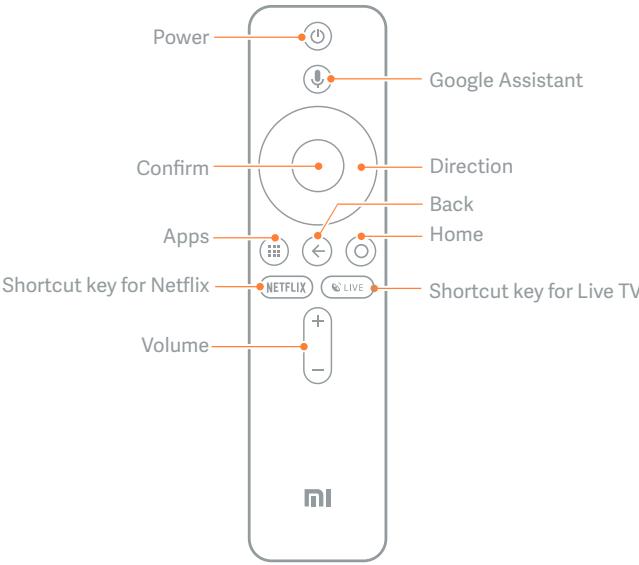

Power: Press once to turn the device on/off, or press and hold to display a list of options such as turning off and restarting the device.

Google Assistant: Press and release the button, then speak voice commands to activate the Google Assistant feature.

Apps: Press to display a full list of apps.

Home: Press to open Android TV homepage.

Back: Return to previous page.

Shortcut key for Netflix: Press to open Netflix homepage.

Shortcut key for Live: Press to open Live TV homepage.

Direction: Move the cursor up, down, left, or right.

Confirm: Confirm the current selection.

145mm



Pantone 1505U



Pantone Cool Grey 10U



版本号		设计于	日期
项目名称	语音体感遥控器说明书印刷图纸		20150901
项目号			
零件名称		检查于	日期
零件号			20150901
材料		批准于	日期
工艺	Pantone色印刷		
尺寸			