
Test Setup photographs

EUT Position: X-axis




EUT Position: Y-axis



EUT Position: Z-axis



Test Setup Photo of Radiated Measurement (ERP)

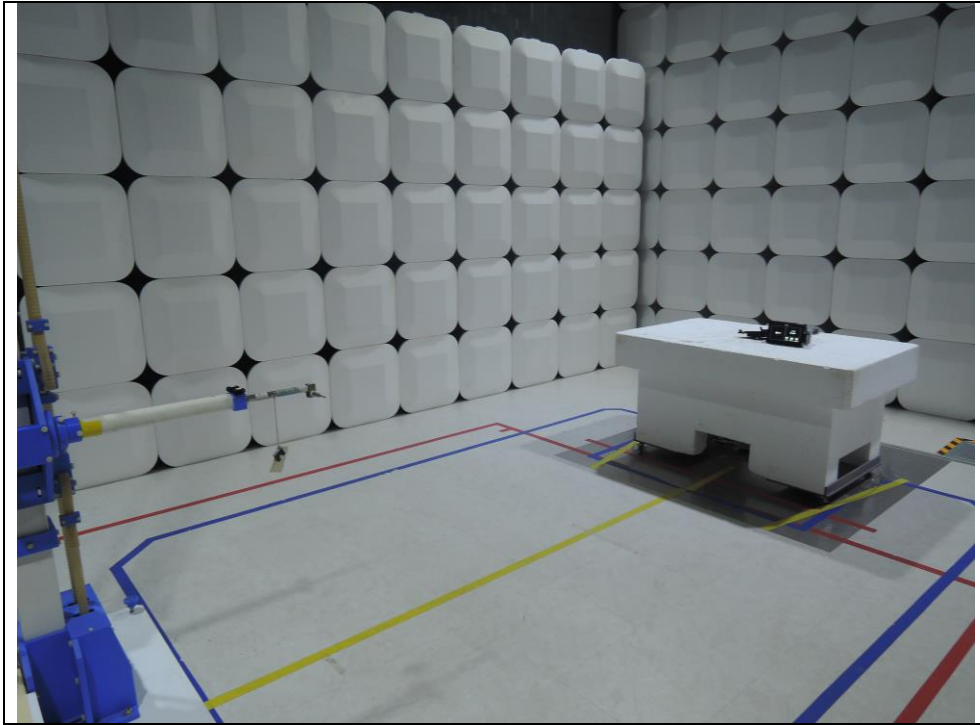

Test Setup Photo of Radiated Measurement (EIRP)

