

Lear Corporation Holding Spain, S.L.U
Global Electrical & Electronics
Carrer Fusters, 54
Polígono Industrial
P.O. BOX 23
43800 VALLS (Tarragona)
SPAIN

Phone 34 977 617924
Fax 34 977 617259

INSTALLATION MANUAL INFORMATION

FCC ID: TTR4410100

This device complies with Part 15 of the FCC Rules [and with RSS-210 of Industry Canada].

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio

exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


WARNING: Changes or modifications made to this equipment not expressly approved by (manufacturer name) may void the FCC authorization to operate this equipment.

Removal and Installation

General Equipment




Ford Diagnostic Equipment

Removal

1.  **CAUTION:** Modules are not interchangeable between vehicles.
NOTE: This step is only necessary when installing a new component.
Download the module information to the diagnostic tool using the Programmable Modules Installation routine.


General Equipment: Ford Diagnostic Equipment

2. Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3.
 1. If equipped.

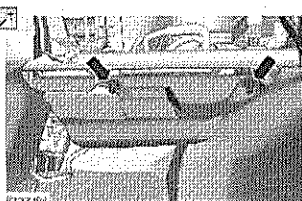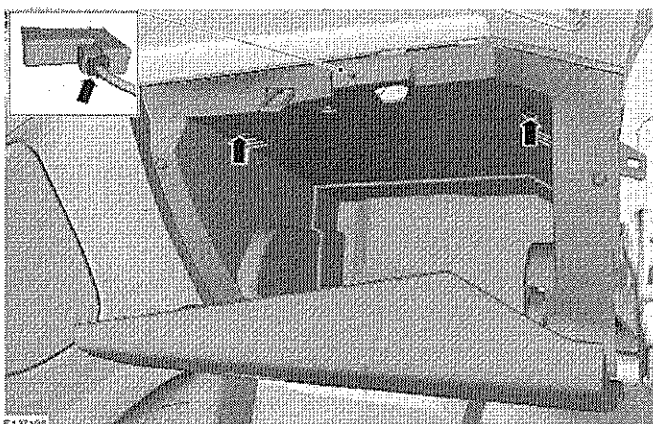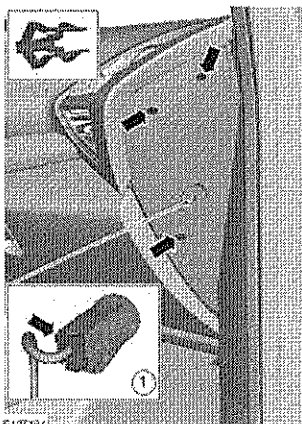

4.

6.

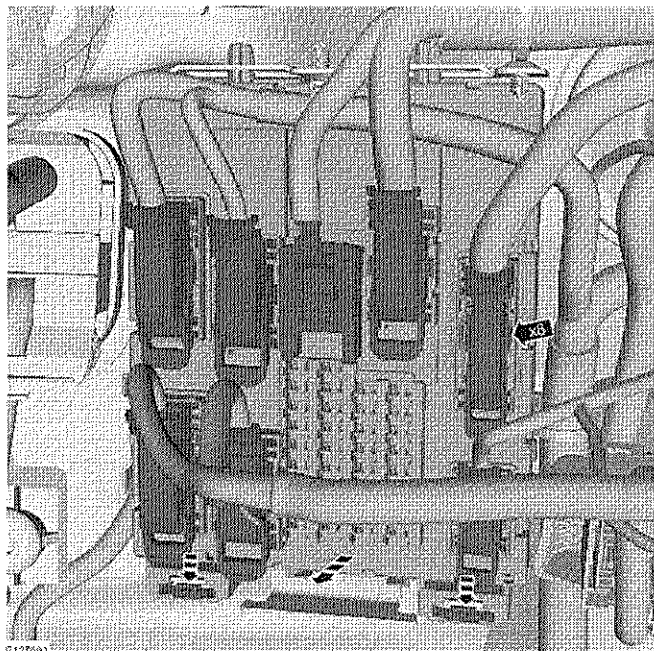**Installation**

1. To install, reverse the removal procedure.
2. NOTE: This step is only necessary when installing a new component.
Upload the module information from the diagnostic tool to the module using the Programmable Modules Installation routine.

General Equipment: Ford Diagnostic Equipment