

---

# 2.4GHz Digital Cordless Phone

## Instruction Manual

### CH-W808



In order to obtain the best conversation quality, it is not proper to consume the power supply with other electric appliance on one power source

Please read this manual before using this device and keep it well for future use

## CONTENTS

MAIN FEATURES.....	2
PACKAGE CONTENTS.....	3
TELEPHONE SKETCH & PARTS DESCRIPTION.....	3-4
INSTALLATION INSTRUCTION.....	5
LCD SCREEN.....	6
SYMBOL DESCRIPTION.....	6
MENU OVERVIEW.....	7
LDS OPERATION INSTRUCTION .....	8
MENU SETTING.....	8
REGISTER AND DEREGISTER.....	8
LOCAL CODE.....	9-10
BACKLIGHT TIME SETTING.....	10
TONE/PULSE SELECTABLE SETTING.....	11
AUTO TALK AND ANY KEY TALK SETTING.....	11
RECALL TIME DURATION SETTING ( 100MS/300MS/600MS ) .....	12
HOST NAME SETTING.....	12
LANGUAGE SETTING.....	13
BRIGHTNESS CONTRAST SETTING.....	13
EDIT THE ID REGISTER NUMBER.....	14
TIME FORMAT SETTING.....	14
TIME SETTING.....	15
DEFAULT VALUE SETTING.....	15
PHONE BOOK SETTING .....	16-18
NON-DISTURBANCE SETTING.....	18-19
ALARM CLOCK SETTING.....	19-20
CALL BARRING.....	20

## CONTENTS

WALKIETALKIE.....	21
BABY CALL SETTING.....	22
ROOM MONITOR.....	23
CALLER ID REVIEW, REDIAL/STORE/DELETE.....	24
OUTGOING CALLS REVIEW / REDIAL / STORE / DELETE.....	25- 26
RINGER TONE SETTING.....	27-28
RINGER TONE VOLUMESETTING.....	28-29
PAGE TONE MELODY SETTING.....	29
KEYPAD TONE SETTING.....	29
DIAL CALL.....	30
ANSWER CALLS.....	30
CALL WAITING.....	30
BASE PAGE HANDSET .....	31
INCOMING CALLSAND OUTGOING CALLSFUNCTIONS.....	31
PRE-DIALING FUNCTION .....	31
RINGER VOLUME SETTING.....	32
REDIAL.....	32
PAUSE.....	32
RECALL MODE.....	32
HOLD-ON STATE OF THE TELEHPONE.....	32
KEYPAD LOCK SETTING.....	32
MAIN TECHNOLOGY PARAMETER.....	33
MAINTENANCE.....	34
TROUBLE SHOOTING.....	35

## MAIN FEATURES

1. Applying to 2.4GHz Digital Cordless Technology ensuring clear, secure conversation, Integrated with security code to avoid illegal line access
2. Baby call function
3. Polyphonic ringer tone (20 groups for option)
4. Multilinking of handsets (Max. link up to 4 handsets)
5. Lighted Keypad
6. Multi-language
7. FSK/DTMF dual system Caller ID and Call Waiting
8. 50 groups Incoming Calls memory and 100 groups Phonebook memory
9. Full duplex Speaker Phone
10. Handset key lock and non-disturb function
11. Calendar, week and clock
12. Ringer volume control (6 levels) and brightness adjustment (8 levels)
13. Low battery indication
14. Tone/ Pulse selectable
15. Any key talk features
16. Alarm Clock (2 group for option)
17. Speed dial function (10 keypad available)
18. Multi-linking of handsets (up to 4 handsets)

## PACKAGE CONTENTS

Base 1 piece



Handset 1 piece



2.4V 800mAh Ni-MH  
rechargeable battery 1  
piece



Power adaptor DC  
9V/400mA 1 piece



Line Cord 1 piece



Instruction Manual




## TELEPHONE SKETCH & PARTS DESCRIPTION

(Base unit)



Page button

# TELEPHONE SKETCH & PARTS DESCRIPTION

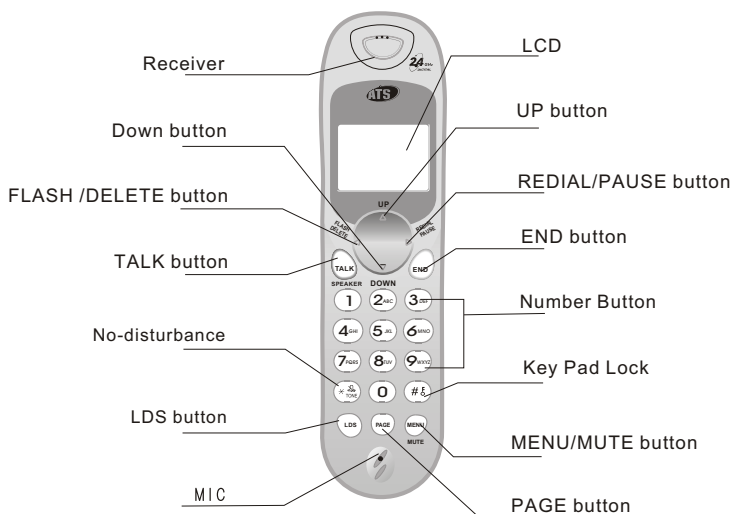


※ Numeric Keypad description

Key	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>	5 <sup>th</sup>
1	1	-	/	1	
2	A	B	C	2	
3	D	E	F	3	
4	G	H	I	4	
5	J	K	L	5	
6	M	N	O	6	
7	P	Q	R	S	7
8	T	U	V	8	
9	W	X	Y	Z	9
0	Space	0	*	#	0


# INSTALLATION INSTRUCTION

## Base Unit

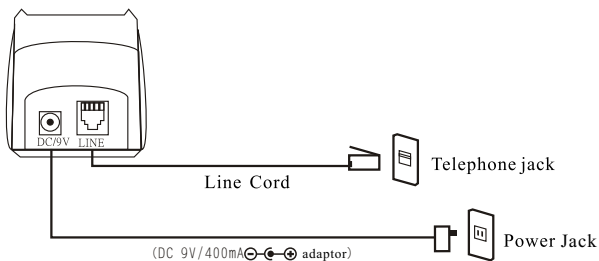

- ※ Over 3 extended handsets are not recommended to be installed in house, otherwise, it will distort the conversation quality


## Handset

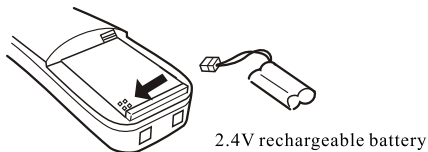







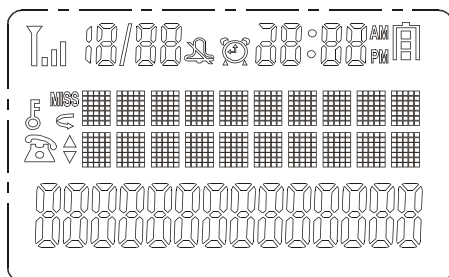

- ※ Recharge the batteries up to 10 hours at the initial use of this device.

# LCD SCREEN AND SYMBOL DESCRIPTION

## LCD SCREEN



## SYMBOL DESCRIPTION

-  ANTENNA
-  BATTERIES
-  ALARM CLOCK
-  NON-DISTURBANCE
-  KEYPAD LOCK
-  REPEAT
-  UP/DOWN
-  MISS NEW CALLER ID
-  VOLUME



# MENU OVERVIEW

## MENU


- PHONE BOOK
  - EMPTY
    - NEW ENTRY---INPUT NAME---INPUT NUMBER
    - EDIT RECORD---EDIT NAME---EDIT NUMBER
    - DELETE RECORD
    - DELETE ALL
    - SELECT GROUP
      - DEFAULT GROUP
      - VIP GROUP
      - FAMILY GROUP
    - SPEED DIAL
    - MEMORY STATUS
- SETUP
  - LOCAL CODE
  - BACKLIGHT TIME---SECOND (5--20S')
  - DIAL MODE---SELECT (TONE/PULSE)
  - AUTO TALK---SELECT (ON/OFF)
  - RECALL MODE---SELECT (LONG / EXTRA LONG / SHORT)
  - UNIT NAME---INPUT NAME
  - LANGUAGE---ENGLISH / FRANCAIS / DEUTSCH / (OPTION)
  - CONTRAST---LEVEL(1--8)
  - REGISTER
    - NEW REGISTER---BASE UNIT(1--2)
    - DEREGISTER---BASE UNIT(1--2)
    - SELECT BASE(NOT APPLICABLE)
  - CHANGE PIN CODE---INPUT PIN
  - TIME FORMAT---SELECT(12HOUR/24HOUR)
  - SET TIME
  - SET DEFAULT
- PROFILE
  - HS RINGER MUSIC
    - DEFAULT GROUP---MELODY(1--20--OFF)
    - VIP GROUP(1--20--OFF)
    - FAMILY GROUP(1--20--OFF)
    - FR/END GROUP(1--20--OFF)
    - COLLEAGUE GROUP(1--20--OFF)
  - HS RINGER VOLUME
  - PAGE TONE MELODY(1--5)
  - KEY TONE SELECT(MUSIC/OFF/TONE)
- FUNCTION
  - NONDISTURB---HOUR(1--16HOURS/OFF)
  - ALARM1---SELECT(OFF/ON)
  - ALARM2---SELECT(OFF/ON)
  - CALL BARRING---INPUT PIN
  - WALKIE TALKIE---FUNCTION ON(NOT APPLICABLE)
  - BABY CALL
    - SELECT ON/OFF
    - SET NUMBER
  - ROOM MONITOR(NOT APPLICABLE)
- CALL LOG
  - RECEIVED CALL
  - DIALED CALL

# FUNCTION SETTING INSTRUCTION



## LDS OPERATION INSTRUCTION

At standby mode or working state, press LDS button to enter directly ATS network service, dial the expected number directly


## MENU SETTING


1. At standby mode (handset), press  to enter menu setting, till displaying

Displaying : 



2. Press  or  to select the expected setting

3. Press  to confirm and enter sub-menu

4. Press  to return or edit number or name

5. Press  to exit MENU setting


## REGISTER AND DEREGISTER

Notice: the register is completed on this telephone unit when ex-factory, the symbol  will display on left side of top to indicate the register completed, it is not required to make the register repeatedly, user can ignore this operation and start to operate directly, in case of the handset can not connect with the base unit and the symbol  don't display, the register must be done

### 1. Register

> At standby mode (base unit), press  continuously up to 12S till IN USE LED flashing

> Step to handset operation


> At standby mode (handset), press  till displaying

Displaying : 

> Press  or  to select "SET UP"

Displaying : 

> Press  to confirm

Displaying : 

> Press  or  to select REGISTER

Displaying : 


> Press  to confirm

Displaying : 


# FUNCTION SETTING INSTRUCTION

>.Press  to confirm

Displaying : 


>.Press  to confirm and INPUT PIN displaying on LCD, the "—" icon flash

Displaying : 

>.Input the defaulted ID number 1234 and press  till LCD display REGISTER to enter register mode (press FL/DEL for delete if any error)

Displaying : 

>.It indicates the Register succeed once crisp tone "DI" heard and LCD displaying "HANDSET 1", otherwise, once arised the illegible tone "DU", unfortunately it indicate the register failed, the repeated register operation must be done °

Displaying : 

## 2.Deregister

Notice: the deregister is not recommended to operate unless the hand set failed to register once the deregister had been done, the handset can not connect with base unit, the register is required to be done when in use

>.At standby mode(handset), press

Displaying : 

>.Press  or  to select "SET UP"

Displaying : 

>.Press  to confirm

Displaying : 

>.Press  or  to select Deregister"


Displaying : 

>.Press  to confirm , LCD display "BASEUNIT 1"

Displaying : 

>.Press  to confirm, LCD display "CONFIRM"



>.Press  to confirm the deregister and the crisp tone "DI" heard , it indicates the deregister succeed

 LOCAL CODE

## FUNCTION SETTING INSTRUCTION

1. At standby mode (handset), press  to enter Menu Setting


Displaying :  PHONE BOOK


2. Press  or  to select SETUP"


Displaying : SETUP

3. Press  to enter LOCAL CODE setting

Displaying :  LOCAL CODE

4. Press  to confirm and input the local code (max. 6 digits)  
i.e.: 0818 (press FL/DEL button to edit if any error)

Displaying :  LOCAL CODE  
0818

5. Press  till crisp tone "BI" heard, it indicate the setting succeed


Notice: in case of the local code is not set on the telephone, the extra digits except its original number is its local code, the LOCAL CODE is vary with the different area, please refer to :

e.g.: 1: 073487134 is for a Caller ID number with its local number of 7 digits, the extra digits 07 is for its local code.

2: pretending your house number is 28802711, set the local code is "2", when received the call with telephone number 28802712 from local area, the displayed number will be 28802712 in case of the local code set on the telephone, in case of the local code don't set on the telephone, the displayed number will be 228802712 (local code "2" added) it will cause the call back directly failed ,

## BACKLIGHT TIME SETTING

Notice: setting the backlight time duration is for saving the power consumption

1. At standby mode (handset), press  to enter menu setting




Displaying :  PHONE BOOK

2. Press  or  to select "SET UP"



Displaying :  SETUP


3. Press  to confirm and press  or  to select "BACKLIGHT TIME"

Displaying :  BACKLIGHT TIME

4. Press  to enter off "BACKLIGHT TIME" duration (ranged 5~20S') press  or  to select the expected "backlight off duration time"
















Displaying :  SECOND  
20

5. Press  to confirm till a crisp tone "DI" heard, it indicates the setting succeed, press  to exit and transfer to standby mode

Displaying :  BACKLIGHT TIME

















# FUNCTION SETTING INSTRUCTION

## TONE/PULSE SELECTABLE SETTING

- At standby mode, press  to enter menu setting  
Displaying:  PHONE BOOK
- Press  or  to select "SET UP"  
Displaying:  SETUP
- Press  till LCD displays "LOCAL CODE"  
Displaying:  LOCAL CODE
- Press  or  to select "DIAL MODE"  
Displaying:  DIAL MODE
- Press  till LCD displays "SELECT TONE"  
Displaying:  SELECT TONE
- Press  to switch TONE / PULSE mode
- Press  to confirm till a crisp tone "BI" heard, it indicates the setting succeed
- Press  to exit to standby mode, or press FL/DEL button to last page


## AUTO TALK AND ANY KEY TALK SETTING

Notice: Based on this function is in ON state, in case of the handset is in recharging state, pick up the handset to answer the call directly when calls coming; in case of the handset is not in recharging state, press any key to answer the calls directly when calls coming

- At standby mode (handset), press  to enter menu setting  
Displaying:  PHONE BOOK
- Press  or  to select "SET UP"  
Displaying:  SETUP
- Press  to enter sub-menu  
Displaying:  LOCAL CODE
- Press  or  to select AUTO TALK  
Displaying:  AUTO TALK
- Press  to confirm  
Displaying:  SELETE OFF
- Press  or  to select ON / OFF, press  to confirm, after a crisp tone "BI" heard, it indicates the setting succeed  
Displaying:  AUTO TALK

## FUNCTION SETTING INSTRUCTION




### RECALL TIME DURATION SETTING ( 100ms/300ms/600ms )

1. At standby mode (handset), press  to enter menu setting




Displaying : 

2. Press  or  to select "SET UP"

Displaying : 

3. Press  to confirm and press  or  to select "RECALL MODE"

Displaying : 


4. Press  to confirm, press  or  to select expected setting "SHORT" (100ms)/LONG(300ms)/EXTRA LONG(600ms) for option

5. Press  to confirm, press  to exit and return to standby mode

### HOST NAME SETTING

Notice: in case of this function set, the name or message you set will display on LCD screen, e.g.: The name JACK Set, LCD screen will display




Displaying : 

1. At standby mode (handset), press  to enter menu setting

Displaying : 

2. Press  or  to select "SETUP"



Displaying : 

3. Press  to confirm and press  or  to select "UNIT NAME"

Displaying : 

















4. Press  to enter "INPUT NAME" mode, input the expected name or message

Displaying : 


















5. Press  to confirm and a crisp tone "BI" heard, it indicates the setting succeed, press  to exit and return to standby mode

# FUNCTION SETTING INSTRUCTION

## LANGUAGE SETTING

1. At standby mode, press  to enter menu setting  
Displaying : 
2. Press  or  to select "SET UP"  
Displaying : 
3. Press  to confirm and displays "LOCAL CODE"  
Displaying : 
4. Press  or  select "LANGUAGE"  
Displaying : 
5. Press  to confirm and LCD displays "ENGLISH"  
Displaying : 
6. Press  or  to select the expected language (ENGLISH, NEDERLANDS, FRANCAIS, ITALIAN, PORTUGUESE, GERMAN, DUTCH, SPANISH for option)
7. Press  to confirm, after a crisp tone "BI" heard, it indicates the setting succeed, press  button to exit
















## BRIGHTNESS CONTRAST SETTING

1. At standby mode (handset), press  to enter menu setting  
Displaying : 
2. Press  or  to select "SET UP"  
Displaying : 
3. Press  to select "LOCAL CODE"  
Displaying : 
4. Press  or  to select "CONTRAST"  
Displaying : 
5. Press  to confirm and LCD screen displays "LEVEL 5"  
Displaying : 
6. Press  or  to select expected level (1~8 levels for option)  
Displaying : 
7. Press  to confirm, after a crisp tone "BI" heard, it indicates the setting succeed
8. Press  to exit and return to standby mode














## FUNCTION SETTING INSTRUCTION

### EDIT THE ID REGISTER NUMBER

Notice: this function is for editing the register ID number which indicated on page 8, the original default ID number is 1234, in case of the ID number is required to be modified, follow up this instruction

- |   |  |
|---|--|
| 1. At standby mode (handset), press  to enter menu setting   | Displaying :  |
| 2. Press  or  to select "SET UP"  | Displaying :  |
| 3. Press  to confirm, LCD screen displays  | Displaying :  |
| 4. Press  or  to select "CHANGE PIN CODE"                                       | Displaying :  |
| 5. Press  to confirm and LCD displays "INPUT PIN", the icon "—" is flashing  | Displaying :  |
| 6. Input the original default ID number 1234 and press  to confirm   | Displaying :  |
| 7. Input the expected ID number, press FL/DEL to edit if any error  |  |
| 8. Press  to confirm till a crisp tone "DI" heard, it indicates the edit succeed, press FL/DEL to return last menu, press END to exit and return to standby mode |  |




















### TIME FORMAT SETTING

- |   |  |
|---|--|
| 1. At standby mode (handset), press  to enter menu setting   | Displaying :    |
| 2. Press  or  to select "SET UP"  | Displaying :  |
| 3. Press  to confirm and select "TIME FORMAT"  | Displaying :  |
| 4. Press  to confirm, and press  or  to select time format (12 hours and 24 hours format for option) | Displaying :  |
| 5. Press  to confirm after a crisp tone "BI" heard, it indicates the setting succeed, press  to exit and return to standby mode   |  |















## FUNCTION SETTING INSTRUCTION

### TIME SETTING

1. At standby mode (handset), press  to enter menu setting. Displaying: 
2. Press  or  to select "SET UP". Displaying: 
3. Press  till LCD displays. Displaying: 
4. Press  or  to select "SET TIME". Displaying: 
5. Press  and LCD screen displays "2005" and YEAR is flashing. Displaying: 
6. Press  or  to edit, press  to confirm, and remove the icon to select the YEAR, MONTH, DATE, HOUR, MINUTE, press  or  to adjust correspondingly, press  to confirm after a crisp tone "BI" heard, it indicates the edit succeed, press  to exit and return to standby mode.


### DEFAULT VALUE SETTING

Notice: it is not recommended to operate this function because all the default setting will return to the original default setting in case of this function executed


1. At standby mode (handset), press  to enter menu setting. Displaying: 
2. Press  to select "SET UP". Displaying: 
3. Press  to select "LOCAL CODE". Displaying: 
4. Press  or  to select "SET DEFAULT". Displaying: 
5. Press  to enter and LCD screen displays "CONFIRM". Displaying: 
6. Press  to confirm till a crisp tone "BI" heard, it indicates the setting succeed, press END to exit.

# FUNCTION SETTING INSTRUCTION

## PHONE BOOK SETTING

At standby mode (handset), press  to enter menu setting

Displaying:  PHONE BOOK

Press  to enter phone book setting

Displaying:  EMPTY



### 1. NEW ENTRY

>Press  to select "NEW ENTRY"

Displaying:  NEW ENTRY




>Press  to select INPUT NAME, input the expected name correspondingly

Displaying:  INPUT NAME




>Press  to confirm and enter telephone number setting, input expected telephone number, press  to confirm, after a crisp tone "BI" heard, it indicates the setting succeed

>Press END to exit the setting, press FL/DEL to return to upper menu °

### 2. EDIT RECORD


>Press  twice to enter phone book, press  or  to select the number expected for edit

Displaying:  JACK 8888888

>Press  to confirm, press  or  to select "EDIT RECORD"

Displaying:  EDIT RECORD

>Press  to confirm and enter NAME EDIT mode, input name accordingly, press FL/DEL to remove if any error

>Press  to edit the telephone number after name edited, input the telephone number accordingly, press FL/DEL to remove if any error

>Press  to confirm after a crisp tone "BI" heard, it indicates the setting succeed, press END to exit and return to standby mode, press FL/DEL to return to upper menu

### 3. Delete the stored record



>Press  twice to enter phone book setting

Displaying:  JACK 8888888


## FUNCTION SETTING INSTRUCTION

>Press  to enter "NEW ENTRY"


Displaying :  NEW ENTRY

>Press  or  to select "DELETE RECORD"


Displaying :  DELETE RECORD

>Press  to confirm to delete the stored record, press END to exit, press FL/DEL to return to upper menu



### 4.Delete all record

>Press  twice to enter phone book mode


Displaying :  JACK 8888888

>Press  to enter "NEW ENTRY"


Displaying :  NEW ENTRY

>Press  or  to select "DELETE ALL"


Displaying :  DELETE ALL


>Press  to confirm to delete all stored record, press END to exit, press FL/DEL to return to upper menu

### 5.Select the Phone Groups ( Family, Friend, VIP, Default) available)

>Press  twice to enter phone book mode





Displaying :  JACK 8888888

>Press  to enter "NEW ENTRY"

Displaying :  NEW ENTRY

>Press  or  to select "SELECT GROUP"

Displaying :  SELECT GROUP


>Press  to enter the "DEFAULT GROUP", press  or  to select the other group VI PGROUP/FAMILY GROUP/FRIEND GROUP, press  to confirm

Displaying :  DEFAULT GROUP



Notice: in case of the distinguishing ringer tone established for VIPGROUP, FAMILY GROUP, FRIEND GROUP, DEFAULT GROUP separately, the corresponding ringer tone will arise in case of the calls coming


## FUNCTION SETTING INSTRUCTION


### 6. SPEED DIAL

>Press  twice to enter phone book mode

Displaying :  JACK  
8888888

>Press  or  to select the stored record

>Press  to confirm the select


Displaying :  NEW ENTRY


>Press  or  to select "SPEED DIAL"



Displaying :  SPEED DIAL

>Press  to enter "HOT KEY 0 TO 9", icon "-" is flashing

Displaying :  HOT KEY 0  
TO 9

>Input the single digit ranged 0~9 to confirm the assigned keypad position (if there is a digit exist before the icon "-", it indicate the keypad assigned for speed dial already, the assigned keypad position can delete by press  button, or select the other keypad for store


>Press  to confirm, after a crisp tone "BI" heard, it indicate the keypad assigning for speed dial succeed

>In case of the stored number required to dial out, at standby mode, press and hold keypad 0~9 up to 2S' to display the stored number, press  or  to dial out directly


### 7. Review phone memory

>Press  three times, LCD screen display "NEW ENTRY"

Displaying :  NEW ENTRY

>Press  to select "MEMORY/STATUS"


Displaying :  MEMORY  
STATUS

>Press  to confirm and LCD displays "000/100", it indicate no memory stored (max. Store capacity is 100 groups)

Displaying :  000 / 100

>Press END to return standby mode or press FL/DEL to return to upper menu after reviewed,

## NON-DISTURBANCE SETTING

1. At standby mode (handset), press  to entry menu setting

Displaying :  PHONE BOOK

2. Press  or  to select "FUNCTION"

Displaying :  FUNCTION