



INTERNAL LABEL
IS MOUNTED ON
THE FRONT LEFT HAND
INTERNAL SLOPPING
CHASSIS

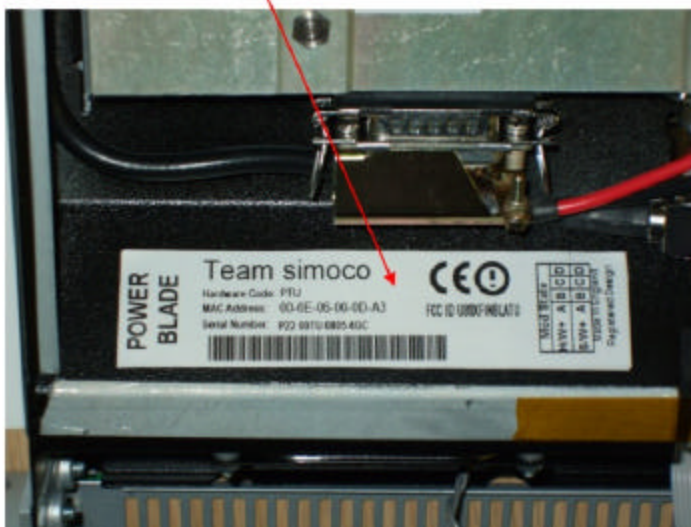

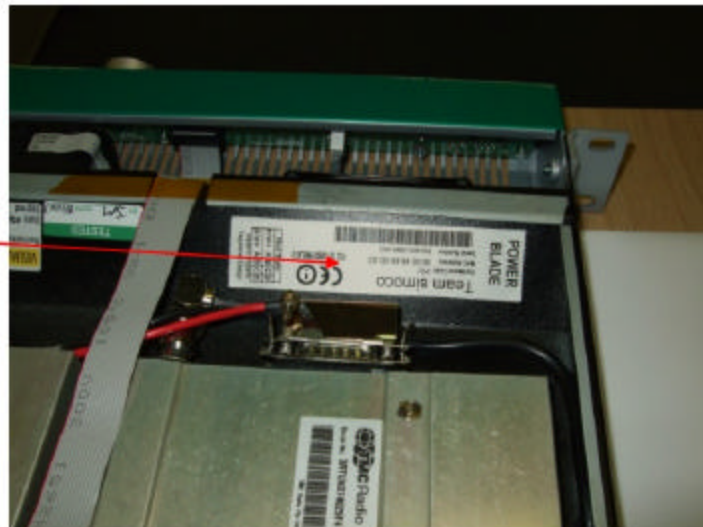

EXTERNAL LABEL
FIXED TO THE UNDERSIDE
FRONT RIGHT OF BASE STATION

