

Content

| | |
|---|----|
| Preface | 1 |
| 1. function | 1 |
| 2. characters | 1 |
| chapter 1 installation and setting | 2 |
| 1. Physical characteristics | 2 |
| 2. System requirement | 2 |
| 3. tips for the first users | 2 |
| 4. outlook | 3 |
| 5. key pads introduction | 4 |
| 6. the installation of software and hardware | 4 |
| 7. preparing for use | 5 |
| menu function | 6 |
| settings | 9 |
| chapter 2 Cordless SKYPE operation | 9 |
| 1. placing skype calls | 9 |
| 2. SET SPEED-DIAL | 9 |
| 3. making skypeout calls | 10 |
| 4. answering calls | 10 |
| 5. hold on the PSTN calls to answer the skype calls | 10 |
| 6. hold on the skype calls to answer the PSTN calls | 10 |
| 7. skypein/skypeout conference | 11 |
| 8. the calls of skypein/skypeout from one handset to another | 11 |
| 9. volume control during skype conversation | 11 |
| 10. skype caller ID..... | 12 |
| 11. skype caller ID call back | 12 |
| chapter3 Normal phone operation | 13 |
| 1. place a call via handset unit | 13 |
| 2. To answer a call via handset | 13 |
| 3. Putting a call on hold via handset | 13 |
| 4. To make a call from redial list | 13 |
| 5. Control the receiver volume | 13 |

| | |
|--|-----------|
| 6. Handset-to-Handset Inter com | 14 |
| 7. Base page to Handset | 14 |
| 8. Caller ID call back | 14 |
| 9. To save Caller ID into handset Phone book | 15 |
| 10. Phonebook Dialing(via handset) | 15 |
| 11. Handset out-of-range warning | 15 |
| 12. Call transfer | 15 |
| 13. Call transfer from handset to handset | 15 |
| 14. Conference call | 16 |
| 15. Handset Broadcasting(to all handsets) | 16 |
| 16. Caller ID system | 17 |
| 17. To view caller ID on handset | 17 |
| 18. Making call by caller ID | 17 |
| 19. Deleting caller ID | 18 |
| 20. Deleting all caller ID | 18 |
| 21. Call waiting | 18 |
| Chapter 4 Other functions | 19 |
| 1. number input | 19 |
| 2. letter input | 19 |
| Chapter5 Normal matters and keys | 19 |
| Chapter6 Secure Information | 20 |

Preface

1. function


- Digital cordless phone and cordless skype phone ,2 in 1, transferring between receiving calls and answering calls freely
- Making skypin/skypeout calls, without any fee
- Reviewing the skype users , for makong calls or holding skype conference
- 2.4G Digital spread spectrum technology, with multiple handsets
- When user want to make SkypeOut call (the internet call to normal telephone number in the world) for saving money, he/she can use skype phone to make SkypeOut. The SkypeOut is subjected to top up on SkypeOut credit.
- Power supply: Talking time 5 hours/ Standby time: 24 hour
- Language: Chinese, English, Spanish

2. Features

- Work with SkypeIn (to receive call from PSTN)
- skype incoming call/PSTN incoming call instruction tone while the phone is under talking.
- Answering the calls by any key, except "UP,DOWN"
- Redial: skype or cordless skype phone 36288
- Redial calls: 10 records
- Coming calls: 50 records
- Calls transfer between the handsets
- Hold on the skype/PSTN coming calls
- Skype incoming message remind sound
- Checking the skypeout balance

chapter 1 installation and setting

1. Physical characteristics

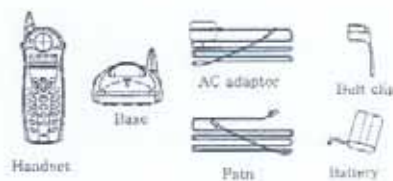

2. System requirement


1. Window XP, 2000, 2003
2. 400MHz processor
3. 128MB RAM
4. CD-ROM driver
5. 2.0 USB port
6. internet connection/ADSL or broadband cable

3. Tips to the first users


If you bought the phone system with extra independent handset, before you use the phone system, you must charge the HANDSET for 12 hours. Failure to do so will require more frequent recharging of the BATTERY PACK.

1. Place the HANDSET on the BASE unit or on Charging Cradle for 12 hours.
2. After 12 hours, lift the HANDSET from Base unit
You will see " NO ID " on LCD screen. Please follow Handset Registration (refer to Register Handset to Base).
3. To plug in USB cable into USB port on PC and the phone USB port
4. Download EPhone software by the CD-ROM with PC.
5. After download EPhone software, PC will show the icon (red icon is online, white icon is offline): Blossom Skype Online at table screen.

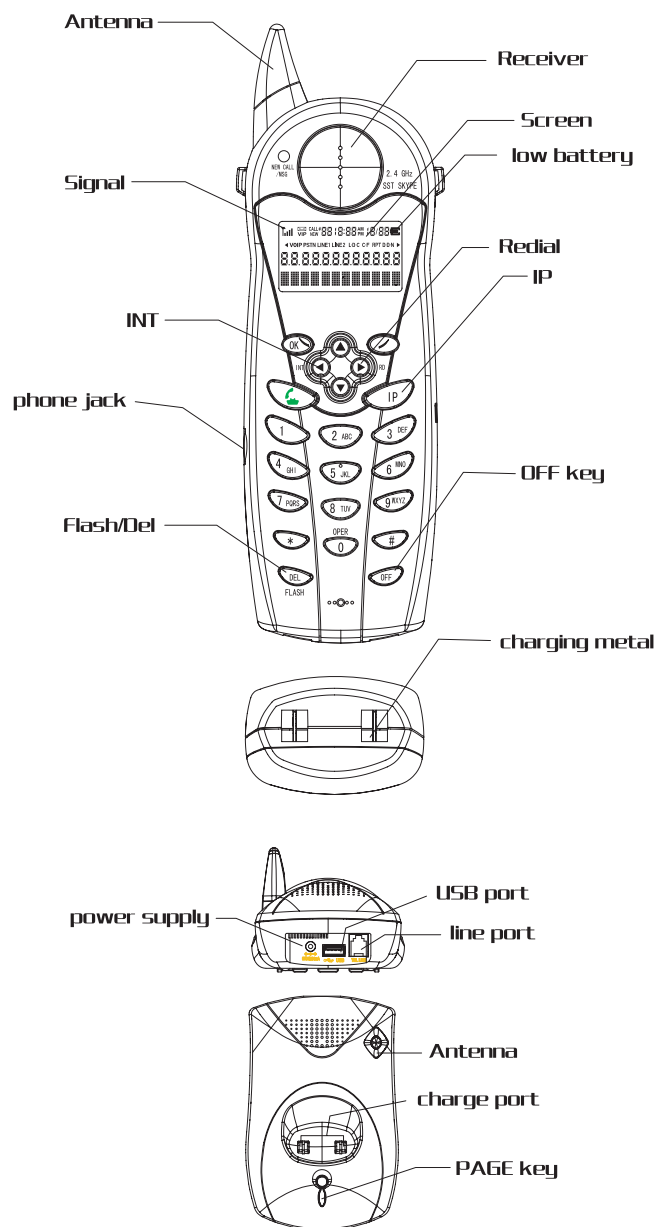

4. outlook description



5. key pads introduction



| Key | Function |
|---|---|
|  | To get PSTN dialing tone under standby mode. |
| IP | To dial/answer skype calls |
| ◀ | PSTN/skype intercom |
| ▶ | PSTN/skype Redial |
| OK \ | Left soft key, to enter into base/system Menu under standby mode |
| / | Right soft key, to enter into handset Menu |
| Flash/Del | Dual key, PSTN call transfer, delete function |
| OFF | To exit or return to the previous display |
| ▲ | To scroll Menu |
| ▼ | To scroll Menu |
| INT ▲ | Dual key, Volume control selection while selecting ringing type from Menu function. Intercom under standby mode |
| ▼ RD | Dual key, Volume control selection while selecting ringing type from Menu function Intercom under standby mode |

6. the installation of software and hardware

1. installation of the handset battery
2. installation of software and hardware
 - A. connecting the PSTN cable to the base TEL LINE
 - B. connecting the base to PC by USB cable(A/A)
 - C. installing the Ephone in the PC
 - a) in the Ephone file , choosing  , double click 
 - b) into the interface, as picture 1(Ô)



picture 1


- c) Ephone ico  existing in the desktop after the installation
- D. double clicking TJ Ephone program, the Ephone ico  appearing in the right-down corner , this operation succeeds when the ico turn to red.

7. handset setting


1) menu function

Skype Cordless Phone handset Menu tree:


(Press IP button to enter skype menu)

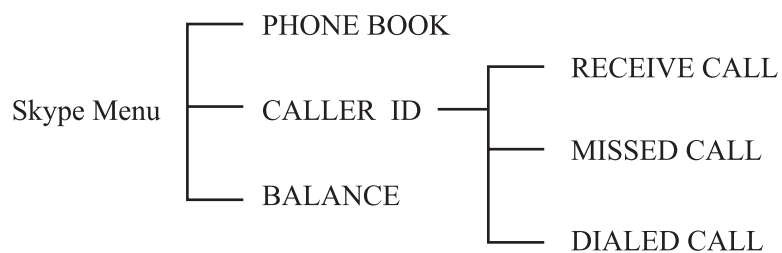

2.4G digital Dual Cordless handset - Normal phone menu tree

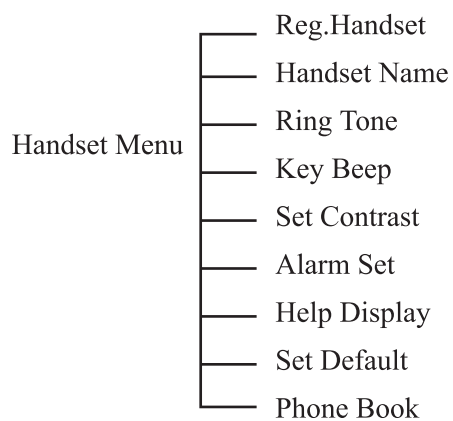

Base (System) Menu (2.4G digital system Menu):
(Press OK button at handset to base/system)

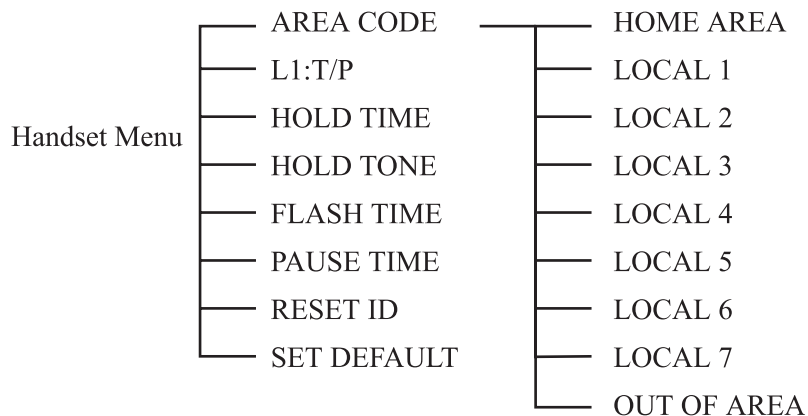

2) preparing for use

(1) REGHANDSET

OPERATION STEPS:

- A. after installing the battery, the screen shows:NO ID MENU , press Right softkey , until thescreen shows:OK=CONF IRM, press OK button, "REG.HANDSET" shows in the screen.
- B. when the screen shows: REG.HANDSET ,press OK button, the screen shows:HS NO, to input wanted handset number by 2-digits, press OK button to confirm the handset number.
- C. the handset screen shows 'WAIT CONF ' (Waiting registration Confirmation).
At this moment, Base press and hold down PAGE button for a few seconds (long key) until base LED glint.
- D. After 2 - 3 seconds, the handset will come to display the registered number and emit out three tones indicating the handset registration is successful.

(2) SET HANDSET NAME

OPERATION STEPS:

- A. Under standby mode, press Right softkey ,use UP or DOWN button to locate :HANDSET NAME

- B. press OK button, the display shows registered handset number on first line, and the blinking cursor " - " stay at the second line ready for input the handset name.
- C .input the wanted name by the digit keys
- D. Press OK button to save the name.

(3)SET RING TONE

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate RING TONE ,press OK button.
- B. The screen shows :RING TONE, press OK button
- C. The screen shows " RING TONE= 01 ". Scroll UP or DOWN to select the different tone, 4 types of tones for choosing
- D .adjust the ring tone by Left softkey or Right softkey
- E. pres OK button to save the tone.
- F. A long-beep sound emit out to confirm the setting.
- G. Press OFF button to go back to standby mode.

(4) KEY BEEP VOL

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate KEY BEEP VOL ,press OK button.
- B. The screen shows : KEY BEEP VOL, press OK button
- C . KEY=ON, or KEY=OFF for choice, on means turn on , off means turn off
- D. press OK button again to confirm.

(5) SET CONTRAST

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate:SET CONTRAST

- B. the screen shows SET CONTRAST, . press OK button, then shows CONTRAST=00, to adjust the brightness of display contract by pressing UP or DOWN (scale level 01 - 08, the bigger number is darker).
- C. press OK button again to confirm

(6) ALARM SET

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate: ALARM SET
- B. the screen shows SET CONTRAST, . press OK button, "ENTERm TIME" shows in the screen (the time format is 00-00)
- C. how to set the alarm time. As you want to set at 7:30 AM, first input the number ,like "07 30", then use UP or DOWN button to choose A(am) or P(pm)
- D. press OK button to confirm

(7) HELP DISPLAY

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate: HELP DISPLAY
- B. when the screen shows HELP DISPLAY, . press OK button, the screen shows DISPLAY ON OR DISPLAY OFF
- C. use UP or DOWN button to select 01 DISPLAY ON or 02 DISPLAY OFF, press OK to save it.
- D. press OK again to confirm

To turn the display ON, then press OFF button and Right softkey, the screen shows OK=CONFIRM, !=PREVIOUS , !=NEXT, OFF=CANCEL, at last will turn back to REGHANDSET

To turn the display OFF, then press OFF button and Right softkey, the screen will turn to REGHANDSET.

(8)SET DEFAULT

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate:SET DEFAULT
- B. the screen shows SET DEFAULT, . press OK button, the system asking user by the display " SET DEFAULT?"
- C. OK button to confirm, or OFF button to quit.

(9)PHONE BOOK

OPERATION STEPS:

- A. Under standby mode, press Right softkey use UP or DOWN button to locate:PHONE BOOK
- B. the screen shows SET DEFAULT, . press OK button, 20 records of the phone book to each handset for your choice
- C. OK button to confirm

chapter 2 Cordless SKYPE operation

1. placing skype calls

- 1) press IP button into PHONE BOOK
- 2) scroll UP and DOWN to select: 01 PHONE BOOK 02 RECEIVING CALLS-SK 03 BALANCE-SK
- 3) press OK button to choose 01 ,the screen showing the first contact
- 4) scroll UP and DOWN to review
- 5) press IP button to make calls
- 6) OFF button to quit

2. SET SPEED-DIAL

- 1) defining numbers to the contacts
right click the mouse , select assigning speed-dial, input the wanted number

2) how to dial

inputting the wanted digits, then IP button to connect

3 .making skypeout calls

- 1) making international calls, the ways as the normal phone: international code----home code----number
- 2) press IP button , the system will auto-dial
- 3) OFF button to quit

4. answering calls

- 1) when calls coming, the system will remind you with a sound
- 2) any key to answer(except UP\DOWN key)
- 3) OFF button to quit

5 .hold on the PSTN calls to answer the skype calls

- 1) press L1 button into the PSTN mode
- 2) the screen shows : HS##HOLD
- 3) when user is talking with PSTN outside line, and the skype call comes in. The user may hear the instruction tone from Dual cordless handset.
- 4) User to hold the PSTN line by pressing softkey, then he can hear the skype ringing tone.
- 5) press PC button to answer skype call
- 6) To end the skype call by pressing OFF button when finish the skype conversation
- 7) Press L1 button to retrieve PSTN call which was put on hold

6. hold on the skype calls to answer the PSTN calls

- 1) press IP button into the skype mode
- 2) the screen shows : HS##HOLD
- 3) when user is talking with skype, and the PSTN outside call comes in. The user may hear the instruction tone (which is different instruction tone with skype) from Dual cordless handset
- 4) User to hold the skype by pressing softkey, then he can hear the PSTN