



# Face Layout and Status lamp contents

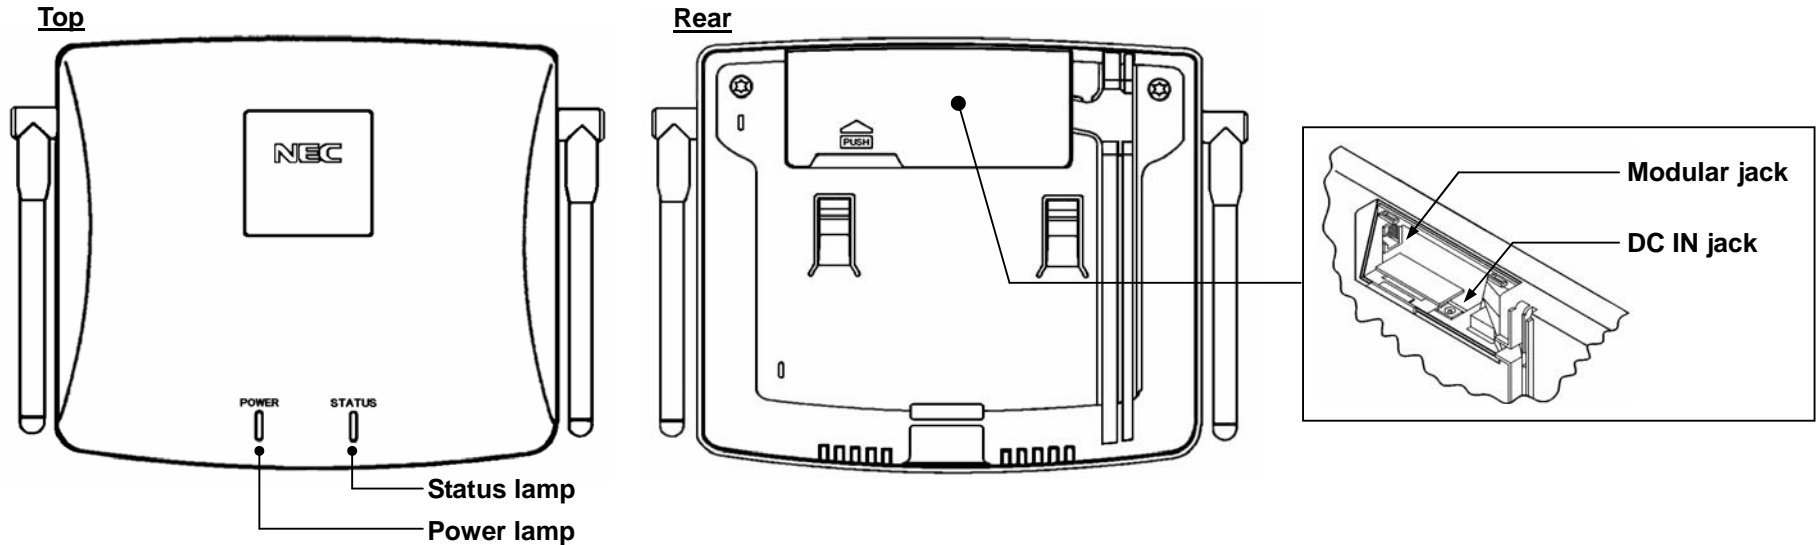


## Status lamp contents

※ One cycle is 2 seconds.

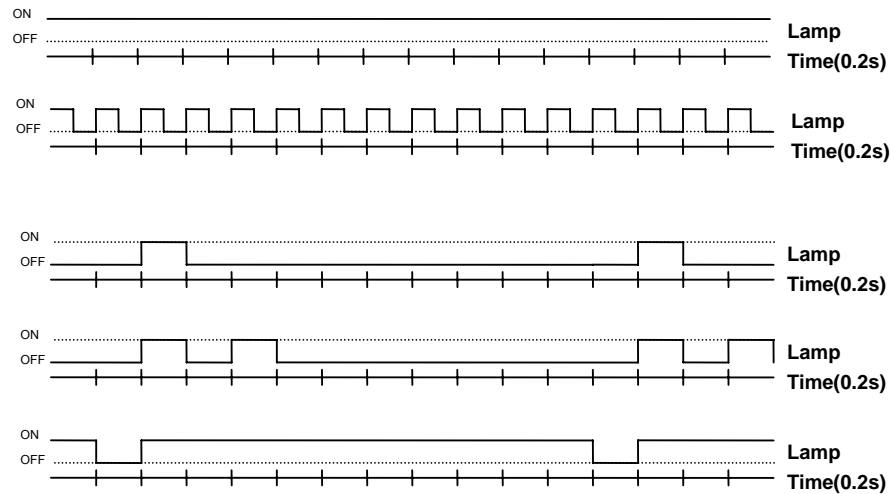

## How to open the connector cover

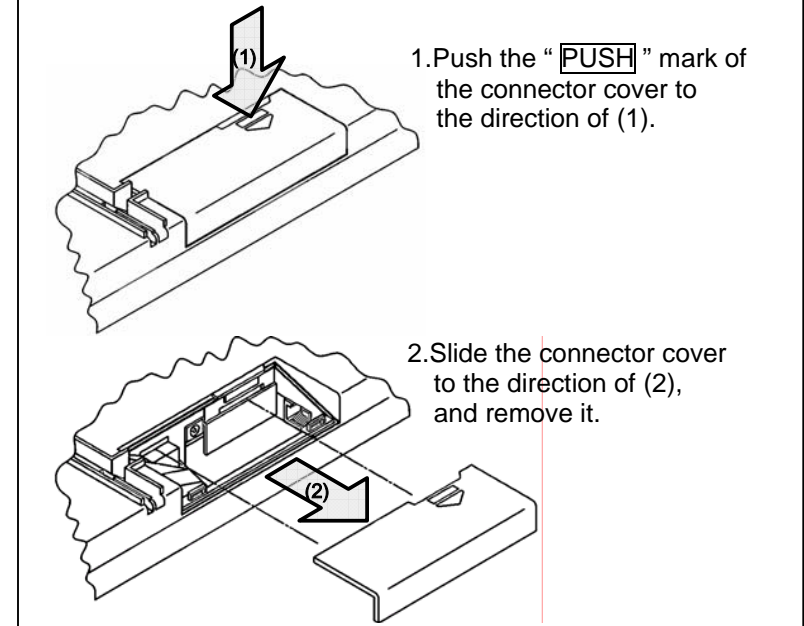

1.Lamp off

Line is not open. (This status contains that setting up ZT.)

2.Lamp on

2-1.No flicker. (This status is that ZT condition is stand by.)

2-2.The flicker cycle is 0.1 seconds. (This status is that ZT can't stand by.)

2-3. The flicker cycle is 0.2 seconds on by standard.

This status is the number of ZT line used. (The number of flicker Indicates the number of ZT line used.)

- 1 line used.

- 2 lines used.

- 3 lines used. (All ZT lines are busy.)