

Features & Functions

This set complies as of date of manufacture with FCC rules and regulations Part 15, Subpart C

Channel Button

Press the channel button to change the broadcast frequency, The VRFM9 remembers the last broadcast frequency.

Previous Track & Volume Decrease

(USB Flash Memory & SD Card)

Press this button once to return to the previous file. Press and hold to decrease the volume.

SD Memory Card Slot



USB Port



Supplied Cable



Liquid Crystal Display

Next Track & Volume Increase

(USB Flash Memory & SD Card)


Press this button once to advance to the next file. Press and hold to increase the volume.

Play/Pause/Shuffle

(USB Flash Memory & SD Card)

Press this button once to start playing an MP3/WMA file. Press it again to pause. Press and hold to enter shuffle mode. In shuffle mode, files will be played at random. The mode icon will have an "S" instead of an "A".

Input Jack

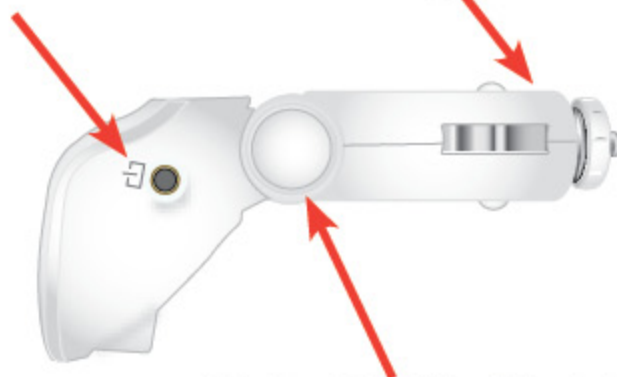

12 Volt Adaptor End

Six Position Flexible Joint



Extra .5 Amp Fuse

Operation

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Set Up

1. Insert the 12 Volt adaptor end of the FM-23 into your vehicle's cigarette lighter receptacle or power port. You will see the screen as shown in Fig. 3

2. Tune your FM radio to one of the following pre-set FM frequencies used by the FM-23.

88.1, 88.3, 88.5, 88.7, 88.9, 89.1, 106.7,

106.9, 107.1, 107.3, 107.5, 107.7, 107.9

Make sure the pre-set FM frequency you choose is not being used by any local radio stations.

3. Use the Channel Button to set the FM-23's broadcast frequency to match the frequency you have set on your radio.

Pre-set Broadcast Frequency

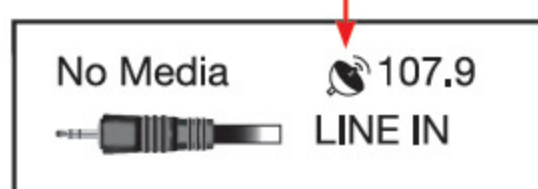


Fig. 3

SD Memory Card

1. Follow the instructions in the "Set Up" section of this manual.

2. Insert the SD Memory card into the SD card slot of the FM-23.

3. The LCD will display the screen shown in Fig. 4. Press the ►|| button once to start playing an MP3/WMA file. Press again to pause. Press and hold to enter shuffle mode. In shuffle mode, files will be played at random. The mode icon will have an "S" instead of an "A".

4. Press the ►► button once to advance to the next file. Press and hold the ►► button to increase the volume.

5. Press the ◀◀ button once to go to the previous file. Press and hold the ◀◀ button to decrease the volume.

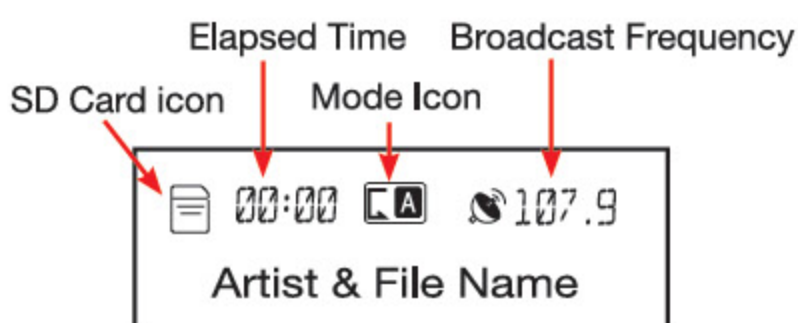
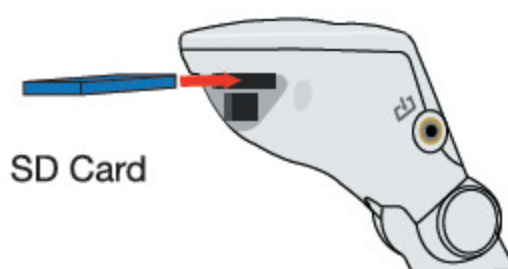


Fig. 4

USB Flash Memory

1. Follow the instructions in the "Set Up" section of this manual.

2. Insert the USB Memory into the USB port of the FM-23.

3. The LCD will display the screen shown in Fig. 5. Press the ►|| button once to start playing an MP3/WMA file. Press again to pause. Press and hold to enter shuffle mode. In shuffle mode, files will be played at random. The mode icon will have an "S" instead of an "A".

4. Press the ►► button once to advance to the next file. Press and hold the ►► button to increase the volume.

5. Press the ◀◀ button once to go to the previous file. Press and hold the ◀◀ button to decrease the volume.

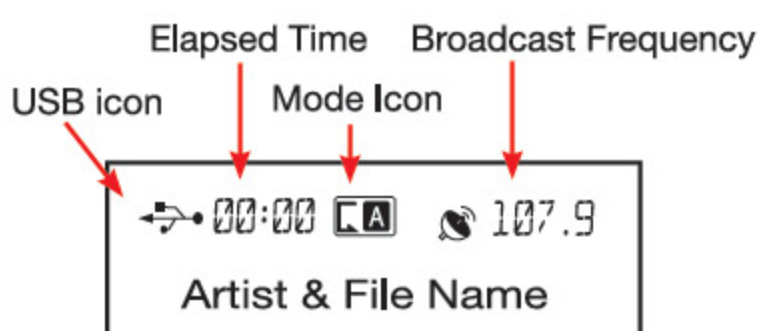
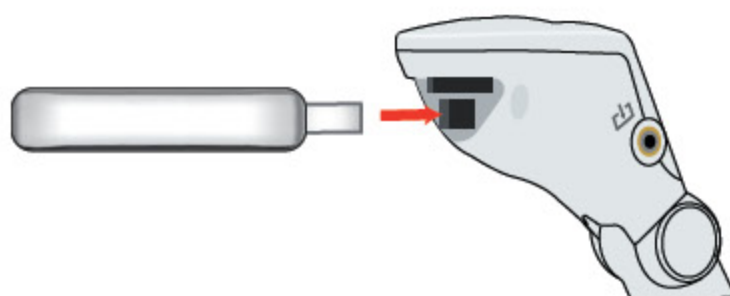


Fig. 5

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.